



---

[Home](#) » [Mediacom](#) » **mediacom M-SP1AZ46P SmartPad 10 Eclipse Tablet User Guide** 

## Contents [ [hide](#) ]

- [1 mediacom M-SP1AZ46P SmartPad 10 Eclipse Tablet](#)
- [2 Safety precautions](#)
- [3 About your device](#)
- [4 Switching on/off](#)
- [5 Unlocking the screen](#)
- [6 Main screen](#)
- [7 Restarting the device](#)
- [8 Factory reset](#)
- [9 Contents](#)
- [10 Charging the battery](#)
- [11 Wireless networks](#)
- [12 Documents / Resources](#)
  - [12.1 References](#)
- [13 Related Posts](#)

# mediacom

## mediacom M-SP1AZ46P SmartPad 10 Eclipse Tablet



## Safety precautions


For safe and efficient operation of your Tablet PC, please observe the following rules:

- Keep the Tablet away from extreme heat, cold, moisture and dust.
- Do not spill any liquids on the Tablet PC as it may damage the device or cause a fire.
- Do not use liquids and chemical cleaners for cleaning the Tablet PC.
- Do not insert any objects in the Tablet air vents or other slots.
- Do not keep the device near magnetic sources, heaters, microwave ovens, heating up kitchen appliances, or in high-pressure containers, as it may cause the battery leaking, the device to overheat and inflammation.
- Do not disassemble the Tablet PC, only a certified service technician should perform repairs on your computer.
- Use only the AC adapters, power cords and batteries that are approved for use with this device. Use of another type of battery or AC adapter may cause a fire or an explosion.

**Note:** The device pictures, as well as data on the device appearance, color and design features, are given in the manual for reference only. Mediacom reserves the right to change the appearance and technical parameters of its products without prior notice.

## About your device

(Picture 1)

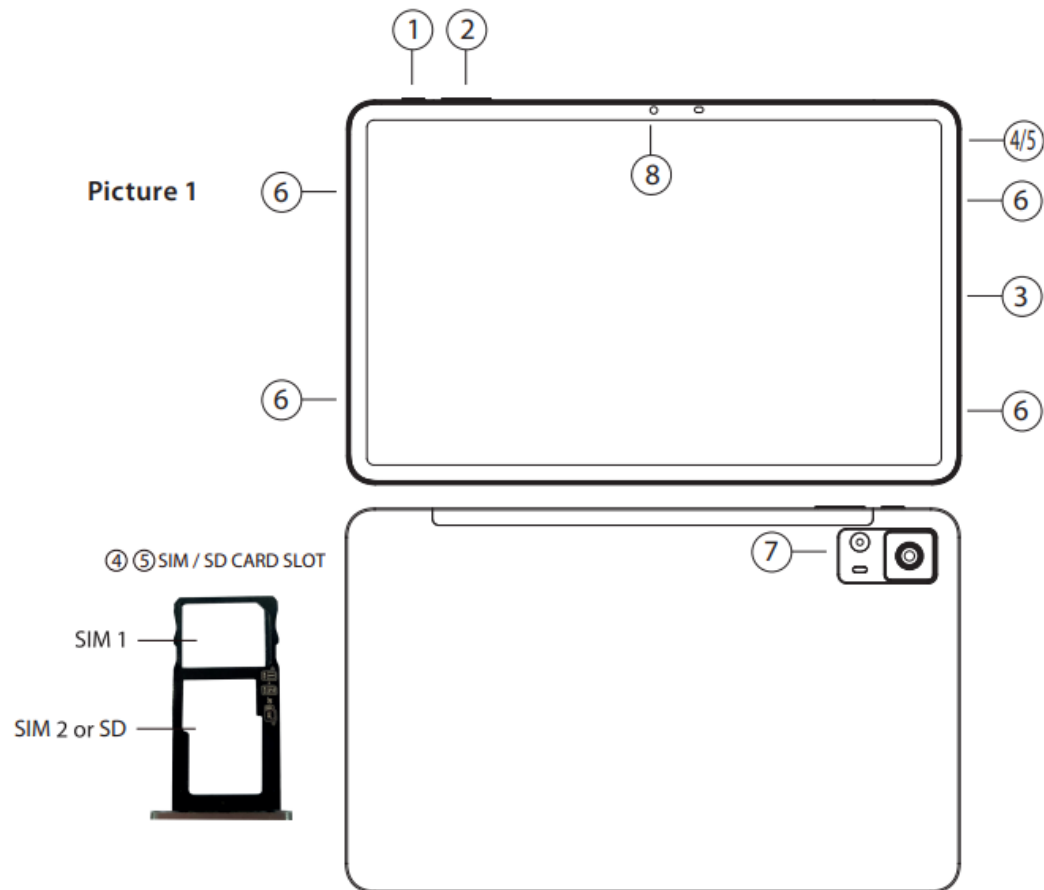

1. Power button
2. Volume Buttons
3. USB Type-C port
4. SIM card slot
5. Micro SD card slot
6. Speaker
7. Headphones
8. Rear camera
9. Front camera

## Switching on/off

To switch on the Tablet PC, press and hold the Power button. When the startup window appears, release the button. The system initialization may take several minutes. Please wait patiently.

To switch off the tablet PC, press and hold the Power button. When the “Power off” message appears, release the button. Touch the message, then press OK.


**Recommendation:** To save battery charge, the device is set to sleep mode: the screen

is locked and sensor functions become inactive (in accordance with the settings of screen lock time). To “wake up” the device, short-press the power button.

## Unlocking the screen

(Picture 2)

Picture 2

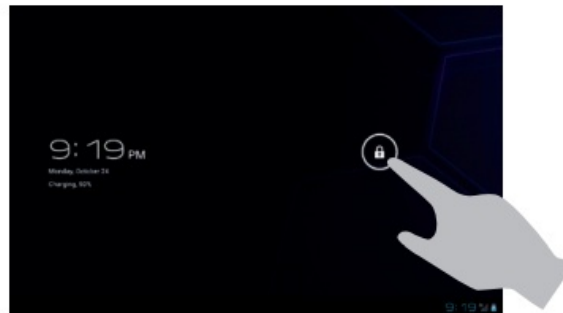

If you do not use the screen during certain period of time, the screen will be locked. To unlock the screen, press the power button once and drag “Lock” image right.

## Main screen

(Picture 3)



1. Voice search (if available)
2. Application menu
3. Battery charge indicator
4. Time
5. Connected to PC
6. Recently used applications

7. Home
8. Back
9. Google search
10. Clock
11. Standard application button

## **Restarting the device**

If the screen does not respond to key press or tap, press the reset button (located in the hole) using any thin object (paper clip, pin, etc.) to restart your Tablet PC or hold the power button for long time

## **Factory reset**

To delete all data and restore your Tablet PC to factory defaults, touch Settings > Recovery and reset; touch the menu item Reset > Reset to factory defaults.

## **Contents**

Tablet, Power adapter AC / DC, Quick Guide

Imported and distributed by Datamatic S.p.A. Via Agordat, 34 – 20127 – Milano – Italy  
[www.mediacomeurope.it](http://www.mediacomeurope.it)

## **Charging the battery**

The device is provided with a built-in rechargeable battery. There is no need of supplemental batteries. Important: The battery must be charged before using it for the first time. When related Icon or warning message alerts you please charge the battery using the proper adapter (do not use a different adapter from the original one).

## **Wireless networks**

Prior to starting an Internet application, activate Wi-Fi connection and set up the Wi-Fi network.

Prior to starting an Internet application, activate Wi-Fi connection and set up the Wi-Fi

network.

1. Touch the icon “Applications” > “Settings” > “Wireless connections”. Select Wi-Fi item and set the switch to On position.
2. The device will automatically start searching for available networks and will display them on the right panel.
3. Select any network from the list and press “Connect “. If the network you selected is protected by the WEP protocol, type the security key, then press the “Connect” button. When the connection is successfully created, “Connected to” (Network name message will appear on the screen.

### **3G networks (Optional)**

Note that your Tablet PC will only have a signal if you are in an area covered by your 3G provider's 3G or EDGE network.

Before inserting a SIM card, you must turn off the device.

A Pin number may be requested. Enter the SIM card pin number.

Your device will attempt to connect to the 3G network of your provider.

**NOTE:** If your device does not connect to your 3G provider's network

1. Contact your 3G provider to obtain the connection parameters.
2. On your device, tap the Menu icon, then Settings.
3. Select Wireless & networks > Mobile networks > Select your operator. In Access Point Names, select the correct access point name and enter the exact connection parameters.


### **Bluetooth (Optional)**

Tap “Settings” > Select “Wireless connections/Bluetooth” > Tap “On” to switch on the Bluetooth function. The device will automatically search for available Bluetooth device. Select the Bluetooth device and start data transmission.

Imported and distributed by Datamatic S.p.A. Via Agordat, 34 – 20127 – Milano – Italy

[www.mediacomeurope.it](http://www.mediacomeurope.it)

# Documents / Resources

	<p><a href="#">mediacom M-SP1AZ46P SmartPad 10 Eclipse Tablet [pdf] User Guide</a></p> <p>M-SP1AZ46P, 4G Spreadtrum LTE-FDD, M-SP1AZ46P SmartPad 10 Eclipse Tablet, M-SP1AZ46P, SmartPad 10 Eclipse Tablet, Eclipse Tablet</p>
---	--

## References

- [User Manual](#)

## Related Posts



### [TCL TAB10S Tablet User Guide](#)

TCL TAB10S Tablet QUICK START GUIDE Power key  
Back Home Recent apps



### [TCL TAB10 FHD Tablet User Guide](#)

TAB10 FHD Tablet User Guide QUICK START GUIDE  
SAVE PAPER SAVE TREES PLEASE CONSIDER THE  
ENVIRONMENT BEFORE PRINTING...



### [PGYTECH V2 Tablet Holder User Guide](#)

PGYTECH V2 Tablet Holder Specification In the Box The  
Product Name: PGYTECH Tablet Holder V2 Product  
Model: P-GM-145...



### [Oase SOSGrow Fertilizer Tablet User Guide](#)

Oase SOSGrow Fertilizer Tablet QUICK FERTILIZER  
TABLET SOS for lush greenery For acute nutrient  
deficiency Takes effect within...

Mediacom

4G Spreadtrum LTE-FDD, Eclipse Tablet, M-SP1AZ46P, M-SP1AZ46P SmartPad 10 Eclipse Tablet, Mediacom, SmartPad 10 Eclipse Tablet

---

## Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

**Search:**

**Search**

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.