



MegaChef 4 Slice Toaster with 9 Preset Browning Settings User Manual

[Home](#) » [MegaChef](#) » MegaChef 4 Slice Toaster with 9 Preset Browning Settings User Manual 



4 Slice Toaster with 9 Preset Browning Settings User Manual



User Manual Carefully read all instructions before operation and save for future reference.
MADE IN CHINA

Contents

[1 IMPORTANT SAFEGUARDS](#)

[2 KNOWING YOUR MegaChef TOASTER](#)

[3 OPERATING YOUR MegaChef 4-SLICE TOASTER](#)

[4 DEFROST BUTTON](#)

[5 REHEAT FUNCTION](#)

[6 SPECIFICATION](#)

[7 TROUBLESHOOTING GUIDE](#)

[8 WARRANTY](#)

[9 Documents / Resources](#)

[10 Related Posts](#)

IMPORTANT SAFEGUARDS

- We at MegaChef are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind.
- This appliance is for household use only
- Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors.
- Do not leave the appliance unattended when in use.
- Close supervision is necessary when the appliance is used by or near children.
- Always use the appliance on a dry, leveled surface.
- Do not place this appliance on or near a hot gas or electric burner, or in a heated oven.
- Do not use this appliance near or below combustible materials like curtains or placemats.
- A fire may occur if the toaster is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not allow hot surfaces of the toaster to come in contact with countertops or tables.
- Do not touch hot surfaces. Appliance surfaces are hot during and after use. To prevent burns or personal injury, always use protective hot pads or oven mitts, or use handles and knobs where available.
- Do not let the cord hang over the edge of a table or counter, touch hot surfaces or become knotted.
- The use of accessory attachments is not recommended by MegaChef. May cause risk of injury to persons, fire or electric shock.
- Oversize foods, metal foil packages, or utensils must not be inserted into the toaster as they may cause a fire or risk of electric shock.
- Never add any food substance to the bread, bagel or any other item prior to toasting (such as butter, jelly, or marmalade). This may cause a fire as well as lead electrocution.
- Never operate the toaster on its side.
- Do not use the toaster without the slide-out crumb tray in place. Do not allow crumbs to build up in the crumb tray. Failure to clean the crumb tray regularly may result in a fire hazard.
- To turn off the appliance, switch off at the wall outlet and remove the plug.
- Unplug the unit from the wall outlet and allow to cool before attempting to dislodge food and before cleaning, covering or storing.
- Strictly follow the Care and Cleaning instructions.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a shock hazard.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

SHORT CORD INSTRUCTIONS


This appliance is fitted with a short power supply cord as a safety precaution to prevent personal injury or property damage resulting from pulling, tripping or becoming entangled with a longer cord. Do not allow children to use or be near this appliance without close adult supervision. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.

If an extension cord is used,

1. the marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance,
2. the cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

KNOWING YOUR MegaChef TOASTER

 Table.1

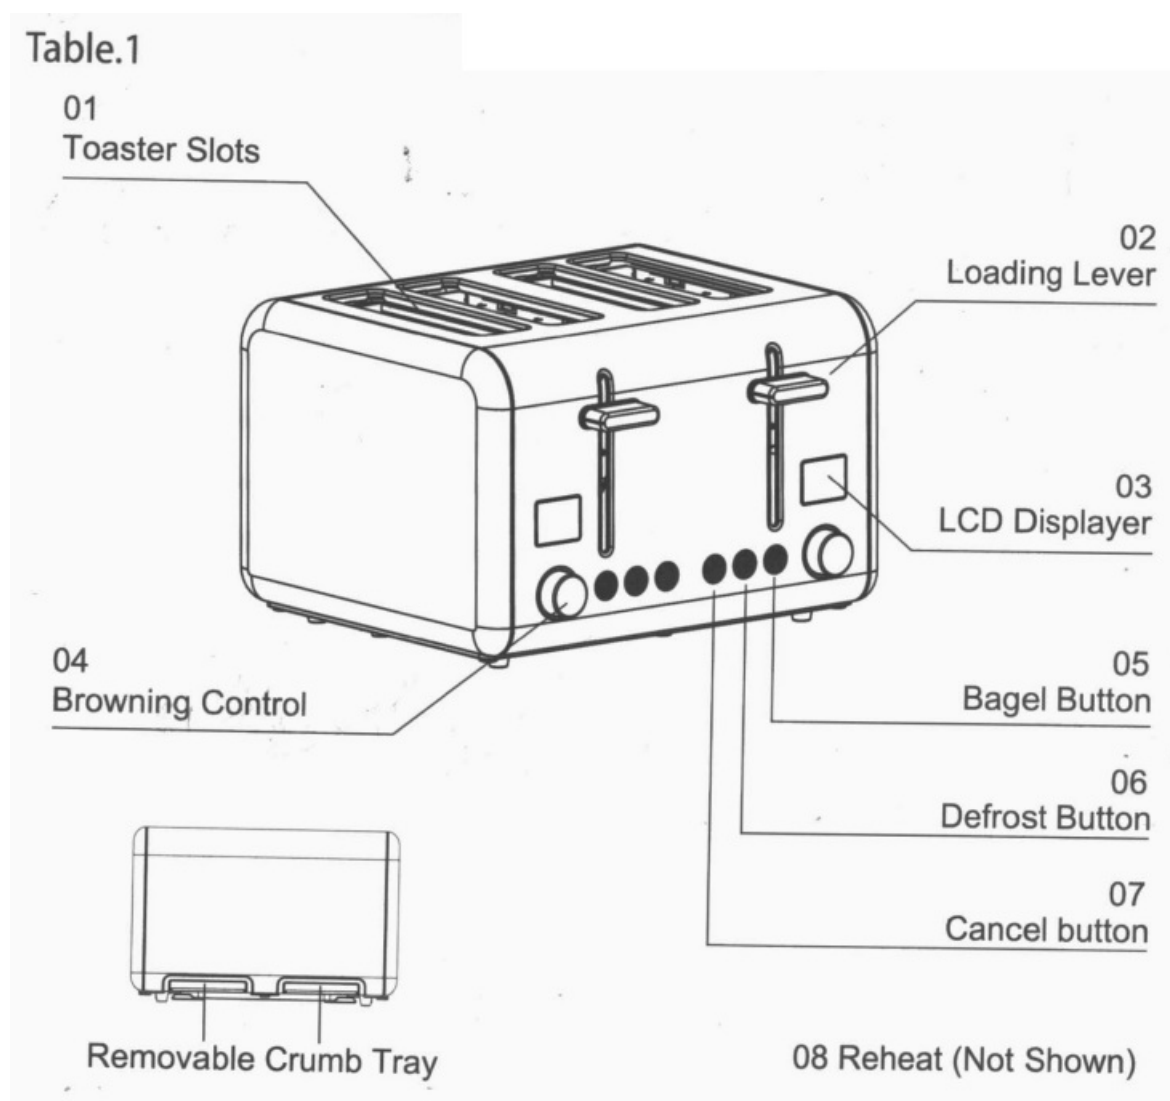

OPERATING YOUR MegaChef 4-SLICE TOASTER

 
BEFORE THE FIRST USE, YOU NEED TO

1. Remove all packaging materials including those that may be inside the toasting slots or toasting lever slots.
2. Wipe the exterior with a damp cloth. Dry thoroughly. Do not use abrasive cleaners.
3. Do not put the Toaster, cord, or plug in water.
4. Be sure the crumb tray is pushed all the way into the back of the Toaster and the toasting lever is in the UP position.
5. Unwrap the power cord from the cord storage area on the underside of the Toaster and plug it into a 120V AC outlet.
6. Turn the browning selector knob to (1), the lightest setting.
7. Lower both of the toasting levers until they lock in place. Operate without bread once or twice to burn off any manufacturing residue. You may notice an alight amount of smoke; this is normal and will stop as the heating elements continue to heat.

TOAST BUTTON

To toast bread

1. Insert slice(s) of bread.
2. Push down the lever to lower the carriage into the toasting chamber. Toast mode activated. The cancel button will illuminate white. See fig .1
3. Switch the knob to select desired toasting levels. See table.1

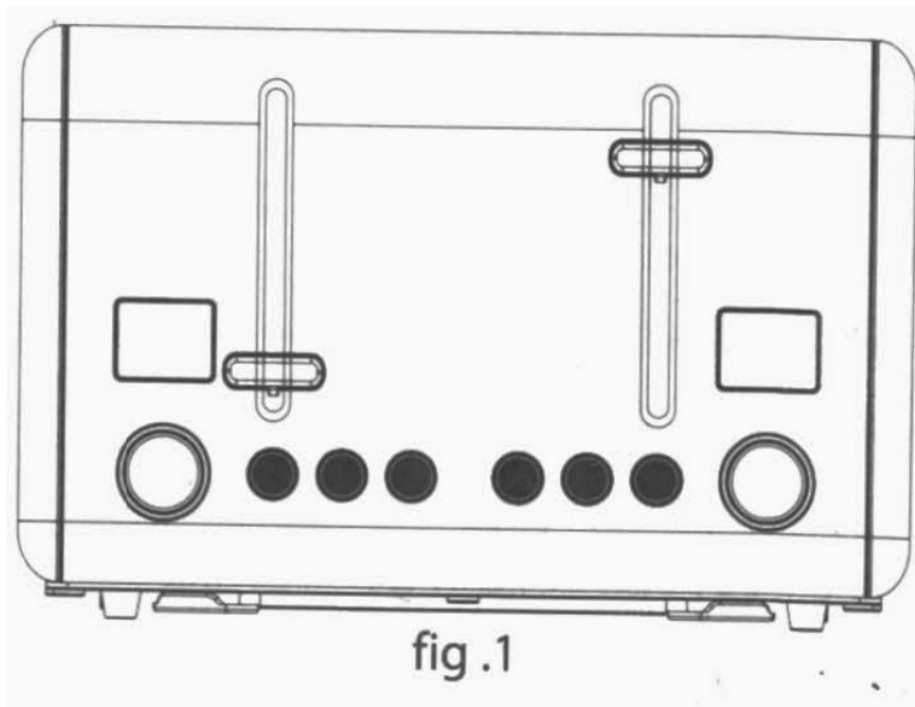

BROWNNESS LEVEL	SHADE
1	Light
2	Light
3	Medium
4	Medium
5	Medium
6	Medium
7	Medium
8	Dark
9	Dark

Table 1

 
4. After setting brownness, the countdown starts. Display showing brownness level and countdown time. See fig.2.



To stop toasting

When the toasting cycle is finished, the toast will be raised. If you wish to stop the cycle before it is finished, simply press the Cancel button.

BAGEL BUTTON

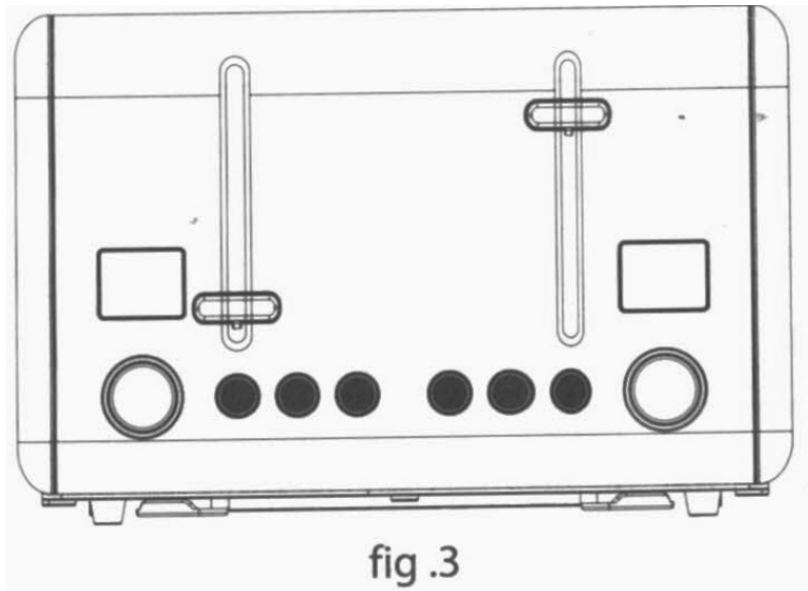

This feature activates additional heat to the central heating elements to cook the insides of your cut bagel without burning the outside.

To toast a bagel:

1. Insert halved bagels.
2. Push down the lever to lower the carriage into the toasting chamber. See fig.3

Note: The cut side of the bagel should always face toward the center of the toaster. Please refer to the icon on the top of the toaster.

3. Press the bagel button. Then select desired brownness by switching the knob.
4. The display will show the brownness level and countdown time. See fig.4.



To stop toasting

 
When the toasting cycle is finished, the toast will be raised. If you wish to stop the cycle before it is finished, simply press the cancel button.

DEFROST BUTTON

This feature activates the additional toasting time required to toast frozen bread. To toast frozen bread

1. Insert slice(s) of bread.

2. Push down the lever to lower the carriage into the toasting chamber. See fig.5

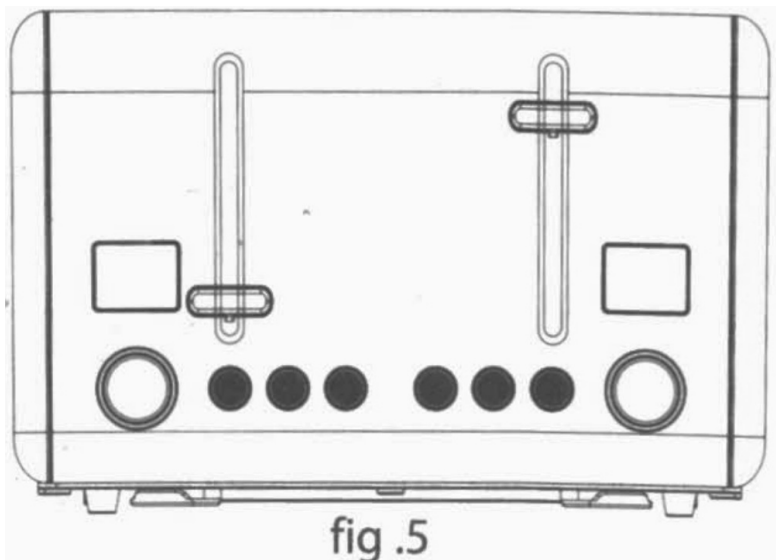

3. Press Defrost button. Then select desired brownness by switching the knob.
4. Countdown starts. The display will show the brownness level and countdown times. See fig.6



To toast frozen bagel

1. Insert slice(s) of bagel
2. Push down the lever to lower the carriage into the toasting chamber. See fig.5
3. Press Bagel and Defrost button. Then select desired brownness by switching the knob.
4. Countdown starts. The display will show the brownness level and countdown times. See fig.7



fig .7

To stop toasting

When the toasting cycle is finished, the toast will be raised. If you wish to stop the cycle before it is finished, simply press the Cancel button.

REHEAT FUNCTION

The reheat feature allows you to reheat bread without browning or toasting it. Insert slice(s) of bread or halved bagels.

To reheat a bread

1. Insert slice(s) of bread
2. Push down the lever to lower the carriage into the toasting chamber. See fig.9

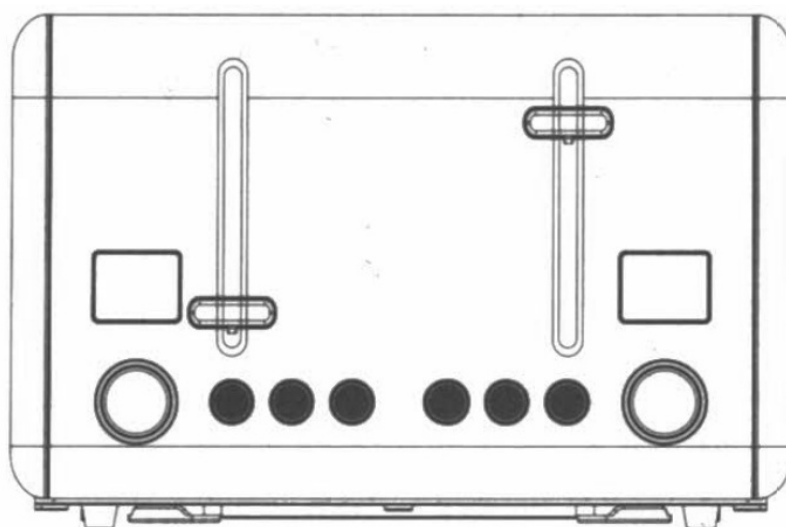 


fig .9

3. Select the Reheat function by switching the knob
4. Countdown starts. The display will show countdown times. See fig.8



fig .8

To reheat a bagel

1. Insert slice(s) of bread
2. Push down the lever to lower the carriage into the toasting chamber. See fig.9
3. Press the Bagel button and then select the Reheat function by switching the knob.
4. Countdown starts. The display will show countdown times. See fig.10



fig .10

To stop toasting

When the toasting cycle is finished, the toast will be raised. If you wish to stop the cycle before it is finished, simply press the Cancel button.

IMPORTANT:

Four-slice model has independent controls for each pair of slots allowing for toasting different food at a time. See fig.11

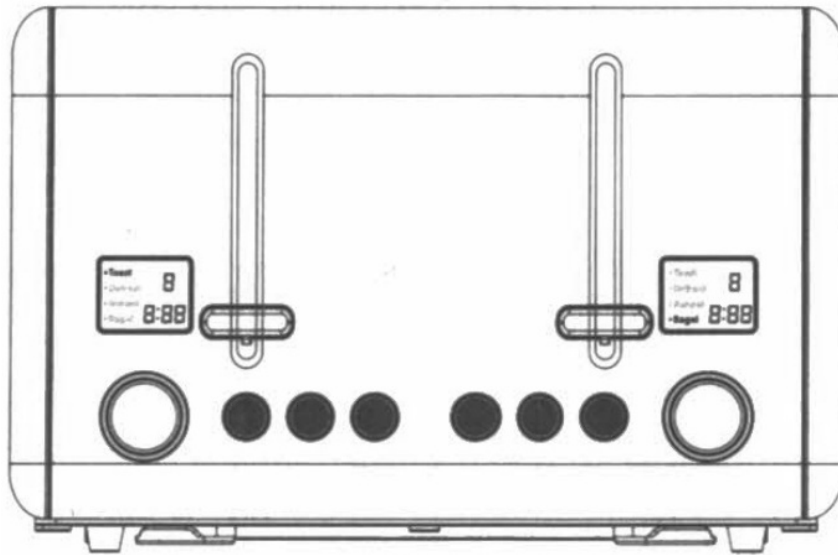 


fig .11

Special Notice:

1. After pulling down the lever, the function can be chosen and changed in 15s. When the time is past, the function is locked. Only the browning level can be adjusted.
2. When one toasting program is completed, the toaster will memorize the browning setting in 3 minutes. In this time frame, your next toasting will be starting at the last setting. Note: only support toast function.

TIPS

1. Toasting is a combination of cooking and drying the bread. Therefore, differences in moisture level from one bread to another can result in varying toasting times.
2. For slightly dry bread, use a lower setting than you normally would.
3. For very fresh bread or whole wheat bread, use a higher setting than normal.
4. Bread with very uneven surfaces (such as English muffins) will require a higher toast setting.
5. Thickly cut pieces of bread (including bagels) will take longer to toast, sometimes significantly longer, since more moisture must be evaporated from the bread before toasting can occur. Very thick pieces may require two cycles.
6. When toasting raisins or other fruit slices of bread, remove any loose raisins, etc. from the surface of the bread before putting it into the toaster. This will help prevent fruit pieces from falling into the toaster or sticking to the guide wires in the slot.
7. Before toasting bagels, slice each bagel into two equal halves.

NOTE:

 
1. The toasting lever will not lock into position unless the Toaster is plugged into a 120V AC electrical outlet.
2. Never operate the toaster without the crumb tray in place.
3. When toasting a single slice, the bread may be placed in any toasting slot.
4. To prevent a fire hazard, never place bread over the opening of the Toaster, always place the bread into the slots.
5. DO NOT change the browning selector knob selection during the toasting cycle. First press the CANCEL

button; then turn the browning selector knob to adjust the browning lever. Lower the toasting lever and toast until the desired toast color is achieved.


6. Never use a fork or sharp-edged utensil to remove toast, because that may damage the heating element or cause injury.

CLEANING YOUR MegaChef TOASTER

1. Always allow the toaster to cool completely before cleaning. Always unplug the toaster from the electrical outlet before cleaning.

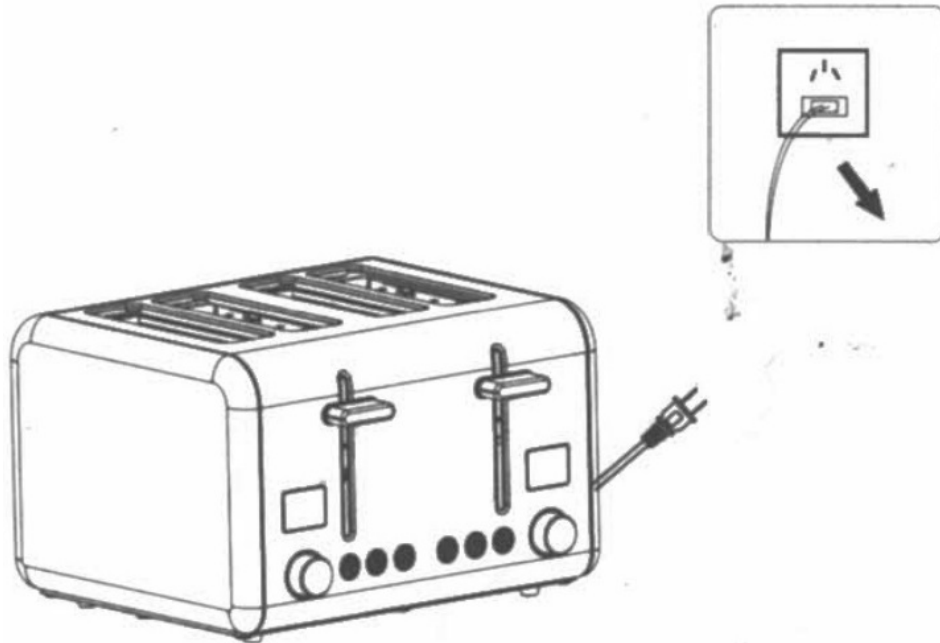

 
2. To remove crumbs, slide out the crumb tray and discard crumbs with a clean damp cloth and dry thoroughly. Replace it before using it again.

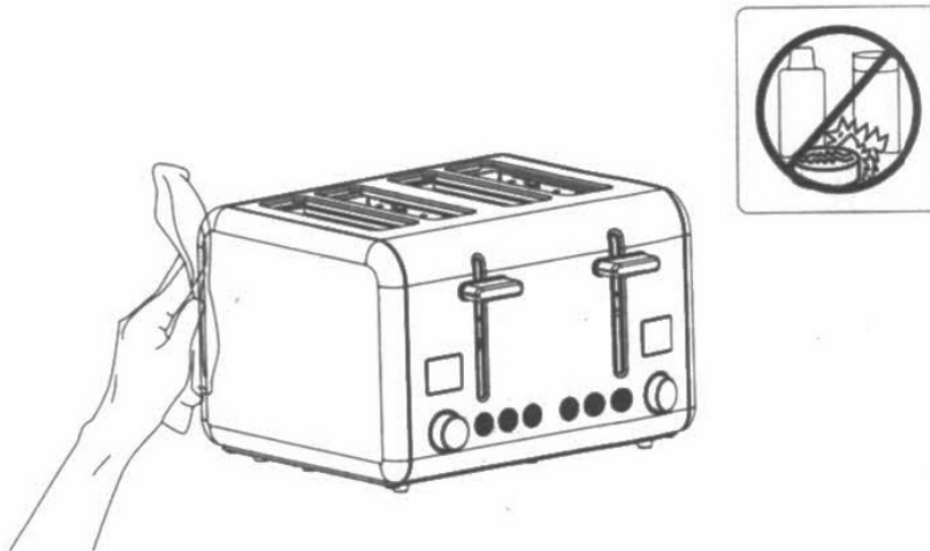

3. Do not use abrasive cleansers. Simply wipe the surface with a clean damp cloth and dry thoroughly.



 4. To remove any pieces of bread remaining in the toaster, turn the toaster upside down and gently shake it. Never insert any hard or sharp instruments into the slot, as this could damage the toaster and cause a safety hazard

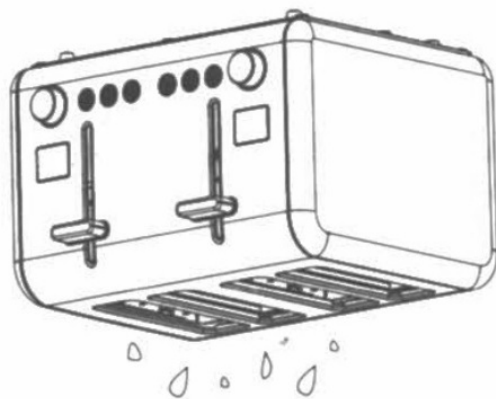

SPECIFICATION

Product name	MegaChef
Origin Country	China
Model	MG-TS2500, MG-TS2700
Power	1800W
Voltage	120V 60Hz
Material	Stainless Steel
Net weight	4.52 lbs.
Gross weight	5.29 lbs.
Gift box size	12.20x 11.81 x 7.83 inches

TROUBLESHOOTING GUIDE

Problem & Possible Reasons	Solutic
The toaster will not stay on • Outlet issues	• First make sure that the outlet works by plugging other devices into that
The toaster will not stay on • Power adjustment	• The toaster's browning dial might be on too low of a setting to activate t
The toasting lever won't stay down • Power source	• Make sure that the toaster is plugged into a working outlet.
The toasting lever won't stay down • Power adjustment	• The toaster's browning dial might be on too low of a setting to activate t
Toast won't pop up after the toasting is complete • Floppy bread	• If the bread won't come back up. try using a different bread that is mayk
Constant burning smell • Crumb Tray	• Heck on the bottom of the toaster for a metal tab to release the crumb t pside down and, very gently. shaking the crumbs out.
Constant burning smell • Stuck debris	• If there are bread crumbs on the coils themselves. ensure that the toast out of the heating element.

WARRANTY

90 Day Limited Product Warranty

All MegaChef products have 90 Day limited product warranty. valid from the date of purchase. Should your MegaChef product have a defect in product material or workmanship within the warranty period? MegaChef will arrange to have your original product returned to us. and either deliver an identical or comparable replacement to you, free of charge or apply such other remedy as described below.

Please contact MegaChef at 424-543-1628 or warranty@megaghef.com for all support questions and troubleshooting needs. Please be able to provide your order number when calling or writing for faster and quicker service.

ENVIRONMENTAL NOTICE



This marking indicates that this product should not be disposed of with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

Documents / Resources

	MegaChef 4 Slice Toaster with 9 Preset Browning Settings [pdf] User Manual 4 Slice Toaster with 9 Preset Browning Settings, 4 Slice Toaster, 4 Slice Toaster Maker Machine
--	--