

MEGATEK CP27BR Portable CD Player with Bluetooth



MEGATEK CP27BR Portable CD Player with Bluetooth User Manual

[Home](#) » [MegaTek](#) » MEGATEK CP27BR Portable CD Player with Bluetooth User Manual 

Contents

- [1 MEGATEK CP27BR Portable CD Player with Bluetooth](#)
- [2 Product Information](#)
- [3 Product Introduction](#)
- [4 FAQs](#)
- [5 Safety information](#)
- [6 Features](#)
- [7 What's in the box](#)
- [8 Overview](#)
- [9 Display](#)
- [10 Charge the battery](#)
- [11 Basic operations](#)
- [12 Playing CDs](#)
- [13 Troubleshooting](#)
- [14 Specifications](#)
- [15 FCC](#)
- [16 warranty](#)
- [17 Documents / Resources](#)
 - [17.1 References](#)
- [18 Related Posts](#)

MEGATEK

MEGATEK CP27BR Portable CD Player with Bluetooth



Product Information

- **Portable CD Player with Bluetooth**

- **Model:** CP27BR
- The Portable CD Player with Bluetooth is a versatile audio device that allows you to enjoy your favorite music on the go.
- It combines the convenience of a portable CD player with the ability to connect wirelessly to your Bluetooth-enabled devices.

- **Specifications**

- **Model:** CP27BR
- **Bluetooth version:** 4.2
- **Supported CD formats:** CD, CD-R, CD-RW
- **Audio formats supported:** MP3, WMA
- **Power source:** 2 x AA batteries (not included) or DC 5V power adapter (not included)
- **Output power:** 2 x 1W
- **Dimensions:** 6.5 in x 6.5 in x 1.2 in
- **Weight:** 0.8 lbs

Product Introduction

1. Powering On/Off

- To power on the CD player, press and hold the power button until the display lights up. To power off, press and hold the power button again until the display turns off.

2. Playing CDs

- Insert a compatible CD into the CD player's tray.

- The CD will be automatically recognized and playback will start.
- Use the play/pause button to control playback and the skip forward/backward buttons to navigate between tracks.

3. Bluetooth Connectivity

- To connect your Bluetooth-enabled device, make sure Bluetooth is enabled on both the CD player and your device.
- On the CD player, press the Bluetooth button to enter pairing mode.
- On your device, search for available Bluetooth devices and select “CP27BR” to establish the connection.

4. Adjusting Volume

- Use the volume up/down buttons to adjust the volume level. The current volume level will be displayed on the screen.

5. Headphone Jack

- The CD player features a 3.5mm headphone jack for private listening. Simply plug in your headphones to enjoy your music without disturbing others.

6. Power Options

- The CD player can be powered by 2 x AA batteries (not included) or a DC 5V power adapter (not included).
- To use batteries, open the battery compartment and insert the batteries following the polarity markings.
- To use a power adapter, connect the adapter to the DC 5V input port on the CD player.

FAQs

- **Q: Can I use rechargeable batteries with this CD player?**
 - **A:** Yes, you can use rechargeable AA batteries with this CD player. Make sure to fully charge the batteries before use.
- **Q: Can I connect this CD player to a car stereo via Bluetooth?**
 - **A:** No, this CD player does not support Bluetooth connectivity with car stereos. It is designed for personal use with Bluetooth-enabled headphones or speakers.
- **Q: What should I do if the CD player freezes or stops responding?**
 - **A:** If the CD player becomes unresponsive, try resetting it by removing the batteries or disconnecting the power adapter for a few seconds. Then, power it on again.

Welcome

- Congratulations on your purchase of a high-quality Megatek product.
- Your MEGATEK CP27BR is designed for reliable and trouble-free performance, we wish you great satisfaction in using it.

Safety information

- To prevent fire or shock hazards, do not expose the unit to rain or moisture.
- To prevent fire, do not cover the ventilation of the apparatus with newspapers, tablecloths, curtains, etc. And don't place lighted candles on the apparatus.
- To prevent fire or shock hazards, do not place objects filled with liquids, such as vases, on the apparatus.

- INVISIBLE LASER RADIATION WHEN OPEN
- DO NOT STARE INTO THE BEAM OR VIEW DIRECTLY WITH OPTICAL INSTRUMENTS

Lens

- Keep the lens on the CD player clean and do not touch it. If you do so, the lens may be damaged and the CD player will not operate properly.

Discs

- Discs with non-standard shapes (e.g., heart, square, star) cannot be played on this CD player.
- Attempting to do so may damage the CD player. Do not use such discs.

Placement

- Do not leave the CD player in a location near heat sources, or in a place subject to direct sunlight, excessive dust or sand, moisture, rain, mechanical shock, unlevelled surface, or in a car with its windows closed.

Water

- Do not let water splash or drip onto your CD Player.

Power sources

- When you are not using the CD player for a long time, disconnect all power sources from the CD player.

Features

Your portable CD player Features

 
- Features CD player, USB player, Bluetooth/FM transmitter, and 3.5 mm headphone jack/line out
- Large LCD with blue backlight Built-in stereo speakers
- Compatible with CD-R, CD-RW, and MP3 CDs Portable and lightweight design

Battery playtime:


- **CD player:** up to 6 hours
- **USB player:** up to 8 hours
- **NOTES:** Playtime varies with volume, music content, etc.

What's in the box


Check and identify the contents of your package:

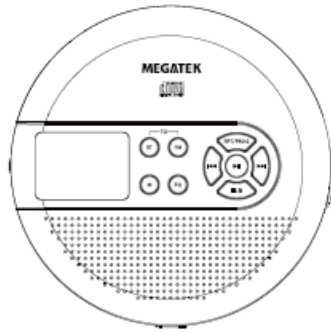


CD Player

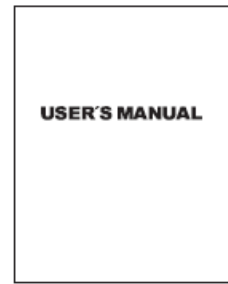 

User's Manual

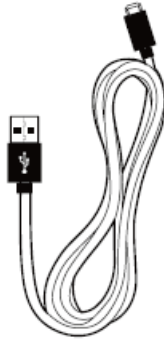 


USB-C Charging Cable

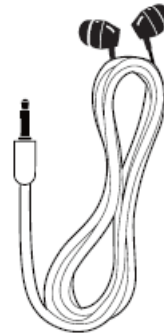 



Headphones

 Overview

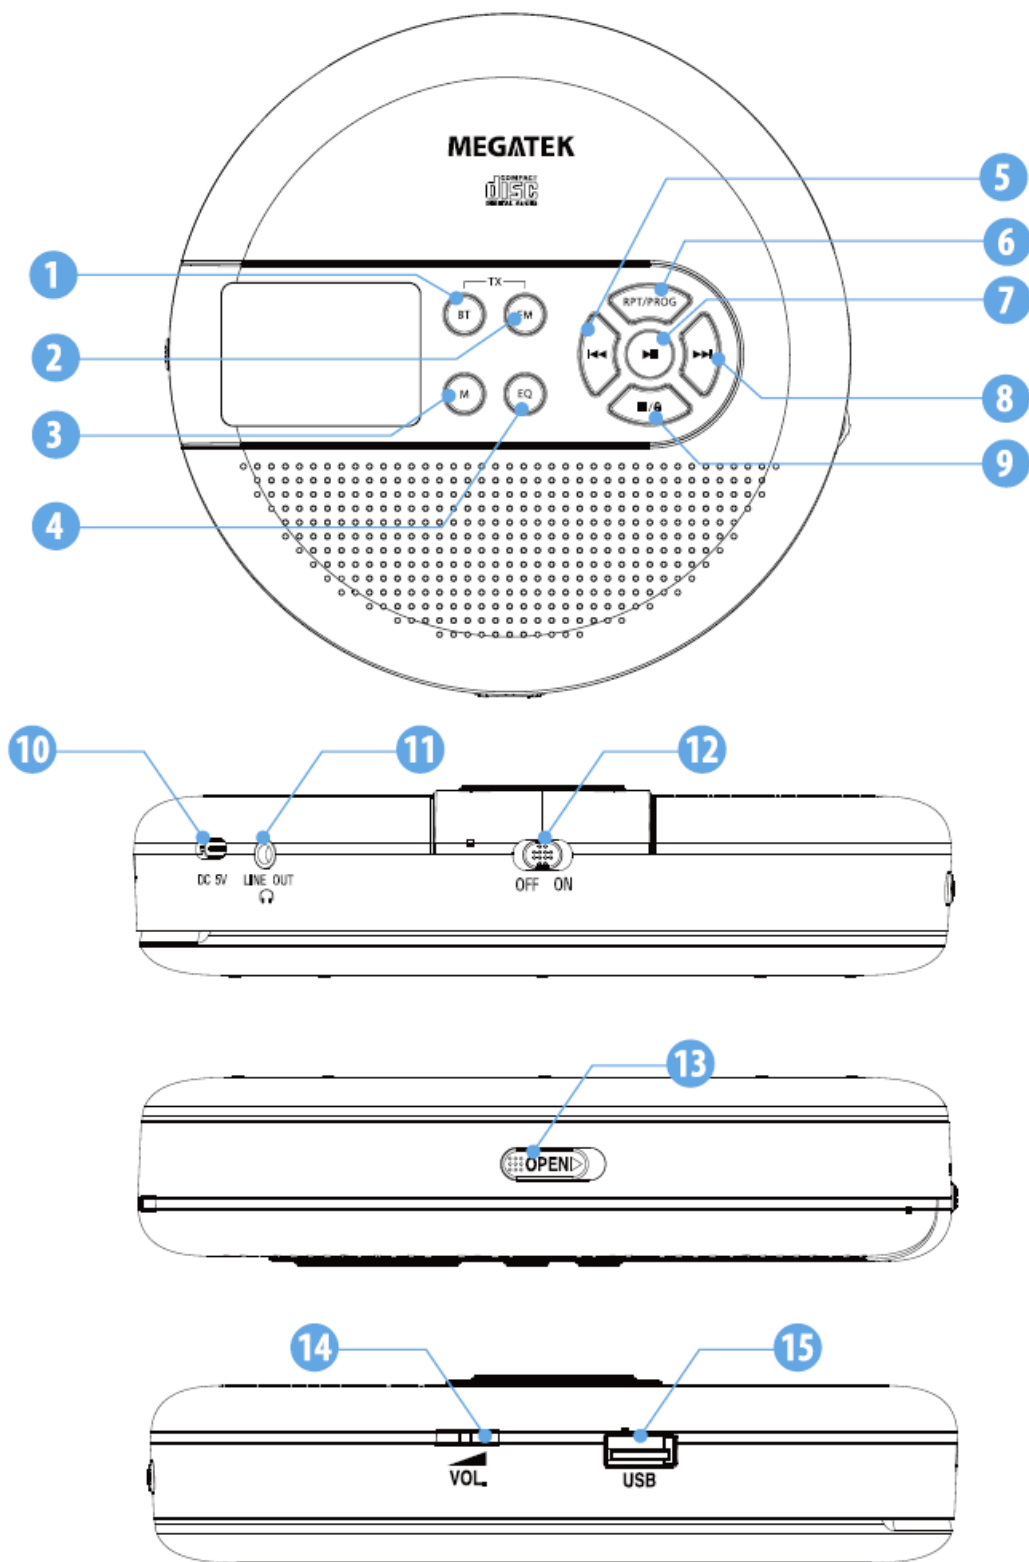
Overview of the CD player



#	ITEM	DESCRIPTION
1	Bluetooth TX (Transmitter)	Press to turn on/off Bluetooth transmitter.
2	FM	Press to turn on/off FM
3	M (Mode)	Press to select playback modes between CD player and USB player.
4	EQ (Equalizer)	Press to select a specific sound field (equalization). Selections include Flat, Pop, Jazz, Rock, Classic. <i>FLt POP JAZz RDC CLt</i>
5	⏮ (Previous)	Press to skip to the previous track, or press and hold to search backward.
6	REP/PROG	Press repeatedly to toggle between different playback options: repeat one, repeat all, repeat all in current folder, random playback, INTRO (introductory) playback, and repeat off. When CD or USB playback is stopped by pressing ■/⏏ button, press this button to program the player to play up to 99 tracks in your favorite order.
7	▶⏮ (Play/Pause)	Press to start, pause or resume play.
8	▶⏭ (Next)	Press to skip to the next track, or press and hold to search forward.
9	■/⏏ (Stop/Lock)	Press ■/⏏ once to stop play, the playback will start from where you stopped when you start playing again (Resume Play). If you want to start playback from the first track/file, press ■/⏏ twice to stop play, and then press ▶⏮ . Press and hold to lock the controls to prevent accidental button presses. Press and hold again to unlock the controls.
10	DC 5V	DC 5V Charging Port.
11	LINE OUT 	Headphone/Line out jack.
12	OFF /ON	Switches on/off CD player.
13	OPEN	Slide to open the disc compartment lid.
14	 VOL.	Turn the dial to increase or decrease volume.
15	USB	Connect a USB flash drive to play audio tracks.

Display

 
Display on the CD player

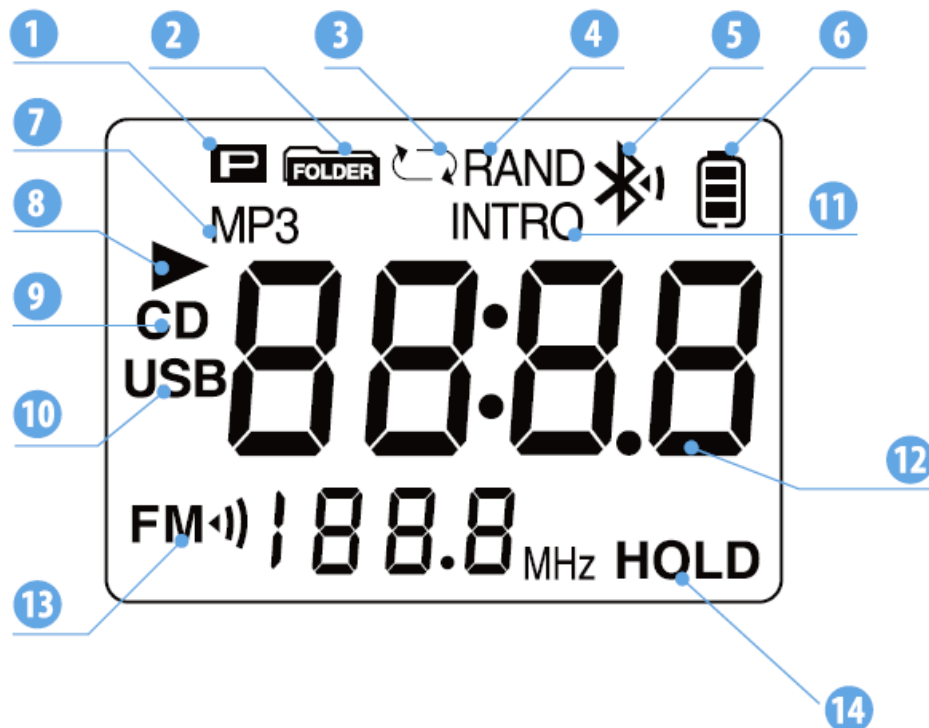

#	ITEM	DESCRIPTION
1	P	Programming playback.
2	FOLDER	Repeat all tracks in current folder.
3		Flashing - Repeat current track. Solid - Repeat all tracks.
4	RAND	Random playback mode.
5		Bluetooth transmitter is turned on. Flashing - Bluetooth pairing mode. Solid - Paired to a Bluetooth receiving device.
6		Battery indicator.
7	MP3	Playing a MP3 audio track.
8		Flashing - Playback is paused. Solid - Playing.
9	CD	CD player.
10	USB	USB player.
11	INTRO	Introductory playback mode.
12	00:00	Elapsed time, track number, selected playback options, or "nod" when no compatible disc is inserted or detected.
13	FM 188.8 MHz	FM is turned on. Flashing - FM transmission frequency adjustment status.
14	HOLD	Control keys are locked.

Charge the battery

1. Slide the power ON/OFF switch to OFF position.
2. Connect the supplied USB charging cable to the player and to the USB DC 5V charging port.

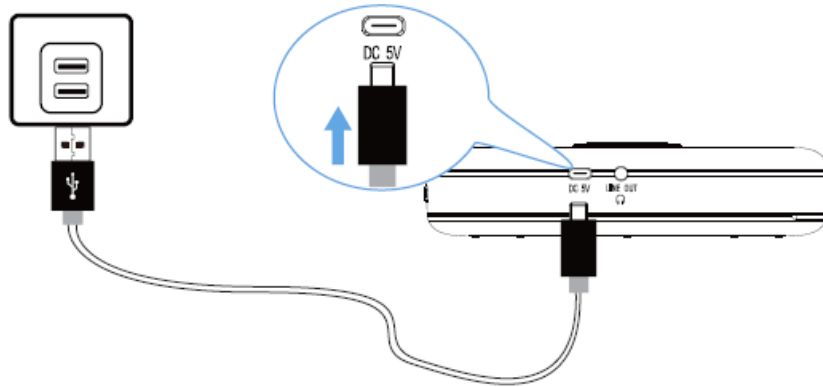


- The Battery icon on the display switches from low to high level repeatedly. It takes about 4 hours to fully charge the battery.
- When the battery is fully charged, the Battery icon on the display stops switching and displays a full charge level.

NOTES:

- If the Battery icon on the display is empty and flashing, it means the battery is running low and needs to be recharged soon.
- Disconnect your CD Player from the charger when fully charged. Do not charge your CD Player for extended periods.

Basic operations

Using your CD Player Basic operations Turning on/off the CD player

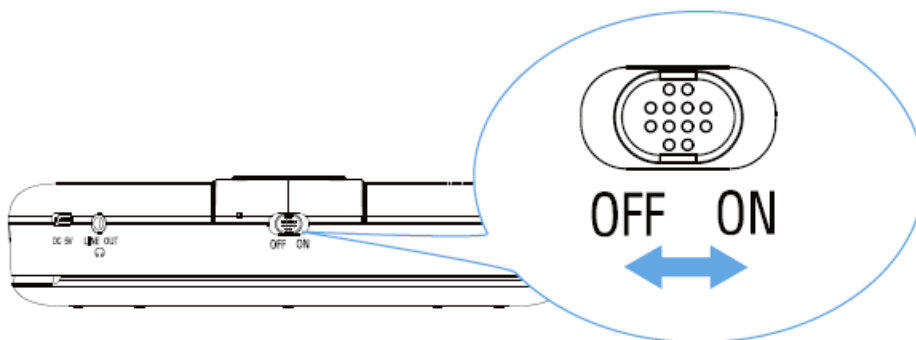


- Slide the OFF/ON switch to the ON position to power on the player, and slide back to the OFF position to power off.
- **NOTES:** After the player is turned off, please wait for 2-3 seconds to turn it on again.

Selecting playback modes

- Press the M button to select different playback modes between the CD player and the USB player.

- **TIPS:** The player changes to CD player mode whenever the player is powered on.

Adjusting the volume

- Turn the  VOL. dial to increase or decrease volume.
- **TIPS:** The unit will save volume adjustment unless the power supply has been cut off. In the case that the power supply has been cut off, it will reset the volume to the original factory settings.

Using headphones

You can connect the supplied headphones to the LINE OUT O jack for private listening.

NOTES:

- Always turn down the volume before connecting your headphones.
- When using headphones/earphones, the built-in speakers of the player will automatically be muted.
- Avoid using headphones/earphones at high volume. Hearing experts advise against continuous, loud, and extended play. If you experience a ringing in your ears reduce volume or discontinue use.




Selecting sound effect (EQ) presets

- Press the EQ button repeatedly to select your desired sound effect (EQ) preset. Selections include Flat, Pop, Jazz, Rock, Classic.

Selecting repeat playback modes

1. During CD or USB playback, press the REP/PROG button to cycle through the playback modes.

- **The following appears on the display:**

-  Flashing -Repeat the current track
-  Solid -Repeat all tracks
-  -Repeat all tracks in the current folder (MP3 CDs or USB sticks only)
- **RAND-** Random playback
- **INTRO-** Introductory playback
- **Tips:** When INTRO playback mode is selected, the CD player will play only a short portion of each track as an introduction, allowing you to preview the beginning of each song. Once the intro portion of a track is finished, the player moves on to the next track, and the process continues until all tracks have been previewed.

2. To cancel repeat mode, press REP/PROG until the INTRO icon disappears on the display.


Playing CDs








You can play standard and 3" audio CDs, CD-Rs, and CD-RWs.

CAUTION: Do not try to play DVDs or VCDs. You may damage your unit.

1. Slide the power OFF/ON switch to the ON position.

2. Press the M button to select CD player mode.
3. The display shows "CD". 3 Slide OPEN to open the lid.
4. Place the CD on the tray and close the lid.

5. Play starts automatically. If not, press .

- To pause, press . Press again to resume play.
- To stop, press  / .
- To select the next/previous item, press  (next) or  (previous).
- To start a search within audio, press and hold  (next) or  (previous).


NOTES:








- This product is designed to play back discs that conform to the Compact Disc (CD) standard.
- This CD player can play CD-Rs/CD-RWs recorded in the Compact Disc Digital Audio (Audio CD) format, but playback capability may vary depending on the quality of the disc and the condition of the recording device.
- A disc with insufficient storage capacity may not playback properly.
- If a CD is inserted incorrectly, is dirty, or is damaged, or is not present at all, "nod" appears on the display.
- To prevent damage to the CD, never open the lid while the CD is rotating, and never touch the lens.

Playing USB flash drives

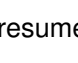MP3/WMA/WAV files recorded on a USB flash drive can be played with the unit.

1. Slide the power OFF/ON switch to the ON position.
2. Press the M button to select USB player mode. The display shows "USB".
3. Connect the USB flash drive to the USB port. Make sure that you insert your USB drive into the USB port.

4. 4 Play starts automatically. If not, press .

- To pause, press . Press again to resume play.
- To stop, press  / .
- To select the next/previous item, press  (next) or  (previous).
- To start a search within audio, press and hold  (next) or  (previous).










NOTES:

- Not all USB flash drives are supported.
- Supports USB flash drives of a maximum capacity of up to 128GB.
- FAT32 file systems are supported (NTFS not supported).
- Supports MP3/WMA/WAV audio files only.
- USB hubs are not supported.
- Do not connect the unit's USB port to a USB port on your computer.

- The USB flash drives will only fit in one direction.



Programming playback

You can program the player to play up to 99 tracks in your favorite order.

1. During CD or USB playback, press  /  to stop.
2. Press the REP/PROG Button. "PROG 1 –" will appear on the display and blink.
3. Select the first specific track to be programmed by pressing the  or  1+1 buttons repeatedly.
4. Press the REP/PROG Button to store the selected track in the memory.
5. Repeat steps 2 and 3 to select the tracks in your favorite order.
6. Press the  to start program playback. The program indicator "PROG" will stop blinking.
7. To stop playback, press the  / .
8. To erase the program, press the  /  again in stop mode. The program indicator will disappear from the display.

Using Bluetooth transmitter

You can use the Bluetooth transmitter feature to transmit audio wirelessly via Bluetooth to a Bluetooth-enabled receiving device, such as Bluetooth wireless headphones or speaker.

1. During CD or USB playback, press the BT TX button to turn on the Bluetooth transmitter. "  " appears and flashes on the display, indicating that the Bluetooth transmitter is turned on and in pairing mode.
2. Set your Bluetooth headphones or speaker to Bluetooth pairing mode, and make sure they are not connected to any other Bluetooth device.
3. Move the Bluetooth device as close as possible to the CD player, they will automatically establish a Bluetooth connection.
 - **NOTE:** The built-in speakers are automatically muted when a Bluetooth connection is established.
4. Press the BT TX button again to turn off the Bluetooth transmitter. If no connection is established and no operation is done to the player within 1 minute, the Bluetooth transmitter will automatically be turned off. "  " disappears on the display. The built-in speakers resume playback.


NOTE:

- For the pairing procedure on the Bluetooth headphones or speaker, refer to your headphones or speaker's instruction manual.
- If you are trying to pair an Apple AirPods, reset it before pairing.
- Before pairing, try to turn off the Bluetooth function of another device (s) nearby that you are not intended to connect.
- The Bluetooth transmitter works with Bluetooth-receiving devices only, not with transmitting devices such as phones, tablets, laptops, or computers.

- Not all Bluetooth car stereos are supported due to some compatibility issues.

Troubleshooting

CAUTION: Do not try to repair the CD player yourself. Doing so will invalidate your warranty.

Problem	Solution
The CD player will not turn on.	<ul style="list-style-type: none"> • Ensure that both ends of the USB charging cable are properly connected. • Ensure that there is power at the USB DC 5V outlet. • Check if the built-in battery is drained.
"HOLD" appears on the display, the CD player does not response when you press a button.	The buttons are locked. Press and hold ■/🔒 to unlock.
The CD does not play or "nod" appears in the display when a CD is placed in the CD player.	<ul style="list-style-type: none"> • Make sure that you have put a CD in the CD compartment. • Make sure that the CD is inserted label side up. • Try a different CD. • Make sure that the CD player is not paused. • Make sure that the CD mode is selected. • Make sure that you are using a compatible CD. Your CD player can play standard and 3" audio CDs, CD-Rs, and CD-RWs. • The CD-R/RW is blank. • There is a problem with the quality of the CD-R/RW, recording device, or application software.
A CD skips while playing.	<ul style="list-style-type: none"> • Wipe the CD with a cloth to clean it. See Cleaning discs on page 15. • Try a different CD. • Make sure that the CD is not warped, scratched, or damaged.
The USB does not play when a USB flash drive is inserted.	<ul style="list-style-type: none"> • Check if the USB connection is loose or faulty. • Check if the USB capacity exceeds 128 GB. • Check if the USB drive is not formatted using the FAT32 file system. • Check if the audio file formats are not MP3, WMA, or WAV.
No sound is heard from the built-in speakers.	<ul style="list-style-type: none"> • Increase the volume. • Check if the LINE OUT  jack is connected to headphones or external stereo system. • Check if the Bluetooth or FM transmitter is turned on. • Check if the playback is paused or stopped.
When using with a connected stereo system, the sound is distorted or noisy.	Adjust the volume of the CD player and the connected device
Playback starts from the point you stopped. (resume function)	The resume function is working. To start play from the first track press ■/🔒 button twice during playback.
When closing the lid of the CD player, the CD starts to rotate.	The CD player is reading the information on the CD. The player is not malfunctioning.

Maintaining your CD Player Care and handling of discs Handling discs

- Do not touch the playback side of the disc.
- Hold the disc by the edges so that fingerprints do not get on the surface.
- Never stick paper or tape on the disc.



Storing discs

- After playing, store the disc in its case.
- Do not expose the disc to direct sunlight or sources of heat and never leave it in a parked car exposed to direct sunlight.

Cleaning discs

- Fingerprints and dust on the disc can cause poor sound quality and distortion.
- Before playing, clean the disc with a clean cloth. Wipe the disc from the center out.



- Do not use strong solvents such as alcohol, benzine, thinner, commercially available cleaners, or anti-static spray intended for older vinyl records.

Cleaning the CD lens

- If your CD lens gets dirty it can cause poor sound quality.
- To clean the lens you will need to purchase a CD lens cleaner which can maintain the output sound quality of your system.
- For instructions on cleaning the CD lens, refer to the literature accompanying the lens cleaner.

Cleaning your CD Player

- To prevent fire or shock hazards, disconnect your CD Player from the AC power source when cleaning.
- The finish on your CD Player may be cleaned with a dust cloth and cared for as other furniture.
- Use caution when cleaning and wiping the plastic parts.
- Mild soap and a damp cloth may be used on the front panel.

Specifications

Speakers output power	2 x 1.SW
Frequency response	70Hz-20KHz
Signal-to-noise ratio	>85dB
Battery type	Lithium-ion polymer (3.7V 2000mAh)
Battery charge power	DC 5V / 1A
Battery charge time	3-4 hours@5V / 1A
Music playing time	CD 6 hours USB 8 hours (varies by volume level and audio content)
Dimensions	146 x 146 x 33.5 (mm)
Weight	309g

FCC

Legal notices FCC Statement

This device complies with Part 15 of the FCC Rules.

Operation is to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used per the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable

exposure conditions without restriction.

warranty

12 months warranty

Thank you for choosing Megatek.

- Megatek Electronics warrants your new product to be free from defects in materials and workmanship for twelve (12) months, from the date of receiving.
- This warranty is in addition to your rights under Amazon's return and refund policies which apply to your purchase.
- Megatek will provide you with a brand-new replacement (where possible) for this product if it becomes defective within the warranty period.
- Megatek will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse, or neglect.
- Please contact our Customer Service with your order ID and description of the problem, for a warranty claim or any difficulties with your product:
- **Email:** service@megatekelec.com.
- **Amazon Buyer-Seller Messages:** Go to Your Orders then find your order in the list, open the order, and on the order page click the Get help button.

Documents / Resources

 <p>MEGATEK Portable CD Player CP27BR</p> <p>USER'S MANUAL</p> <p>One (1) Year Replacement for Defective Product. Questions or Problems? Contact Us: ✉ service@megatekelec.com 📞 Customer Support Sales Warranty</p>	<p>MEGATEK CP27BR Portable CD Player with Bluetooth [pdf] User Manual CP27BR, 2ATSK-CP27BR, 2ATSKCP27BR, CP27BR Portable CD Player with Bluetooth, Portable CD Player with Bluetooth, CD Player with Bluetooth, Player with Bluetooth</p>
--	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.