

MEIKEE B04-21FLB-M-E Security Lights with Motion Sensor **Instruction Manual**

Home » MEIKEE » MEIKEE B04-21FLB-M-E Security Lights with Motion Sensor Instruction Manual






Contents

- 1 B04-21FLB-M-E Security Lights with Motion Sensor
- 2 Dimension
- 3 Component and structure diagrams
- 4 Parameter
- 5 How to install
- **6 Notification**
- 7 Routine maintenance
- 8 Documents / Resources
 - 8.1 References

B04-21FLB-M-E Security Lights with Motion Sensor

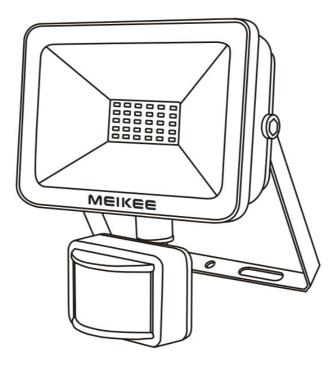



Thank you for purchasing MEIKEE products. To ensure a better shopping experience, please follow the instructions for use step by step. If you have any questions about our products, please contact our customer service, our after-sales team will contact you at the first time and resolve any problems about the products. E-mail: meikee@meikeelighting.com

Warning


- 1. The LED module can't be replaced, you need to replace the entire lamp if it damaged or reach the service life.
- 2. If the wire is damaged, the lamp can no longer be used and needs to be scrapped.
- 3. If the casing breaks or water enters, the lamp can no longer be used and needs to be scrapped.
- 4. Do not stare at the LED light-emitting surface closely for a long time, to prevent the hurt of the eye.
- 5. Under no circumstances should the luminaire be covered by a thermal pad or similar material.
- 6. The Lamp requires professional electrician to install.
- 7. The IP66 waterproof grade is just for rainproof, the lamp can not be immersed in water, otherwise it may cause leakage.
- 8. The terminal block is not included. (Please prepare the terminal block according to your actual needs)

Dimension

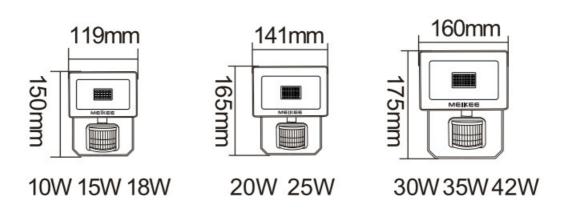

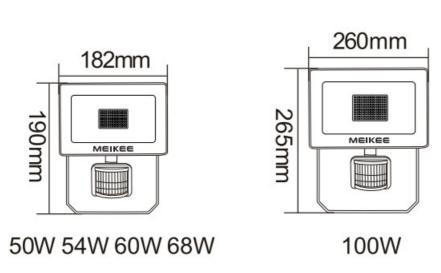

Component and structure diagrams

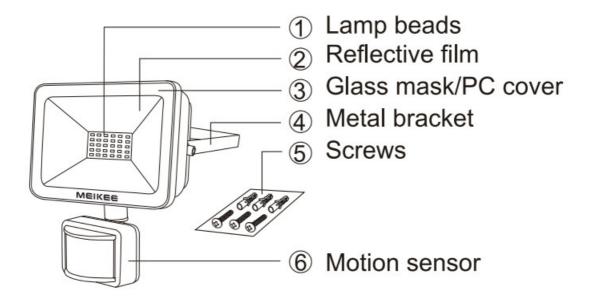

Parameter

Model	Power	Lumen	Lighting R ange	Installatio n Height	Α		В	
					Shell	Input Lea d	Shell	Input Lead
FLB01 0	10W	850	3-4M	2.5-3.5M	Aluminum	L/N/=	Plastic-clad alu minum	L/N
FLB01 5	15W	1200	3-4M	2.5-3.5M	Aluminum	L /N/ =	Plastic-dad alu minum	L/N
FLB02 0	20W	1700	3-4M	3.0-5.0M	Aluminum	L iN/ =	Plastic-dad alu minum	L/N
FLB02 5	25W	2100	3-4M	3.0-5.0M	Aluminum	L/N/ =	Plastic-dad alu minum	L/N
FLB03 0	30W	2600	4-6M	3.5-5.0M	Aluminum	L /N/ =	Plastic-dad alu minum	L/N
FLB03 5	35W	3000	4-6M	3.5-5.0M	Aluminum	L /N/ =	Flastic-cladalu minum	L/N
FLB05 0	50W	4300	6-8M	5.0-7.0M	Aluminum	L /N/ =	Plastic-dad alu minum	L/N
FLB05 4	54W	4700	6-8M	5.0-7.0M	Aluminum	L /N/ =	Plastic-cladalu minum	L/N
FLB06 0	60W	5200	6-8M	5.0-7.0M	Aluminum	L /N/ =	Plastic-cladalu minum	L/N
FLB10 0	100W	9000	10-12M	5.0-7.0M	Aluminum	L /N/ =	Plastic-dad alu minum	LIN


Input voltage: US: AC 120V/60HZ EU/UK:AC 230V/50HZ

Color temperature: 2700K-6500K CRI: >70


IP rating: IP66 Ta: -25-40t

How to install


Step 1: Drill two mounting holes according to the distance of the screw holes on the bracket.

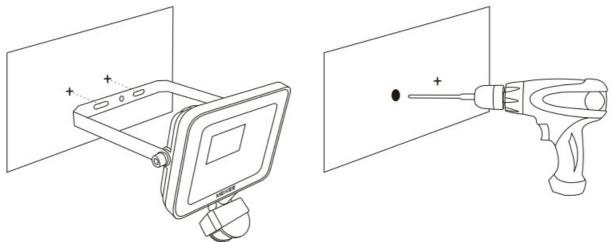

Step 2: Put expansion screws in the prepared mounting holes, then place the bracket in the mounting position and fix with screws.

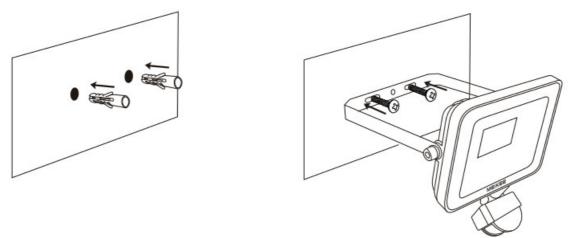


Step 3: Adjust the direction of light and the inspection range of the sensor as needed.

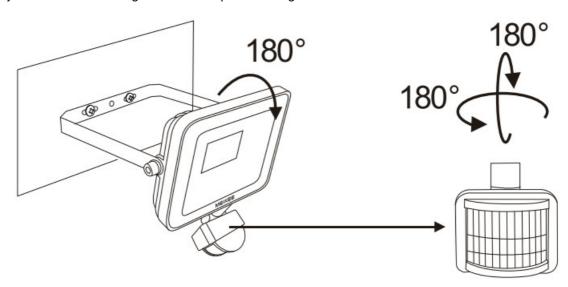

Step 4: Connect the wires.

Plastic-clad aluminum Aluminum L N MEIKEE

Step 5: Adjust the TIME, LUX switch at the bottom of the sensor according to actual needs. (Please confirm which sensor you purchased, and then adjust it according to the instructions)

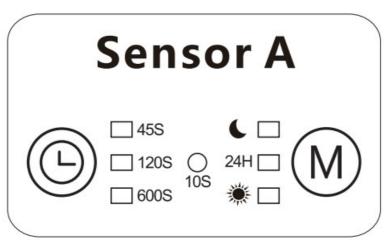


- Lighting Time Switch: Press the switch 10S-45S-120S-600S cycle.
- * The indicator light will stay on when switch to corresponding mode.
- Working Mode Switch: Press the switch Sun-24H-Moon cycle.
- Day mode: Lights up during the day and night, 24 hours working.


24H: Manual Override Mode: Keep staying on, need to power off by the main power. (unaffected by sensor)

Night Mode: Only work at night.

 $f{x}$ The indicator light will stay on when switch to corresponding mode.

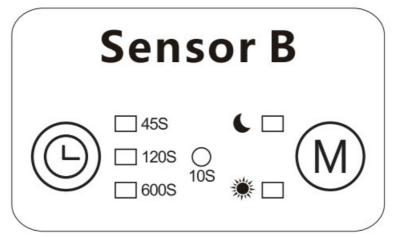


- Lighting Time Switch: Press the switch 10S-45S-120S-600S cycle.
- * The indicator light will stay on when switch to corresponding mode.
- M Working Mode Switch: Press the switch Sun-Moon cycle.
- Day mode: Lights up during the day and night, 24 hours working.
- Night Mode: Only work at night.
- * The indicator light will stay on when switch to corresponding mode.

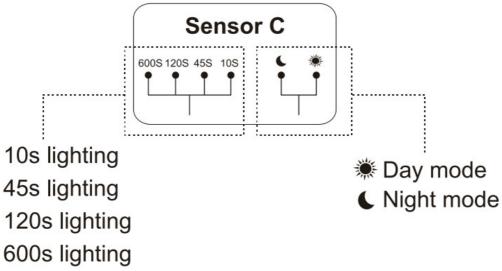

Note: Day mode: lights up during the day and night, that is, working 24 hours

Night mode: work only at night

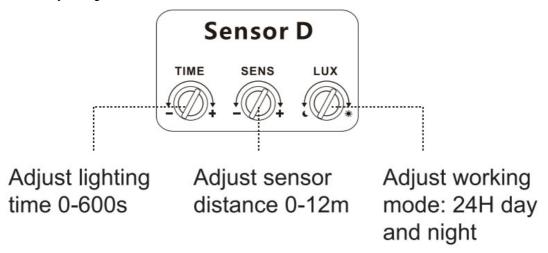

Notification

The detection distance depends on the ambient temperature. If the ambient temperature is close to or higher than the human body temperature, the sensing detection distance will become shorter.

This means you need to get closer to this light.

Conversely, if the ambient temperature is lower than the human body temperature, this sensing detection distance will be farther.

Routine maintenance

- 1. To ensure better lighting, please clean the fixtures regularly.
- 2. Before maintenance, make sure the power is disconnected.
- 3. To avoid damage of the lamp, please do not clean it with chemicals.





C&E Connection E-Commerce (DE) GmbH

Zum Linnegraben 20, 65933, Frankfurt am Main, Germany E-mail: info@ce-connection.de Tel:+49 (069) 27246648

UK REP

CET PRODUCT SERVICE LTD.

Beacon House Stokenchurch Business Park, Ibstone Rd, Stokenchurch High Wycombe HP 14 3FE UK Tel:+447419325266 E-mail:info@cetproduct.com

Contact: meikee@meikeelighting.com
Website: http://www.meikeelighting.com

Documents / Resources



MEIKEE B04-21FLB-M-E Security Lights with Motion Sensor [pdf] Instruction Manual B04-21FLB-M-E, B04-21FLB-M-E Security Lights with Motion Sensor, Security Lights with Motion Sensor, Lights with Motion Sensor, Sensor

References

User Manual

Manuals+,