

[Home](#) » [Meiurlex](#) » **Meiurlex RGB20SX InstructionaRGB20SX Handheld Game Console**
Instructions 

Contents [[hide](#)]

- [1 Meiurlex RGB20SX InstructionaRGB20SX Handheld Game Console](#)
- [2 RGB20SX Instruction](#)
- [3 Function Description](#)
- [4 Quick Combination of Functions](#)
- [5 Main Interface Button Operation](#)
- [6 Charging Instructions](#)
- [7 FAQ](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)

Meiurlex

Meiurlex RGB20SX InstructionaRGB20SX Handheld Game Console




Specifications

- Model: RGB20SX
- Functions: Quick combination of functions, game saving, volume control, game settings
- Power: Power button for on/off and hibernate
- Charging: USB charging, indicator lights for battery status

RGB20SX Instruction

Function Description

- Power Button: Power on and hibernate
- Reset Button
- Game Card Slot
- System Card Slot
- Left Rocker (L3)
- Right Rocker (R3)
- Volume Control: V+ and V-
- Charge Port
- HD Button

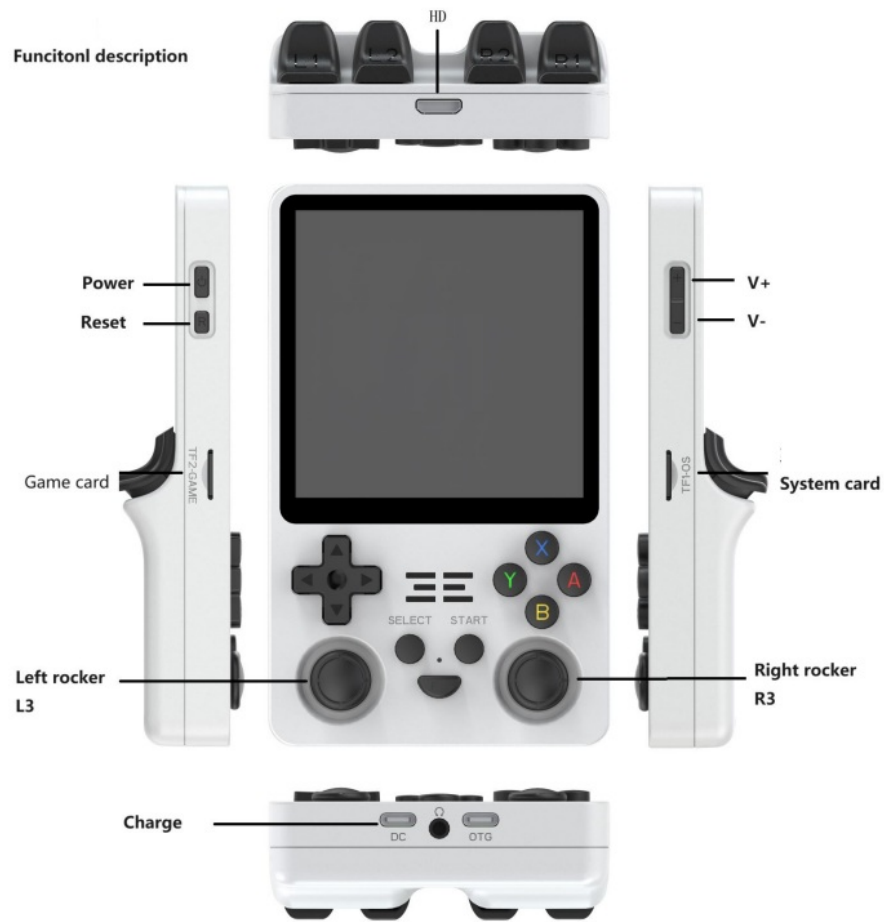

Quick Combination of Functions

Function	Button Combination
Quit the game	SELECT + START
Volume	SELECT + UP/DOWN
Games are saved and read	SELECT + L1 R1
Save the location	SELECT + L R
Speed up the game	SELECT + R2
Game settings	SELECT + X (L3 + R3)

Main Interface Button Operation

- Power Button: Power on and hibernate
- SELECT: Restart and shut down

- **START:** Settings, brightness, language, volume

The Instruction of Starting and Shutting Down the Hand Machine

1. Install the TF-OS System Card and the TF-GAME Installation Game Card (if not installed, the TF-GAME machine will not enter the system), then press the power key for 3 seconds to enter the system.
2. Press the SELECT key to initiate shutdown.
3. Press the power button once to enter sleep mode. Long press for 10 seconds for a mandatory shutdown.

Charging Instructions

1. If new to the machine, it may be low on power. First, use a 2A charger docking USB port to charge for 30 minutes after booting.
2. During operation, if the electric quantity display shows 0 and the working lamp is red, please charge the battery in time.
3. Indicator: Working – green, Low power – red, Charging – red.

FAQ

- **Q: How do I save my game progress?**

A: Use the SELECT button to save the location of your game.

- **Q: How do I adjust the volume?**

A: Use the START button to access settings where you can adjust the volume.

- **Q: What do the indicator lights signify during charging?**

A: Green light indicates normal operation, red light indicates low power, and charging is indicated by a red light.

Documents / Resources



[Meiurlex RGB20SX InstructionaRGB20SX Handheld Game Console \[pdf\]](#)

Instructions

RGB20SX Handheld Game Console, RGB20SX, Handheld Game Console, Game Console, Console

References

- [User Manual](#)

◆ Console, Game Console, Handheld Game Console, Meiurlex, RGB20SX, RGB20SX Handheld Game

■ Meiurlex Console

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos

are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.