

meliconi
Fully 8+ remote
control



Meliconi Fully 8+ remote control User Guide

[Home](#) » [meliconi](#) » Meliconi Fully 8+ remote control User Guide 

Contents

- [1 Meliconi Fully 8+ remote control](#)
- [2 BATTERY TEST](#)
- [3 Usage Instruction](#)
- [4 Connection](#)
- [5 SAFETY WARNINGS](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)

meliconi

Meliconi Fully 8+ remote control



 
QUICK GUIDE

- www.meliconi.com/quickguide



2 years warranty


BATTERY TEST

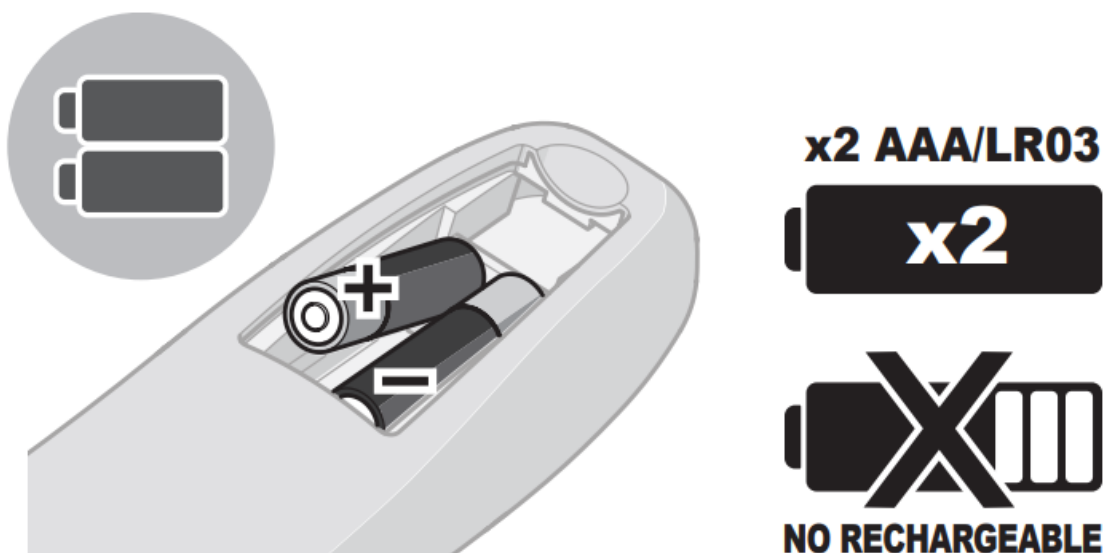

- Press and hold button 5 and check that the LED on the remote control remains continuously lit until the button is released. If the LED flashes or stays off the batteries used are not sufficiently charged: replace them
- IT/EU telecomandi@meliconi.com
- FR hotline@meliconi.fr

 The Fully 8+ remote control is a universal remote control. For this reason, it must be programmed by following the procedure listed below.

 


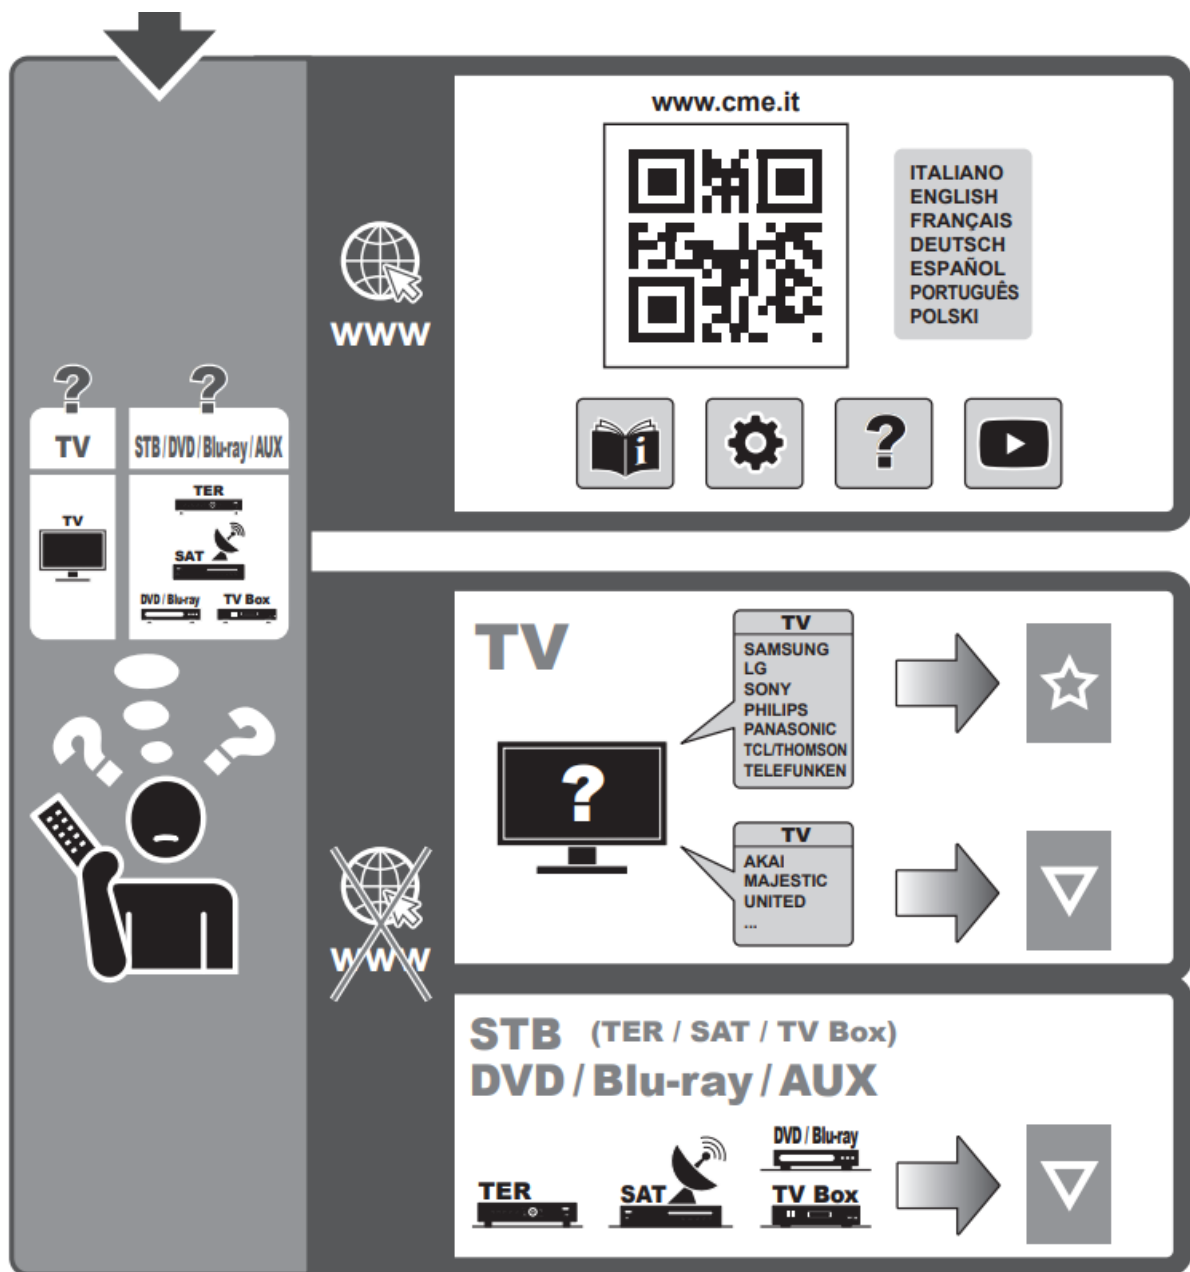


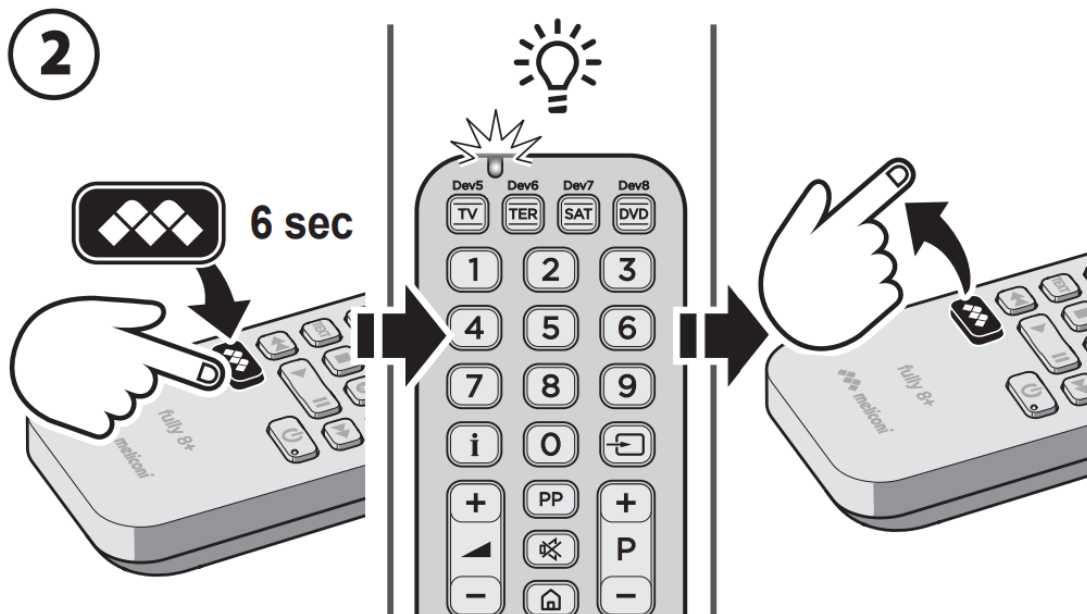 
- www.cme.it

Usage Instruction

 
1. Switch on the device. Press once briefly on the button corresponding to the device to be operated.

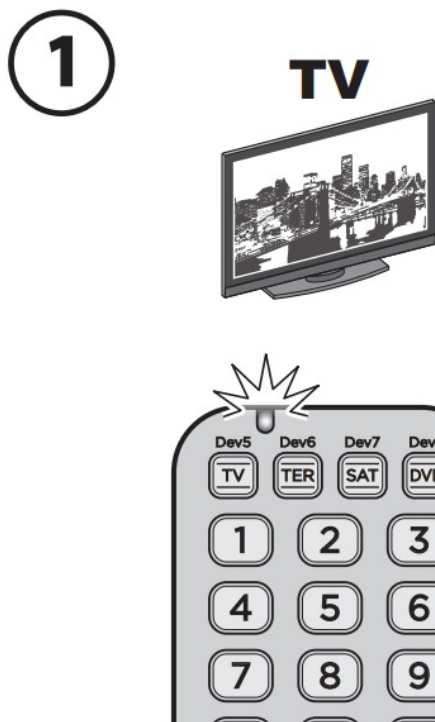


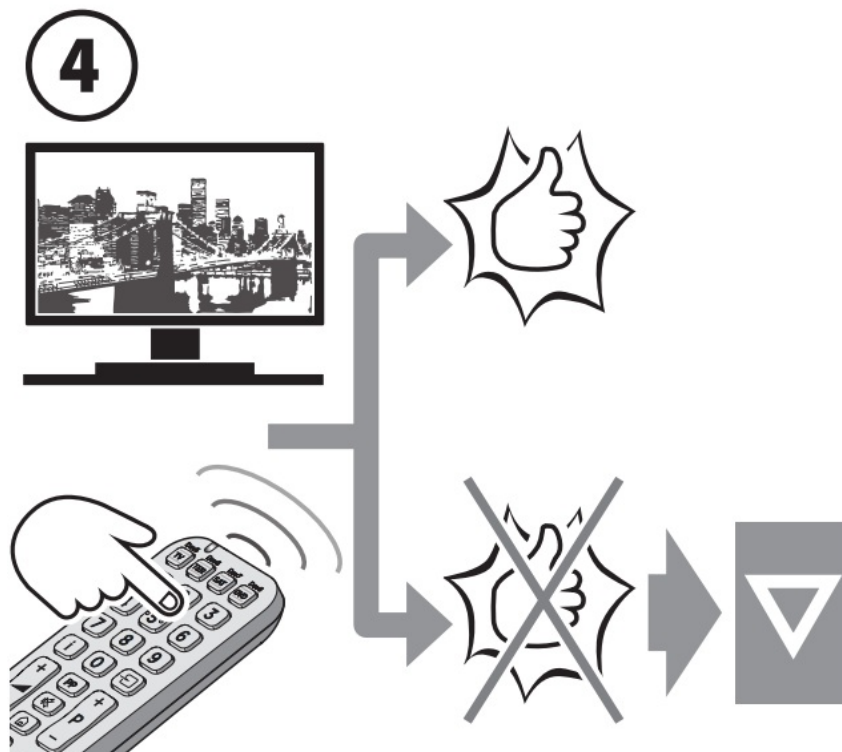 
2. Press and hold the  button until the top LED lights up. Release the button.



3. Use the numeric keys to enter the code previously found. The LED will make 3 flashes of confirmation

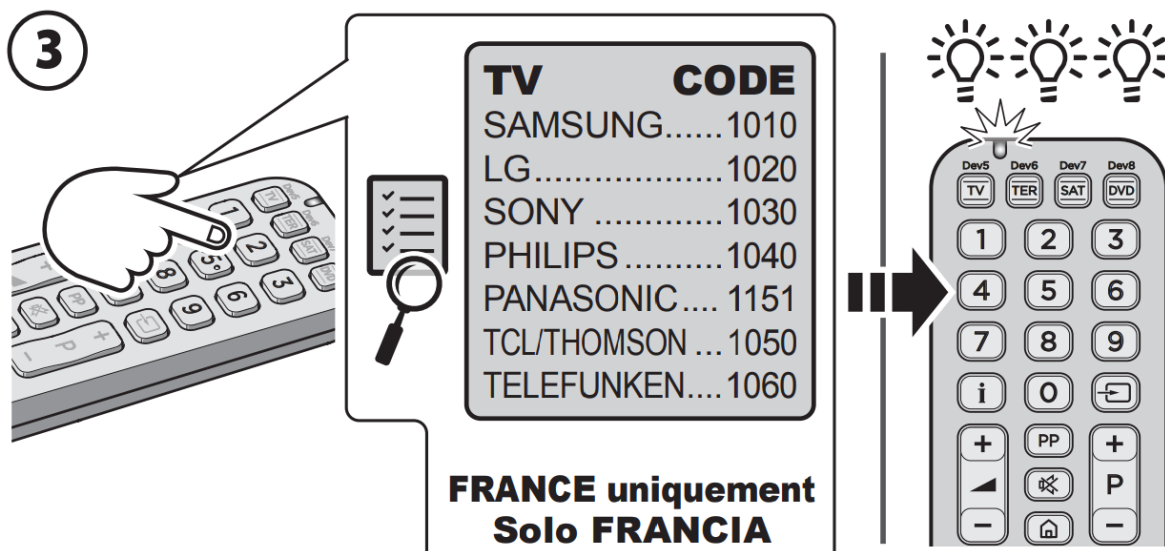

4. Check that the keys function correctly. If they do not all function correctly, go to point “” below.



 
https://audiovideo-melicon.com/CODE/TV_SAT_DVD




5. Check that the keys function correctly. If they do not all function correctly, go to point “ ▽ ” bel. ow.


Connection


1. Switch on the device to be controlled

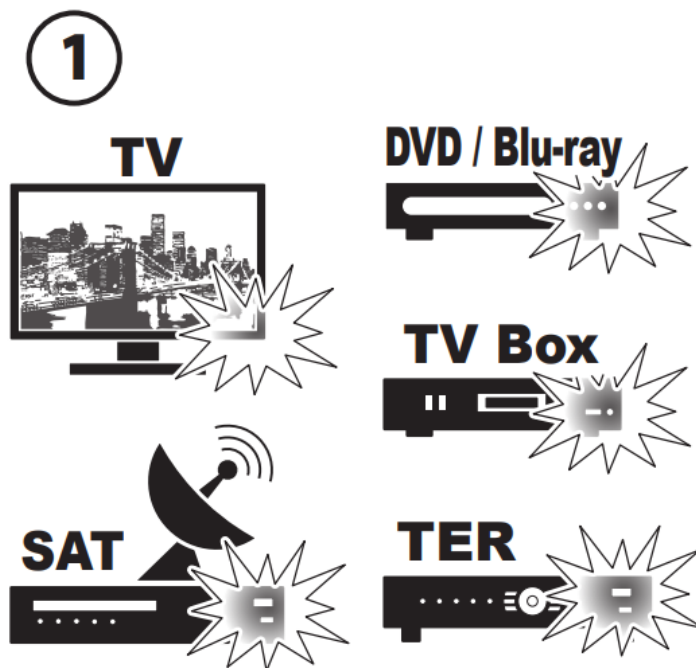

 
2. Select the device to control (TV / TER / SAT / DVD / Dev5 / Dev6 / Dev7 / Dev8).

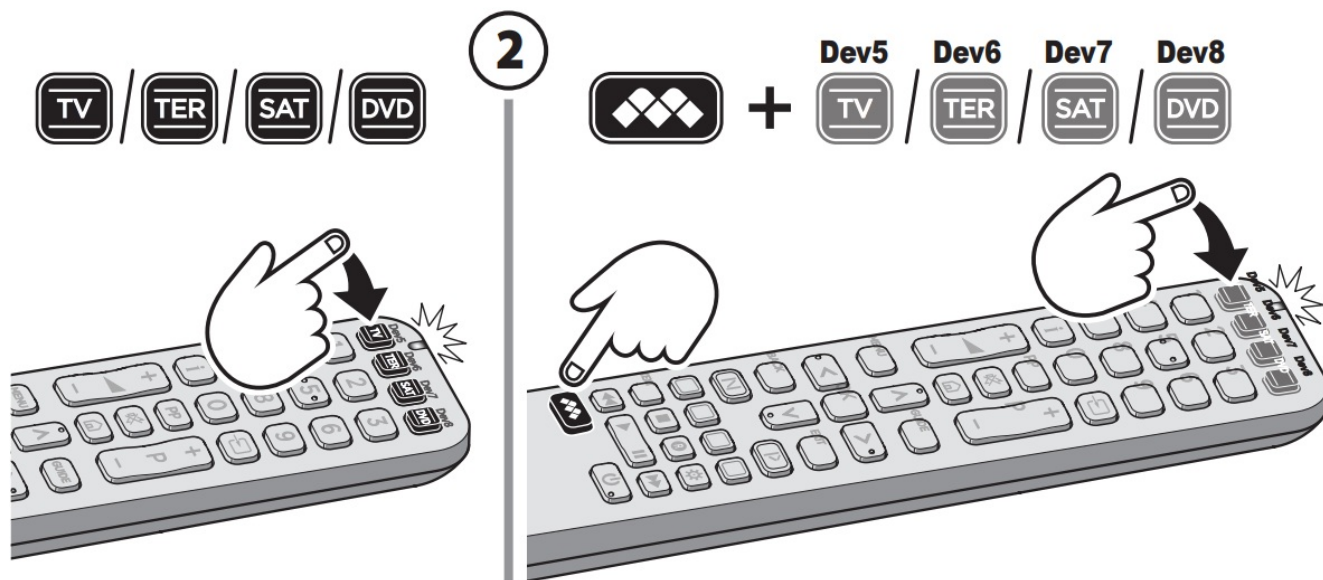

 3. Press and hold the “” button until the top LED lights up. Release the button

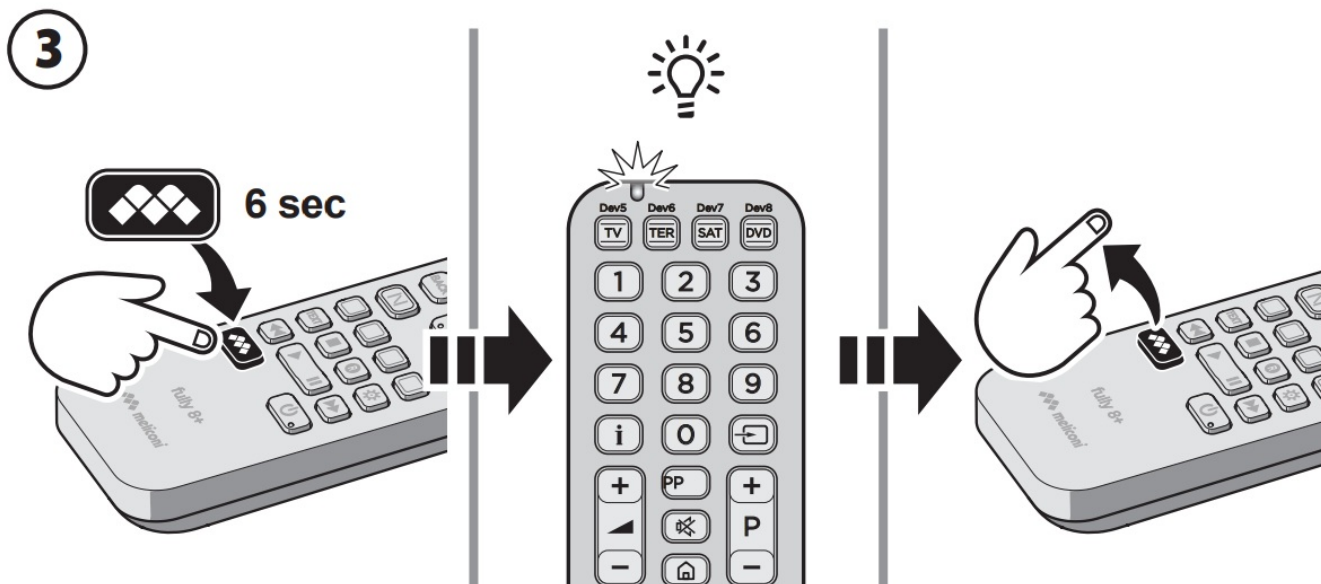


 
4. SCAN

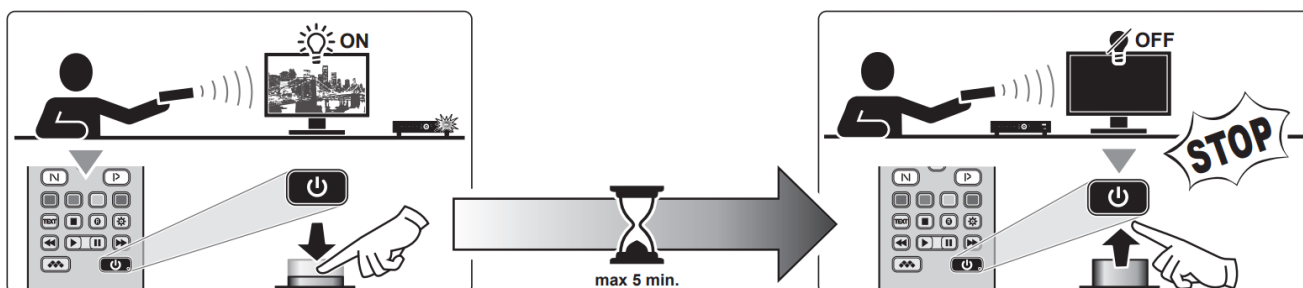

Point the remote control at the device, hold down the  but, ton and release it as soon as the device switches off (max 5 minutes)

 5. TEST

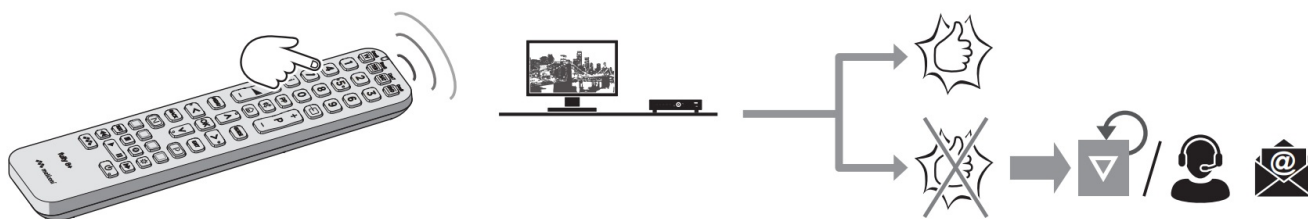

Check that the keys function correctly. If it does not work, the eating procedure “” or contact customer service.

SAFETY WARNINGS

- Read the safety warnings and instructions before using the product and keep them for future reference.
- If the product is passed on to third parties, always include this manual and the safety warnings with it.
- The product contains small parts that could detach and be swallowed (a suffocation hazard), so keep away from children or pets.
- If a part is accidentally swallowed, contact a Physician/go to Accident and Emergency at once to have it removed.
- Do not expose the remote control to sources of excessive heat, such as direct sunlight, fire, or the like.
- Keep away from water and liquids in general. Never immerse in water or liquids.
- Never attempt to dry the remote control by heating it (e.g. using a hair dryer, stove, or microwave).
- To avoid electric shock, do not tamper with or attempt to open the device.
- Do not use a damaged product.
- If the product has to be disposed of, or at its end-of-life, refer to the “DISPOSING OF THE PRODUCT” section of this manual.
- Do not misuse the product.
- If fluid leaks from the battery, wipe it away without touching it directly with your hands (irritant and corrosive).
- Do not open the product.
- All repairs must be performed by a qualified center.
- Only use batteries of the specified type.
- When fitting batteries, take care that the poles correspond.



DISPOSING OF THE PRODUCT

The crossed-out bin symbol shown on the product indicates that it must be collected separately from other waste at the end of its useful life. Users must therefore take it to the appropriate separate waste collection centers for electrical and electronic waste, or hand it in to the retailer when purchasing a device of the same type. Proper separate waste collection for end-of-life devices, so they can be sent for recycling, treatment, or eco-compatible disposal, helps to avoid possible negative effects on the environment and health and aids in recycling the materials the device is composed of.



WARNING

Batteries must not be taken apart, thrown into the fire, or dispersed in the environment. Improper use may cause damage to the environment or health. The bin symbol indicates that batteries must be disposed of by the regulations in force; make sure you are familiar with the regulations governing the collection of worn-out batteries and accumulators in your country.

Documents / Resources



[Meliconi Fully 8+ remote control](#) [pdf] User Guide

PJN231240, PJN231240 Fully 8 Plus 8 In 1 Universal Remote Control, Fully 8 Plus 8 In 1 Universal Remote Control, 8 In 1 Universal Remote Control, Universal Remote Control, Remote Control, Control

References

-  [CME / MELICONI](#)
-  [Meliconi - Lo specialista dell'accessorio](#)
-  [Liste non exhaustive des Codes TV - TNT - SAT - TVBOX et DVD](#)
- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.