



# Memoking E975 Embossing Label Maker Machine User Guide

[Home](#) » [Memoking](#) » Memoking E975 Embossing Label Maker Machine User Guide 

## Contents

- [1 Memoking E975 Embossing Label Maker Machine](#)
- [2 Product Information](#)
- [3 Specifications](#)
- [4 Product Usage Instructions](#)
- [5 FAQ](#)
- [6 Instructions](#)
- [7 Common problems and solutions](#)
- [8 Documents / Resources](#)
  - [8.1 References](#)
- [9 Related Posts](#)



**Memoking E975 Embossing Label Maker Machine**



## Product Information

The product is a label-printing machine that allows users to create and print custom labels. It features a dial for selecting different symbols and icons, a handle for printing the characters, and a slot for inserting the label tape. The machine is designed to be easy to use and provides clear and precise printing results.

## Specifications

- **Printing Method:** Manual
- **Label Tape Compatibility:** Standard label tape
- **Printing Area:** Adjustable
- **Symbols and Icons:** Space, Scissors
- **Power Source:** Manual operation

## Product Usage Instructions

### Step 1: Inserting the Label Tape

1. Turn the dial to move the space icon into the printing area.
2. Hold the handle tightly and open the rear cover.
3. Insert the label tape into the slot.
4. Squeeze the handle several times to run the tape.
5. **Note:** Do not use the scissor icon when feeding the tape to avoid accidental cuts.

### Step 2: Printing the Label

5. After the label tape is installed, turn the dial to select the desired characters.
6. Press the handle firmly to print the characters on the label.

7. After printing is completed, turn the dial until you reach the scissors icon.
8. Press the handle to cut the label.
9. Fold along the dotted line on the label and remove the backing.

### Step 3: Replacing the Label Tape

10. To replace the label tape, open the rear cover.
11. Pull out the original label tape.
12. Insert a new label tape following the instructions in Step 1.

## FAQ

### The print is not clear.

The label tape is not installed correctly. Reinstall the label tape.

### The print is misaligned.

The disc is set incorrectly. Rotate the dial to align the scissors icons of the upper and lower discs.

### The disc is stuck.

The disc may be stuck due to a mechanical issue. Please contact customer support for assistance.

### The label tape is stuck.

If you are unable to remove the label tape, please contact customer support for guidance

### The label won't print.


Ensure that the label tape is properly installed. If the issue persists, please contact customer support for further assistance.


### How to prevent tape residue from accumulating inside the machine?


Cut the tape cleanly. Open the rear lid to check the amount of adhesive tape remaining. When there is little label tape left, replace it immediately.

## Instructions


1. Turn the dial and move the " " space icon into the print area.

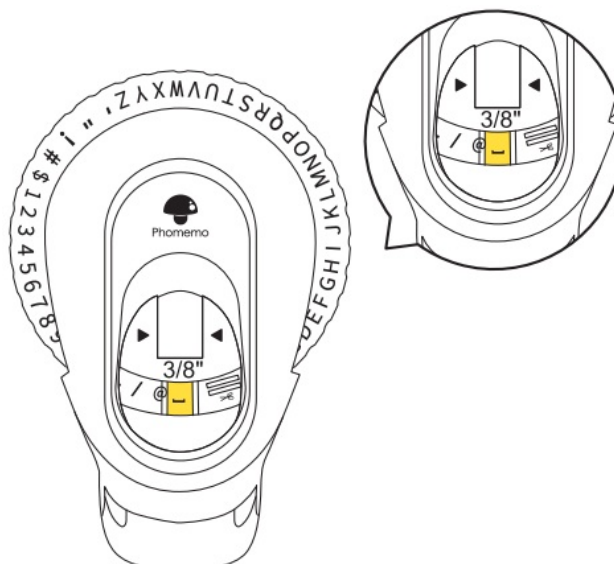


- **Note:** Please do not use the “  ” scissor icon when feeding the tape, because you may accidentally cut the label tape if you squeeze too hard

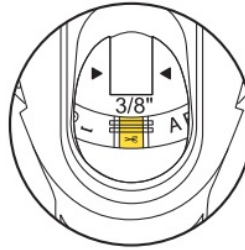

2. Hold the handle tightly and open the rear cover.

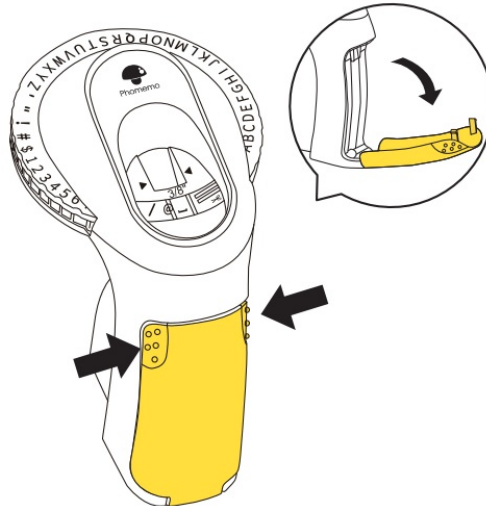


3. Insert the label tape into the slot and squeeze the handle several times to run the tape.

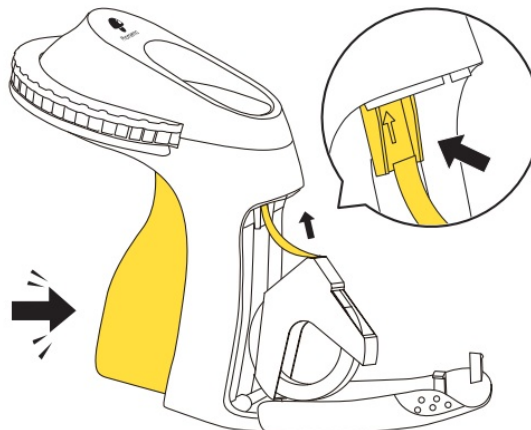


- **Note:** When the label tape is inserted into the slot, the label tape shall be pushed up until it cannot be pushed and the hand plate shall be squeezed several times.


4. After the label is installed, turn the dial and press the handle to print the characters.

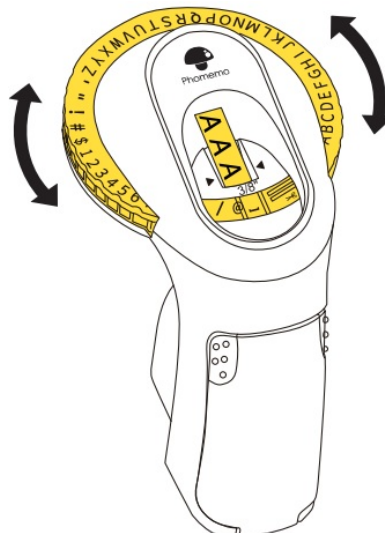

5. After the printing is completed, turn the disc until you reach the “ ✂ ” Scissors icon, and press the handle to cut.

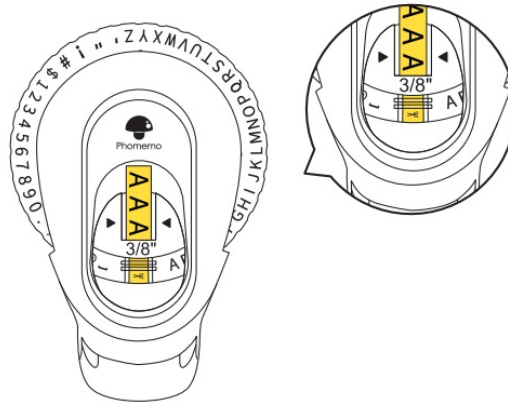
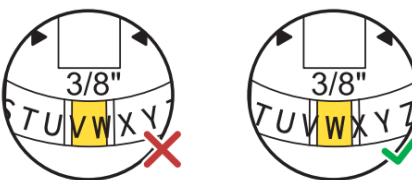


6. Fold along the dotted line on the label and remove the backing.

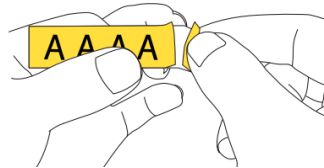


7. To replace the label tape, open the rear cover, pull out the original label tape, and repeat steps ① ② ③.

## Common problems and solutions

Question/Problem	Reason	Solution
<b>The print is not clear.</b>	The handle is not pressed hard enough.	Press the handle firmly.
	The label tape is not installed correctly.	Reinstall the label tape.
	Incorrect printing due to poor alignment of the upper and lower discs.	Rotate the dial to align the scissors icons of the upper and lower discs. 
<b>The print is misaligned.</b>	The disc is set incorrectly.	Print the characters in the printing area.
	Turning the dial too fast may cause distorted prints or ghosting.	
<b>The disc is stuck.</b>	Pressing the handle incorrectly.	Do not press the handle when turning the disc.
<b>The label tape is stuck.</b>		Do not press the handle when removing the label tape.
<b>The label won't print.</b>	Label tape is not installed.	Check if the label tape is inserted correctly.
	The output slot of the machine is clogged with label tape residue.	Use a pair of tweezers to remove the tape residue.
<b>How to prevent tape residue from accumulating inside the machine.</b>	The label tape is not cut properly and remains inside the machine. Do not cut it more than once. The label tape may get stuck between the input and output slots.	1. Cut the tape cleanly. 2. Open the rear lid to check the amount of adhesive tape remaining. When there is little label tape left, replace it immediately.

## Documents / Resources

	<a href="#">Memoking E975 Embossing Label Maker Machine</a> [pdf] User Guide E975 Embossing Label Maker Machine, E975, Embossing Label Maker Machine, Label Maker Machine, Maker Machine, Machine
---	--

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.