

memorex JC3719AA Bluetooth Record Player and Multimedia Center



# memorex JC3719AA Bluetooth Record Player and Multimedia Center Instruction Manual

[Home](#) » [memorex](#) » memorex JC3719AA Bluetooth Record Player and Multimedia Center Instruction Manual 

## Contents

- 1 memorex JC3719AA Bluetooth Record Player and Multimedia Center
- 2 SAFETY INSTRUCTIONS
- 3 FEATURES
- 4 SPECIFICATIONS
- 5 PRODUCT OVERVIEW
- 6 SETUP & BASIC OPERATION
- 7 RADIO OPERATION
- 8 AUX IN OPERATION
- 9 USB OPERATION
- 10 CARE & MAINTENANCE
- 11 TROUBLESHOOTING GUIDE
- 12 Documents / Resources
  - 12.1 References
- 13 Related Posts



memorex JC3719AA Bluetooth Record Player and Multimedia Center



## SAFETY INSTRUCTIONS

1. **Read Instructions:** All the safety and operating instructions should be read before the appliance is operated.
2. **Retain Instructions:** The safety and operating instructions should be well kept for future reference.
3. **Heed Warnings:** All warnings on the appliance and in the operating instructions should be adhered to.
4. **Follow Instructions:** All operating and use instructions should be followed.
5. **Power Sources:** The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
6. **Power-Cord Protection:** Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point at which they exit from the appliance.
7. **Overloading:** Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.
8. **Grounding or Polarization:** Precaution should be taken to insure that the grounding or polarization means of an appliance is not defeated.
9. **Severe weather:** In extreme weather such as lightning storm, hurricane, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the appliance due to unexpected power surges.
10. **Water and Moisture:** The appliance should not be used near water-for example, near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool, or a wet basement.
11. **Heat:** The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
12. **Object/Liquid Entry:** Care should be taken so that no object/liquid enter into the enclosure through openings.
13. **Ventilation:** The appliance should not be situated so that its location (on a bed, sofa, rug, or similar surface) or position (such as a bookcase or cabinet) interferes with its proper ventilation.
14. **Mounting:** The appliance should be mounted only as recommended by the manufacturer.
15. **Cleaning:** Only use a soft dry cloth to clean the appliance.
16. **Servicing:** The user should not attempt to service the appliance beyond that described in the user's operating instructions. All other servicing should be referred to qualified personnel.
17. **Replacement Parts:** When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer. Unauthorized substitutions may result in fire, electric shock or

other hazards.

18. **Damage Requiring Service:** The appliance should be serviced by qualified service personnel when: The power-supply cord or plug has been damaged. Objects have fallen into, or liquid has been spilled into the appliance enclosure. The appliance has been exposed to rain.
  - The appliance has been dropped, or the enclosure damaged.
  - The appliance does not appear to operate normally or exhibits a marked change in performance.
19. **Carts and Stands:** An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces cause the appliance and cart combination to overturn.
20. **Non-use Periods:** The power cord of the appliance should be unplugged from the outlet/The batteries should be removed when the appliance is to be left unused for a long period of time.

## FEATURES

The 7 in 1 Nostalgic Wooden Music Center features a great retro design and solid wood construction. With a 3 Speed turntable, CD & Cassette Player the Monument is ready to play all your music! The Dual Bluetooth feature allows streaming of your music to an external speaker. Record and playback all your favorite songs with the built in USB player & recorder. Also features built in Speakers & AM/FM Radio.

- 3-Speed record player with Auto Return will play 33 1/3, 45, 78 rpm records
- Bluetooth In connectivity allows you to stream music from another source up to 33 feet away.
- Bluetooth Out Connectivity allows you to stream vinyl playback through any external Bluetooth

 
### Speaker

- CD & Cassette Player and AM/FM Radio
- USB Input for Playback & One Touch Recording of your favorite Music
- Built in Stereo Speakers for playback convenience. Includes a 3.5mm Aux input for additional connectivity options

## SPECIFICATIONS


- Turntable Speed: 33 1/3, 45, 78 RPM
- FM Frequency Range: 87.5 – 108 MHz
- FM Station Memory: Up to 20
- AM Frequency Range: 520 – 1710KHz
- AM Station Memory: Up to 20
- Bluetooth® Version: V5.1
- Bluetooth® Transmission Distance: Up to 33 feet (10 Meters)\*
- Rated Frequency 2.4GHz
- Input: Aux In, USB
- Output: Line Out
- Built-in Speakers: 3" x 2
- Power Output: 10W x 2
- Power Source: AC/DC 100-240V 50-60Hz 9V/1.3A
- Accessories Included: 45 RPM Adaptor, Aux In Cable, Power Adaptor, User Manual

## PRODUCT OVERVIEW

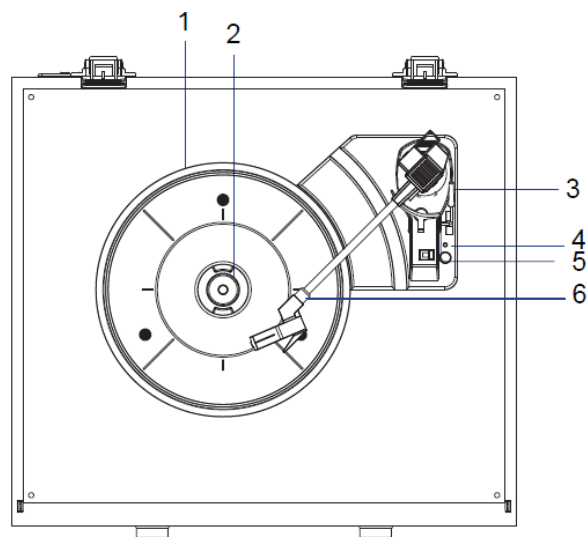

### Turntable

 
1. Turntable Platter
2. Turntable Spindle
3. Lift Lever
4. Speed Indicator
5. Speed Selector
6. Tone Arm

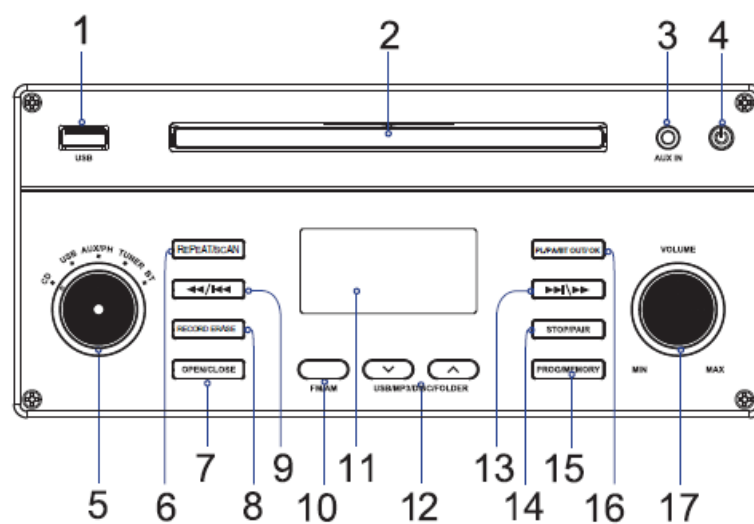

### Front Panel

1. USB Port
2. CD Door
3. AUX IN Jack
4. Power Button
5. Function Knob
6. Repeat/ Scan Button
7. Open/Close

 8. Record/Erase Button
9. Rewind / Previous Button
10. FM/AM Button
11. Display
12. USB/MP3/DISC/FOLDER Up/Down Button
13. Fast Forward / Next Button
14. Stop / Pair Button
15. Program / Memory Button
16. PL/PA/BT OUT/OK Button
17. Volume +/- Knob

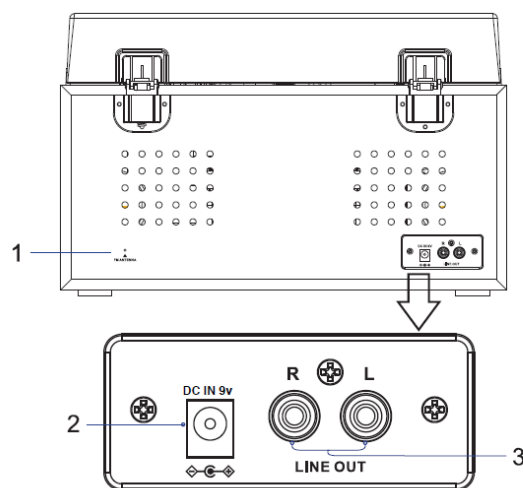

## Back Panel

1. FM Antenna

## Side Panel

2. DC IN Jack
3. Line Out Jack

## SETUP & BASIC OPERATION

### Essential Setup

1. Unpack the unit and remove all packaging materials.
2. Place the unit on a flat and level surface. The selected location should be stable and free from vibration.
3. Plug the power adaptor into the electrical outlet and connect other end to the back of the unit.
4. Press the & Button on the upper right corner of the front panel. The Display will light up in amber background, and the playback mode will appear on the display.
5. When the unit is playing music, the playback message will appear on the display.

### Common playback control

- Press the PL/PA/BT OUT/OK Button to pause / play the playback.

- Press the **\*\*/\*\*** or **\*\*^~** button to skip to next or previous track.
- To search for a part of track: press and hold the **«\*/\* or \*\*|»** button and release it when the part you want is found.
- Search for a folder, press the **USB/MP3/DISC/FOLDER Up/Down Button** to choose the folder.
- Press the **STOP/PAIR** button to stop playing.

**Note:** These controls do NOT always function in specified playback mode.

### Repeat function

- Press **REPEAT** button:
- one time, to repeat the current track.
- two times, to repeat the current folder.
- three times, to repeat all tracks of the disc.
- four times, to cancel the repeat function.

**Note:** This feature functions in CD and USB mode.

### Program function

This function enables you to set the playback of tracks into an ordered playlist.

1. Press the **STOP** button; then press the **PROG/MEMORY** Button to activate the program feature. The display will show “MEMORY”, “P01” and blinking “00”.
2. Press the **«/4 or >\*\»»** button to select your track.
3. Press the **PROG/MEMORY** button again to confirm.
4. Repeat the above steps to program other tracks.
5. After finished, press the **PL/PA/BT OUT/OK** button to start playback.
6. Press the **STOP/PAIR** button once to stop.
7. Press the **STOP/PAIR** button twice to erase the programmed track, and “MEMORY” will disappear from the display.

### Note:

- This tent can program up to 20 track mode.
- Turning the power off or switching to other playback modes by turning the Function Knob will automatically erase the programmed playlist.

## RADIO OPERATION

1. Set the Function Knob to **TUNER** position.



2. Press the AM/FM button to receive AM or FM signals. Note to extend the FM antennae when you want to listen to FM stations.
3. Press and hold the / or » button to search for available stations.
4. Adjust the volume by rotating the VOLUME +/- knob.
5. You can store your favorite station to the unit and listen it conveniently by following steps:
  - a. When you are listening to a radio channel, press PROG/MEMORY button, “MEMORY” will appear and blink on the display.
  - b. Press v or ^ button to select a number as the serial number of the current channel.
  - c. Press PROG/MEMORY button again to confirm.
  - d. Repeat the a-c steps to store other your favorite radio channels.

To listen the stored radio channels, just press PROG/MEMORY button, then use v or ^ button to select the serial number of your favorite radio channel, press PROG/MEMORY button again to confirm. Then the selected channel starts to play.

**You can improve the signal receiving strength by:**

- Extending the FM Antenna to a higher position.
- Turn the unit to face different directions.
- Move the unit to a different place.
- Connect the FM Antenna to your outdoor antenna.

**CD OPERATION**

1. Set the Function Knob to CD position.



2. Press the OPEN/CLOSE button to open the disc tray.
3. Place your desired audio CD on the tray with its label side up.
4. Press the OPEN/CLOSE button to close the tray.
5. The CD will start to play automatically.

 
**Note:**

- Do not pull or push the disc tray manually.

- Ensure the disc is placed in the center of the disc tray with its label side up.
- Be sure the inserted disc is an Audio CD / MP3 CD, not DVD or any other type of disc.

## AUX IN OPERATION

1. Insert one end of the 3.5mm AUX in cable into the AUX IN Jack on the upper right of the front control panel, the other end to your playing device.

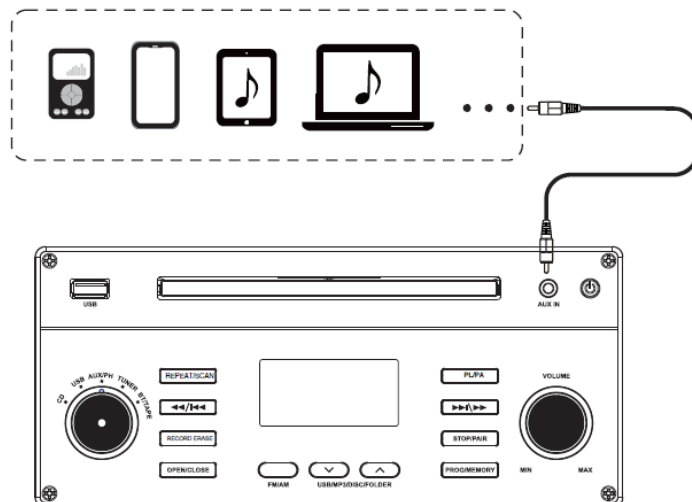

2. Set the Function Knob to AUX/PH position.



3. Start to play your favorite music on your playing device.

## USB OPERATION

1. Set the Function Knob to USB position.



2. Insert a USB device (only with .mp3 audio files) to the USB Port.
3. The unit will start playback automatically.
4. Use the volume and control buttons to control playback.

**Note:** control buttons may not work with all USB devices due to manufacturing differences.

## Recording with USB

With this function you can record music from your player onto a USB device in mp3 format.



1. Insert a USB device into the USB port.
2. Play music in the CD, AUX, Phono, BT or Tape mode.
3. Press the RECORD/ERASE button repeatedly until **USB REC** starts blinks in the lower left corner of the display (the information on the display varies with the playback mode when RECORD/ERASE button is pressed each time). Now the recording process starts.
4. Press the STOP/PAIR button to stop recording, and “END-REC” will appear on display. Now the recording process ends.

**Note:** If you want to listen the latest record track, just press «/ button if it does not start to play automatically.

### Erasing Files on the USB Device

 
1. Insert a USB device into the USB port and play the song you want to delete.
2. Press and hold the RECORD/ERASE button for about two seconds, “ERA” with blinking, and “ONE” will appear on the display.
3. Press the / or »\* button to select:
  - a. ERA ONE – erase the current track
  - b. ERA FOLD – erase all the audio tracks in the entire folder
  - c. ERA ALL – erase all the audio tracks on the USB device
4. Press the RECORD/ERASE button again to confirm. “ERA WAIT” will appear, and erasing process starts.
5. When all tracks and folders erased, “NO SONG” will be shown on display.

### VINYL RECORD OPERATION

1. Press the Power Button to turn on the unit and open the cover.
2. Set the Function Knob to “AUX/PH” position.




3. Detach the stylus protector by pressing both sides and pulling straight in the direction shown.

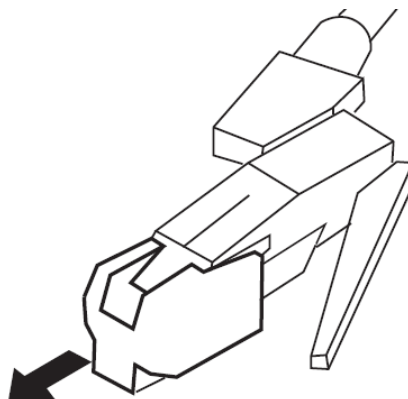

4. Place a vinyl record on the Turntable by aligning the Turntable Spindle to the record hole.
5. Slide the Speed Selector to 33, 45 or 78 to match the play speed of the record.

 6. Unlock the Hold Down Clip.

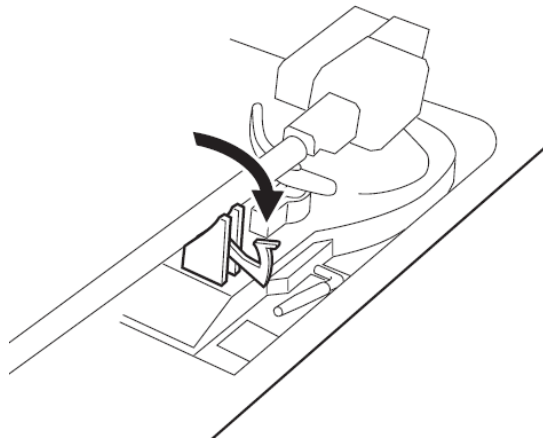

7. Raise the Cue Lever to lift the Tonearm off the Tonearm support.
8. Gently move the Tonearm to the edge of the record (or the starting point of a track).
9. Release the Cue Lever to put the Tonearm onto the record. Turntable will begin playback. Then the panel will show "PHONO" and the related speed.
10. Turn the VOLUME +/- Tuner to adjust the volume. To pause/stop during playback, raise the Cue Lever to lift the Tonearm off the record.
11. When finished listening, the Cue Arm will return to the support automatically. What you have to do is lock the Hold Down Clip.

**Note:**

- Pull out the Aux in cable before playing a vinyl, or the unit will switch to AUX mode automatically.
- Put the 45 RPM Adapter across the Turntable Spindle firstly if playing a 45 RPM record.
- After you play 78 RPM vinyl record, it will stop in about 120 seconds.

**BLUETOOTH® OPERATION**

With the Bluetooth® In function, you can play music from an external Bluetooth® device on the speakers of this unit.

1. Set the Function Knob to BT/TAPE position. "BT" will blink on display.



2. Turn on your external Bluetooth device and pair with the "MX-TT700" device.
3. When the Bluetooth connection is established, you will hear a short confirmation sound from the unit, and "BT" will stop blinking on the display.
4. Start to play your favorite music on the connected device.

**Note:** Make sure the cassette tape not inserted in the unit, or it will be TAPE mode.

## **Bluetooth® Transmitter**

You can play music from this unit on external Bluetooth® speakers, soundbar, earbuds, or headphones.

1. Disable the Bluetooth® function on all devices nearby (e.g. amplifier, soundbar, wireless headphone, smart phone, iPad).
2. Play music in the CD, AUX, Phono, USB, Tuner, or Tape mode.
3. Press the PL/PA/BT OUT/OK Button to activate Bluetooth Transmitter function.
4. Power on your Bluetooth® speakers or headphones and activate its Bluetooth pairing mode.
5. After a few seconds, a beep will be heard, which means your turntable will connect automatically.
6. To select desire Bluetooth, press the previous or next button and press the PL/PA/BT OUT/OK button. To change volume playback, turn the volume knob on the unit or adjust the volume on your Bluetooth® device.
7. To turn off BT OUT mode, press and hold the PL/PA/BT OUT/OK Button again.

## **Bluetooth® Scan**

1. Disable the Bluetooth® function on all devices nearby (e.g. amplifier, soundbar, wireless headphone, smart phone, Irad).
2. Play music in the CD, AUX, Phono, USB, Tuner, or Tape mode.
3. Press and hold the Repeat/ Scan Button to activate Bluetooth Scan function.
4. Power on your Bluetooth® speakers or headphones and activate its Bluetooth pairing mode. After a few seconds, a beep will be heard, which means your turntable will connect automatically.
5. To select desire Bluetooth, press the Previous or Next button and press the PL/PA/BT OUT/OK button. To change volume playback, turn the volume knob on the unit or adjust the volume on your Bluetooth® device.

## **CARE & MAINTENANCE**

Always keep the turntable clean. If the surface of the unit gets dirty, wipe with a soft dry cloth or use a diluted mild liquid soap. Be sure to remove any excess liquid completely. Do not use thinner, benzine or alcohol as they may damage the surface of the unit. Allow the surface of the unit to dry completely before using.

### **Beware of condensation**

When the unit (or a record/disc) is moved from a cold to warm place, or used after a sudden temperature change, condensation may form; vapor in the air could condense on the internal mechanism, making correct operation erratic or impossible. To prevent this, or if this occurs, leave the unit turned off for one or two hours. The unit will stabilize at the temperature of its surroundings.

 
### **Using Compact Discs**

Discs which can be played on this unit:

- Conventional audio CD

Always place the disc on the disc tray with the label side up. (Compact discs can be played or recorded only on one side.)

- To remove a disc from its storage case, press down on the center of the case and lift the disc out, holding it carefully by the edges. Should the disc become dirty, wipe the surface radially (from the center hole outward towards the outer edge) with a soft, dry cloth.

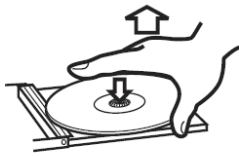

How to remove the disc

 


How to hold the disc



How to clean the disc

- Never use such chemicals as record sprays, antistatic sprays or fluid, benzine or thinner to clean the discs. Such chemicals will do irreparable damage to the disc's plastic surface.
- Discs should be returned to their cases after use to avoid dust and scratches that could cause the laser pickup to "skip."
- Do not expose discs to direct sunlight or high humidity and temperature for extended periods. Long exposure to high temperatures will warp the disc.
- Do not play any disc that is warped, deformed or damaged. Playing such discs may cause irreparable harm to the playing mechanisms.
- CD-R and CD-RW discs are more sensitive to the effects of heat and ultraviolet rays than ordinary CDs. It is important that they are not stored in a location where direct sunlight will fall on them, and away from sources of heat such as radiators or heat-generating electrical devices.
- Printable CD-R and CD-RW discs are not recommended, as the label side might be sticky and damage the unit.
- Do not stick papers or protective sheets on the discs and do not use any protective coating spray.
- Use a soft oil-based felt-tipped pen to write the information on the label side. Never use a ball-point or hard-tipped pen, as this may cause damage to the recorded side.
- Never use a stabilizer. Using commercially available CD stabilizers with this unit will damage the mechanisms and cause them to malfunction.
- Do not use CDs with an irregular shape (octagonal, heart shaped, business card size, etc.). CDs of this sort can damage the unit:

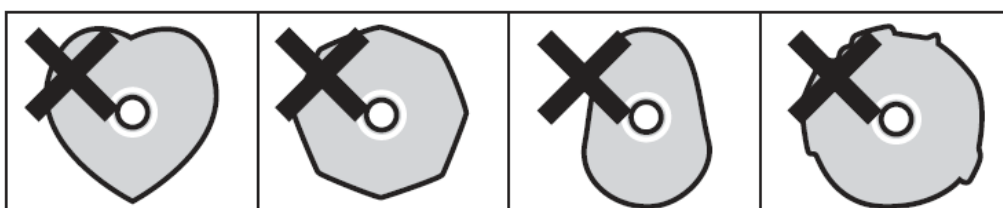

- If you are in any doubt as to the care and handling of a CD-R/CD-RW disc, read the precautions supplied with the disc, or contact the disc manufacturer directly.


### Head Maintenance

 The head and tape path should be cleaned and demagnetized periodically. Please use a cassette type head cleaning tape and demagnetizer. For specific details on the proper use of either item, please read each item's instruction manual.


### Maintaining Vinyl Records

- Do not touch the record's grooves. Only handle records by edges or label.
- Make sure your hands are clean. Skin oils from even clean hands can leave a residue on the record surface

that will gradually deteriorate the quality of your record. Keep your records away from dust. Store in a cool, dry place.

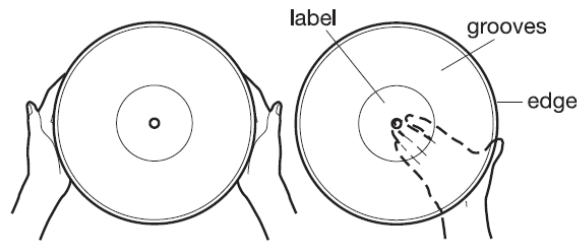

- Keep records in sleeves and jackets when not in use to avoid dust and scratches.
- Store records upright on edges. Records stored horizontally will bend and warp. Do not expose records to direct sunlight or high humidity and temperature. Long exposure to high temperatures will warp records.
- Do not store records in the trunk of a car.
- Store records in an area with a stable temperature and low humidity.

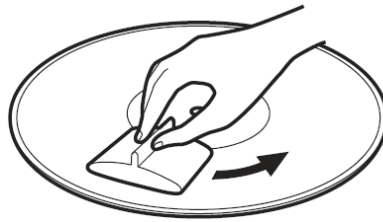 

- Should the record become dirty, gently wipe surface in a circular motion, using a soft anti-static cloth.

### How to Replace the Stylus

 
The stylus should last about 50 hours under normal use. However, it is recommended that the stylus be replaced as soon as you notice a change in sound quality. Prolonged use of a worn-out stylus may damage the record. Wear and tear on the stylus will be accelerated when playing 78 RPM records. The higher speed of 78 RPM records can wear the stylus more quickly.

### Caution:

- Do not bend the stylus.
- To avoid injury, do not touch the needle.
- Turn off the unit's power before you replace the stylus.
- Keep out of the reach of children.
- Handle with care, as the stylus is delicate. Use of a bent or broken stylus may damage the record and cause the turntable to malfunction.
- Do not expose stylus to extreme heat.
- Contact a qualified repair company if you experience difficulty in changing the stylus.


### Removing an Old Stylus

1. Set a screwdriver at the tip of the stylus and push down to the direction "A".
2. Pull the stylus out toward direction "B"

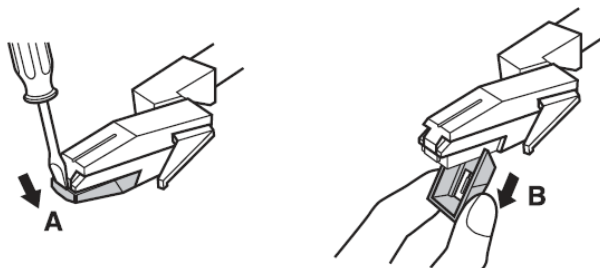

## Installing a New Stylus

 1. Hold the tip of the stylus and insert the other edge by pressing toward direction "C".
2. Push the stylus up toward direction "D" until it locks at the tie.

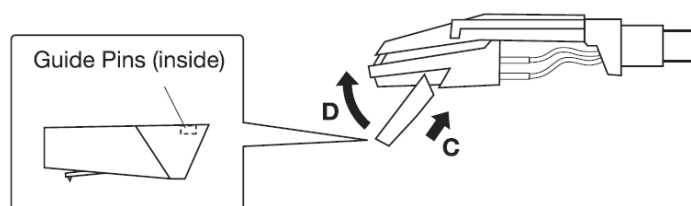






## TROUBLESHOOTING GUIDE


In case of trouble with the unit, please look through the problems below and see if you can solve them yourself before calling your dealer.

Function	Problem	Solution
General	No power	<ul style="list-style-type: none"> <li>Check the connection to the AC power source. Make sure the AC source is not a switched outlet and if it is, turn the switch on. Make sure there is power to the AC outlet by plugging another item such as a lamp or fan.</li> </ul>
	No sound	<ul style="list-style-type: none"> <li>Adjust the volume</li> <li>Connect the AUX IN cables into the correct jack.</li> </ul>
	The sound has interference	<ul style="list-style-type: none"> <li>The unit is too close to a TV set or similar appliance. Relocate the unit further away from them or turn the other appliances off.</li> </ul>
Radio	Cannot listen to any station or signal is weak	<ul style="list-style-type: none"> <li>Tune in the station properly.</li> <li>If a TV is near the unit, turn it off.</li> <li>Rotate the unit or antenna wire for the best reception position.</li> </ul>
Record Player	Will not play	<ul style="list-style-type: none"> <li>Turn the VOLUME KNOB clockwise.</li> <li>Loosen the screw and detach the stylus guard. The stylus guard is a white plastic cover that protects the stylus during transportation. Failing to remove this guard will not allow the needle to contact the grooves of the record and no sound will be heard!</li> <li>If the stylus is worn-out, change the stylus. Select the correct playback speed.</li> </ul>
	Sound skips	<ul style="list-style-type: none"> <li>Place the unit on a stable surface to avoid vibration and shock. Make sure the unit is level both front to back and side to side.</li> <li>Clean the surface of the record/disc.</li> <li>Do not use scratched, damaged or warped records/discs.</li> </ul>
CD Player	Will not play	<ul style="list-style-type: none"> <li>Turn the VOLUME knob clockwise and rotate the FUNCTION KNOB to "CD".</li> <li>Load a disc with the playback side facing down.</li> <li>If the disc is dirty, clean the surface of the disc.</li> <li>A blank disc has been loaded. Load a pre-recorded disc.</li> <li>Depending on the disc, it may not be possible to play back CD-R/CD-RW discs. Try again with another disc.</li> <li>You cannot play back unfinalized CD-R/CD-RW discs. Finalize and try again.</li> </ul>
Bluetooth®	Will not play	<ul style="list-style-type: none"> <li>Device is NOT paired properly; turn OFF Bluetooth, turn ON Bluetooth and repair device.</li> </ul>
AUX In	No Sound	<ul style="list-style-type: none"> <li>Ensure external player works when not connected via AUX cable.</li> <li>Ensure AUX In cables are securely connected and not damaged.</li> <li>Increase the volume level.</li> </ul>

 - Accessories:
- AC adaptor,
- 45 RPM adapter,
- Aux in cable,
- Instruction Manual

	The symbol indicates AC voltage
	The symbol indicates DC voltage
	For indoor use only
	The symbol indicates energy efficiency marking
	The symbol indicates polarity of d.c. power connector

 Documents / Resources

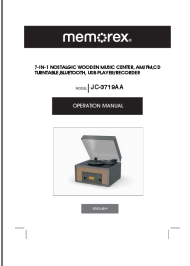	<p><a href="#">memorex JC3719AA Bluetooth Record Player and Multimedia Center</a> [pdf] Instruction Manual</p> <p>JC3719AA Bluetooth Record Player and Multimedia Center, JC3719AA, Bluetooth Record Player and Multimedia Center, Record Player and Multimedia Center, Player and Multimedia Center, Multimedia Center, Center</p>
---	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.