

MEMORY GAME

Contents [[hide](#)]


- 1 [MEMORY GAME 43545292 Beat Box Machine Instructions](#)
- 2 [INSTALLING THE BATTERIES:](#)
- 3 [How to use](#)
- 4 [Documents / Resources](#)
 - 4.1 [References](#)

MEMORY GAME 43545292 Beat Box Machine Instructions



INSTALLING THE BATTERIES:

1. Open the battery compartment.
2. Insert 3 x 1.5V AA batteries with the correct + and – polarities.
3. Close the cover.

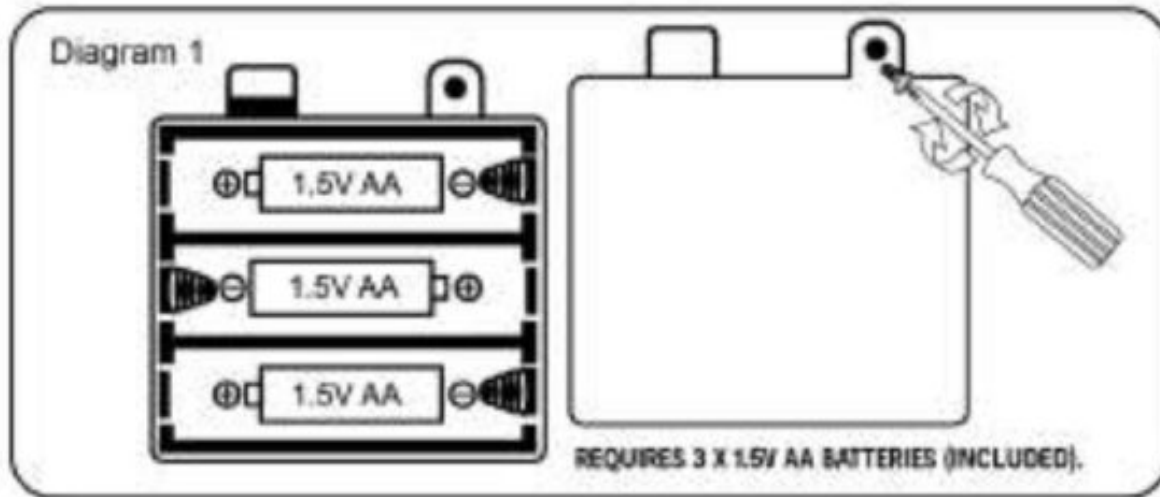

How to use

Slide the ON/OFF switch of the product to the ON position. Press and hold the switch mode button to select one of the following 4 game modes, press the start button to start the game.

Note: The game will start at level 1 by default, and you can select the corresponding difficulty level by pressing the level button before starting the game.

(Only Memory and Whack-a-mole games can be leveled)



Memory game

1. The outer 6 coloured buttons will play a sound and light up randomly.
2. Follow the correct order and press the relevant button accordingly. You have 8 seconds to complete the game.
3. If the coloured button is selected in the incorrect sequence or not played in required time then the player will receive a warning sign and the game is over.
4. Press the start button to commence a new game as required.

Whack-a-mole

1. The outer 6 coloured buttons will play a sound and light up randomly.
2. Follow and press the buttons as fast as you can.

Follow the light

1. The outer 6 coloured buttons will light up randomly.
2. Follow and press the buttons.

Music play

Press the buttons to create your own music.

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED BY AN ADULT. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR AN EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

WARNING: CHOKING HAZARD
SMALL PARTS. NOT FOR CHILDREN UNDER 3 YEARS.

WARNING: THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITISED INDIVIDUALS.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

THE BATTERIES INCLUDED ARE FOR DEMONSTRATION PURPOSES ONLY. PRODUCT MAY VARY SLIGHTLY FROM IMAGE SHOWN. PLEASE KEEP PACKAGING FOR FUTURE REFERENCE.

K: 43-545-292 | T: 70-989-809

MADE IN CHINA


CUSTOMER SERVICE:

KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567



Read More About This Manual & Download PDF:

Documents / Resources

	MEMORY GAME 43545292 Beat Box Machine [pdf] Instructions 43545292, 43545292 Beat Box Machine, 43545292, Beat Box Machine, B ox Machine, Machine
---	---

References

- [User Manual](#)

MEMORY
GAME

43545292, 43545292 Beat Box Machine, Beat Box Machine, Box Machine, Machine, Memory
Game

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.