



Menuett 000728 Toster Maker Machine Instruction Manual

[Home](#) » [Menuett](#) » Menuett 000728 Toster Maker Machine Instruction Manual 

Contents

- [1 Menuett 000728 Toster Maker Machine](#)
- [2 SAFETY INSTRUCTIONS](#)
- [3 IMPORTANT](#)
- [4 TECHNICAL DATA](#)
- [5 DESCRIPTION](#)
- [6 USE](#)
- [7 MAINTENANCE](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)



Menuett 000728 Toster Maker Machine



Important! Read the user instructions carefully before use. Save them for future reference.

SAFETY INSTRUCTIONS

Read the operating instructions carefully before use. Save them for future reference.

- Always follow these basic safety instructions when using electrical appliances.
- Check that the mains voltage corresponds to the rated voltage on the type plate.
- Do not immerse the appliance, the power cord or plug, in water or any other liquid -risk of electric shock.
- This appliance can be used by children from eight years and upwards and by persons with physical, sensorial or mental disabilities, or persons who lack experience or knowledge, if they are supervised or receive instructions concerning the safe use of the appliance and understand the risks involved with its use. Do not allow children to play with the appliance.
- Pull out the plug before cleaning and when the appliance is not in use.
- Allow the appliance to cool before cleaning it and/or putting it away.
- Do not use the appliance if it is damaged or not working properly, or if the power cord or plug are damaged. A damaged power cord must be replaced by an authorised service centre, or other qualified personnel, to ensure safe use.
- Do not allow the power cord to hang over the edge of a table or worktop, or to come into contact with hot surfaces.
- Do not put the appliance on, or near a hot stove, or in a hot oven.
- Never use the appliance for anything other than its intended purpose.
- Do not put overlarge slices of bread, or metal objects, in the appliance -this could cause a fire or electric shock. • Do not place the appliance near curtains, or other flammable materials -fire risk Do not leave the appliance unattended when it is switched on.
- Do not use accessories other than those recommended by the manufacturer- risk of personal injury.
- Place the appliance on a level, stable surface.
- The appliance is not intended to be controlled by an external timer or a separate remote control.
- Do not attempt to take out bread when the appliance is switched on.

- Be careful when taking out the bread after toasting -risk of getting burned.
- Do not use the appliance outdoors.
- The appliance is only intended for domestic use.
- The outside of the appliance gets hot when in use. Do not touch hot parts -risk of burn injuries.

IMPORTANT

- Press the O button immediately if the toaster starts to smoke.
- Remove any plastic, paper etc. from the bread before putting it in the toasting slot.
- Do not toast bread containing ingredients that can melt or run when they get hot.
- If the bread gets stuck, pull out the plug before removing the bread. Be careful not to damage the heater element or the ejector mechanism.
- The toasting slots are intended for regular, smooth slices of bread. Do not attempt to toast odd shaped bread or buns.

TECHNICAL DATA

Rated voltage	230 V ~ 50 Hz
Output	1500 W
Power cord	900 mm
Dimensions	282x186x273 mm

DESCRIPTION



1. Defrosting
2. Rewarming

3. Stop
4. Setting the toasting time

USE

Using for the first time

The first time the toaster is used it may emit some fumes. This is completely normal and soon stops. For th is

reason, use the toaster without bread for the first time. After this the toaster can be used as normal.

Use

1. Plug the toaster into a powerpoint.
2. Put the bread in the toasting slots. Up to four slices of bread can be toasted at once. The toaster has two separate units, which can be used together or separately.

NOTE:

Check that the crumb trays are properly inserted before use.

3. Turn the knob to the required toasting setting. Low setting (position 1) gives light toasting, high setting (position 7) gives darker toasting. The middle setting gives a golden brown toasting.

NOTE:

One slice is toasted more that two slices with the same setting. If the toaster is used continuously the following slices are toasted more than the first with the same setting.

4. Pull the toasting slot handle down until the status lamp on the O button goes on. When the bread has toasted to the set toasting setting the handle comes up automatically. You can pull up the handle a little to more easily take out the bread.

NOTE: The toasting only starts when the handle is pulled all the way down.

5. Keep an eye on the toasting. Press the O button to stop the toasting.
6. Press the* button if the bread is frozen. The corresponding status lamp comes on and the bread is toasted to the set toasting setting.
7. Press the button to warm up cold toast. The corresponding status lamp comes on. The bread is warmed for a set time, after which the handle comes up and the warming stops.

MAINTENANCE



NOTE: Pull out the plug and allow the toaster to cool before cleaning.

- Wipe the outside of the toaster with a soft, dry cloth. Never use steel wool or the equivalent.
- Pull out and empty the crumb trays. If the toaster is used a lot the crumb trays should be emptied at least once a week. Check that the crumb trays are properly inserted before use.

