



## Menuett 002370 Toaster Maker Machine Instruction Manual

[Home](#) » [Menuett](#) » Menuett 002370 Toaster Maker Machine Instruction Manual 

### Contents

- [1 Menuett 002370 Toaster Maker Machine](#)
- [2 SAFETY INSTRUCTIONS](#)
- [3 TECHNICAL DATA](#)
- [4 DESCRIPTION](#)
- [5 Use](#)
- [6 MAINTENANCE](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)



**Menuett 002370 Toaster Maker Machine**



## SAFETY INSTRUCTIONS

- Check that the mains voltage corresponds to the rated voltage on the type plate.
- Do not touch hot parts. Use the handle and knobs.
- Do not immerse the toaster or the power cord or plug, in water or any other liquid – risk of electric shock.
- Keep the toaster under careful supervision when it is used by, or near children.
- Pull out the plug before cleaning and when the toaster is not in use.
- Do not use the toaster if it is damaged or not working properly, or if the power cord or plug are damaged. A damaged cord or plug must be replaced by an authorized service centre or qualified person to ensure safe use.
- Do not allow the power cord to hang over the edge of a table or worktop, or to come into contact with hot surfaces.
- Do not put the toaster on or near a hot stove or in a hot oven.
- Never use the toaster for anything other than its intended purpose.
- Do not put over large slices of bread, or metal objects, in the toaster-this, this could cause a fire or electric shock.
- Do not place the toaster near curtains, or other flammable materials -fire risk Do not leave the toaster unattended when it is switched on.
- Do not use accessories other than those recommended by the manufacturer -risk of personal injury.
- Do not attempt to take out the bread when the toaster is switched on.
- Be careful when taking out the bread after toasting – the risk of getting burned.
- The plug must be plugged into a correctly installed earthed mains socket.
- The toaster is not intended to be controlled by an external timer or a separate remote control.
- This appliance can be used by children from eight years and upwards and by persons with physical, sensorial or mental disabilities, or persons who lack experience or knowledge, if they are supervised or receive instructions concerning the safe use of the appliance and understand the risks involved with its use.

- Do not allow children to play with the toaster.
- Do not use the toaster outdoors.
- The toaster is intended for household use.
- Remove any plastic or paper etc. from the bread before putting it in the toasting slots.
- Do not toast bread containing ingredients that can melt or run when they get hot.
- Save these instructions.

### **WARNING!**

When toasting small slices of bread there is a risk of getting burned when taking out the bread from the toaster.

### **Symbols**


- Safety class 11. Double insulation.
- Approved as per applicable directives.
- Recycle discarded products in accordance with local regulations.

### **TECHNICAL DATA**

- Rated voltage 230 V ~ 50 Hz
- Output 700W
- Safety class ii

### **DESCRIPTION**

1. Bread slot handle
2. Knob to set toasting time
3. Button to stop the toasting (Cancel)
4. Crumb tray
5. Crumb tray handle **FIG. 1**

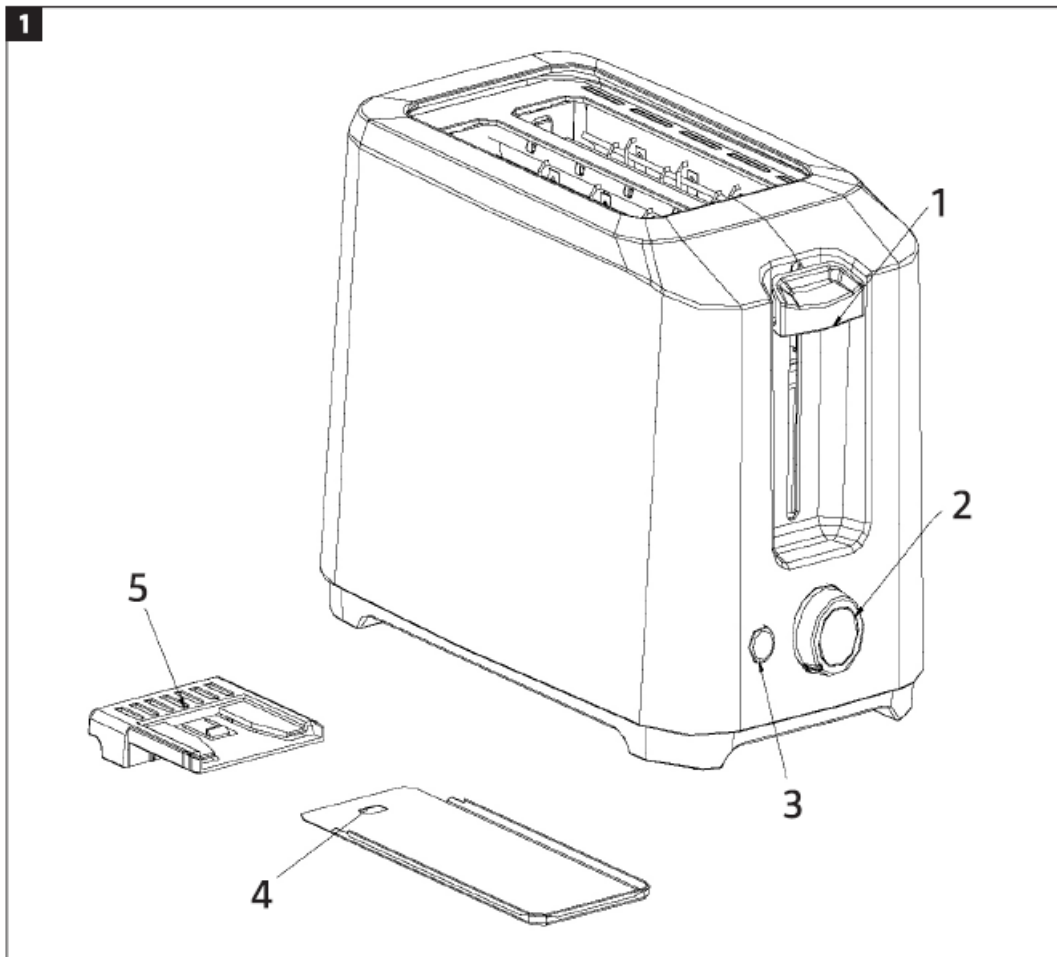

## Use

### Before using it for the first time

The first time the toaster is used it may smoke a little. This is completely normal and soon stops. We recommend using the toaster without any bread first.

### Toasting

1. Check that the crumb tray is properly inserted before use.
2. Put the bread in the toasting slots. Two slices of bread can be toasted at the same time. The toasting slots are intended for regular, smooth slices of bread.
3. Plug the plug in a PowerPoint.
4. Turn the knob to the required toasting setting. There are 7 settings. The low setting gives light toasting, the high setting gives darker toasting.
5. Push the toasting slot handle down to switch on the status light. The toasting starts. When the bread has toasted to the set toasting time the bread slot handle comes up automatically so that the bread can be taken out. The handle only locks in its bottom position if the plug is plugged into a PowerPoint.
6. Keep an eye on the toasting. The toasting can be stopped at any time by pushing the Cancel button.

### NOTE:

- One slice is toasted with more than two slices with the same setting.
- If the toaster is used continuously the subsequent slices are toasted more than the first ones with the same


setting.

- Press the Cancel button immediately if the toaster starts to smoke.
- If the bread gets stuck, pull out the plug before removing it. Be careful not to damage the heater element or the ejector mechanism.

## MAINTENANCE

- Pull out the plug before cleaning and when the toaster is not in use.
- Wipe the outside of the toaster with a soft, dry cloth. Never use steel wool, detergent, or the equivalent.
- Pull out the crumb tray and empty it. Empty the crumb tray at least once a week if the toaster is used a lot.  
Check that the crumb tray is properly inserted before use.
- The power cord can be wound around the bottom of the toaster before putting it away.

## Documents / Resources

 <p>The image shows the front of a white Menuett 002370 Toaster Maker Machine. It has a digital display and several buttons. Below the image is a table of contents in German.</p>	<p><a href="#">Menuett 002370 Toaster Maker Machine</a> [pdf] Instruction Manual 002370, Toaster Maker Machine, Toaster Maker, 002370, Toaster</p>
--	--