




## MENUETT 010196 HAND BLADER Instructions

[Home](#) » [Menuett](#) » MENUETT 010196 HAND BLADER Instructions 





### 010196 HAND BLADER OPERATING INSTRUCTIONS



#### **HAND BLENDER**

**Important!** Read the user instructions carefully before use. Save them for future reference.  
(Translation of the original instructions).

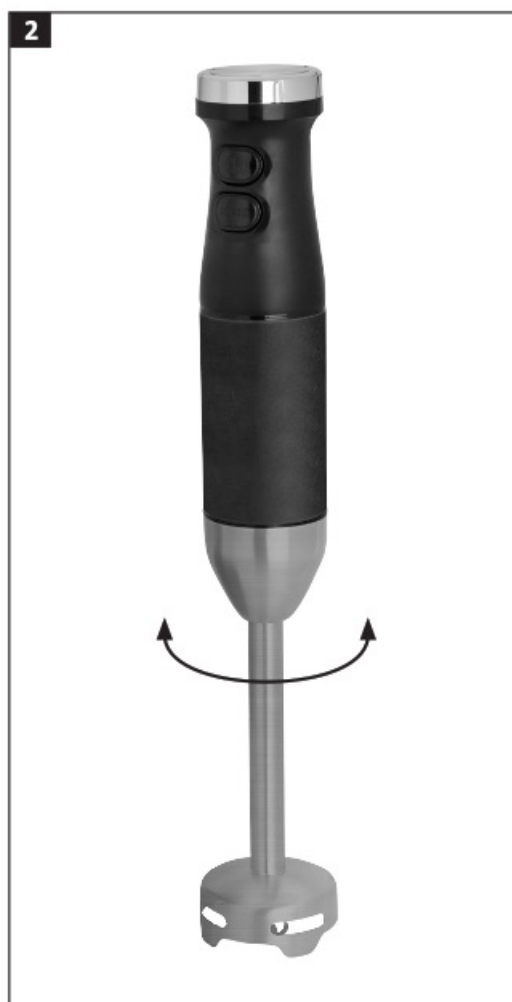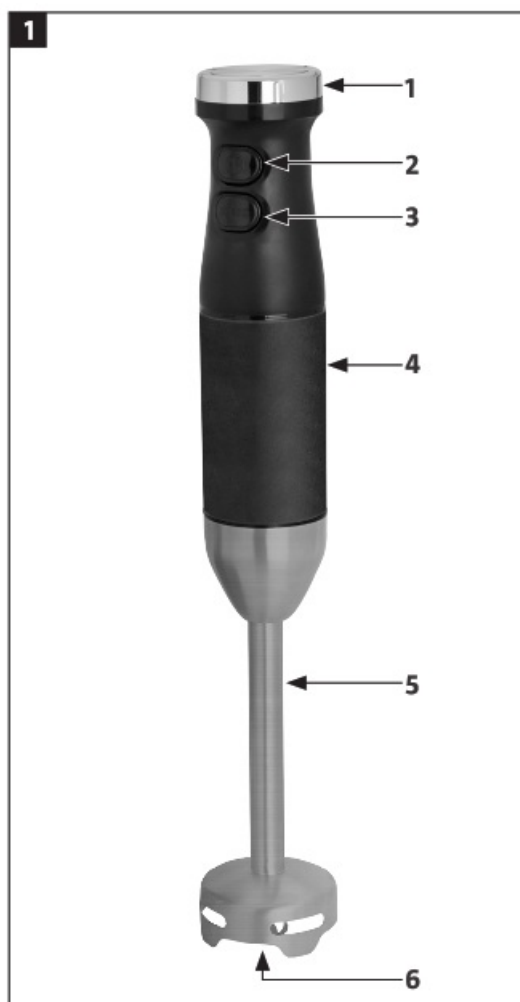

## Contents




- [1 SAFETY INSTRUCTIONS](#)
- [2 TECHNICAL DATA](#)
- [3 DESCRIPTION](#)
- [4 USE](#)
- [5 MAINTENANCE](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

## SAFETY INSTRUCTIONS

- Read all the instructions carefully before use.
- Check that the mains voltage corresponds to the rated voltage on the type plate.
- Do not use the product if it is damaged or not working properly, or if the power cord or plug is damaged. Take the product to an authorized service center to be checked, repaired, or adjusted.
- Switch off the product, pull out the plug and wait until all moving parts have completely stopped before leaving the product unattended, and before installation/dismantling and/or cleaning.
- Do not allow the power cord to hang over the edge of a table or worktop, or to come into contact with hot surfaces.
- Never immerse the power cord, plug or product in water or any other liquid —the risk of electric shock.
  - Keep the product under careful supervision when it is used by, or near children or persons with functional disorders.

- Avoid contact with moving parts.
- Keep your hands and utensils outside of the beaker when the product is in use, otherwise, there is a risk of serious personal injury and/ or material damage. A rubber scraper or the equivalent can be used, but only when the product is not running.
- Never attempt to chop ice in the product, or mix hard, dry substances, this will make the blades blunt.
- Do not use any accessories other than those recommended by the appliance manufacturer. The use of other accessories can result in fire, electric shock, and/or personal injury.
- Never use the product for anything other than the purpose it was designed for.
- This product can be used by children from 8 years and upwards and by persons with physical, sensorial, or mental disabilities, or persons who lack experience or knowledge if they are supervised or receive instructions concerning the safe use of the product and understand the risks involved with its use. Do not allow children to play with the product. Do not allow children to clean or maintain the product without supervision.
- Keep children under supervision to make sure they do not play with the product.
- Switch off the product and pull out the plug after use. Wait until all moving parts have completely stopped before taking it apart.
- The blades are very sharp —the risk of cut injury.
- Do not touch the edges of the blades when handling or cleaning.
- Incorrect use can result in the risk of personal injury and/or material damage.
- The product is intended for household use, or for use in staff rooms, hotel rooms, or other similar places.
- Do not allow children to use the product. Store the product and its power cord out of the reach of children.
- Do not allow children under 8 to clean or maintain the product. Children over 8 can clean or maintain the product under supervision. Store the product and its power cord out of the reach of children less than 8 years old.

## SYMBOLS

	Read the instructions.
	Approved in accordance with the relevant directives.
	Recycle discarded products in accordance with local regulations.

## TECHNICAL DATA

Rated voltage.....230 V, 50-60 Hz

Output..... 600 W

Cord length.....90 cm

## DESCRIPTION

1. Speed control 2. Sutton for low speed 3. High-speed button (turbo button)	4. Motor unit 5. Blending arm 6. Blades
--	---

FIG. 1

## USE

- Before using it for the first time, clean the blender in accordance with the instructions for quick cleaning.
- Do not run the blender with no load for more than 15 seconds.

## IMPORTANT

**Be careful, the blades are very sharp. Switch off the blender and pull out the plug before fitting/removing accessories.**

## USING THE HAND BLENDER II

1. Fit the blending arm on the motor unit by turning it anticlockwise. Release by turning it clockwise.
2. Plug in the plug.
3. Put the blender in the food and press the button for low speed or the button for high speed to start.
4. Switch off the blender by releasing the button.
5. Cut the food into small pieces and put them in the beaker. No more than 280 g can be processed at once and no more than 420 ml of water can be added.

FIG. 2

## NOTE

- Turn the speed dial clockwise for faster speed or anticlockwise for slower speed. The speed can only be controlled with the dial when the button for low speed is pressed.
- Do not run the blender for more than one minute. Allow it to cool for three minutes before using it again.

## MAINTENANCE

### CLEANING

1. Pull out the plug and remove the hand blender.
2. Clean the blender under running water. Leave the blending arm to stand, so that all the water runs out. The blending arm is dishwasher safe.
3. Wipe the motor unit with a damp cloth. 4. Wipe thoroughly dry.

## WARNING!

- Do not immerse the blender in water, this can ruin the lubrication.
- Never immerse the blender, the power cord, or the plug in water or any other liquid — the risk of electric shock.
- Do not use detergents or abrasive agents.
- Be careful, the blades are very sharp.

### Quick cleaning

The accessories can be quickly cleaned by running them for a few seconds in a bowl with a little water.



**Care for the environment!**

**Recycle discarded products in accordance with local regulations.**

**Jula reserves the right to make changes.**


**For the latest version of operating instructions, see [www.jula.com](http://www.jula.com)**

**JULA AB, BOX 363, SE-532 24 SKARA**

**2022-01-07**

**©Jula AB**

### Documents / Resources

	<p><b><a href="#">MENUETT 010196 HAND BLADER</a></b> [pdf] Instructions</p> <p>010196, HAND BLADER, BLADER</p>
---	--