



Menuett 810158 3 In 1 Multi-Chopper Instruction Manual

[Home](#) » [Menuett](#) » Menuett 810158 3 In 1 Multi-Chopper Instruction Manual 

Contents

- [1 Menuett 810158 3 In 1 Multi-Chopper](#)
- [2 DESCRIPTION](#)
- [3 USE](#)
- [4 MAINTENANCE](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)




Menuett 810158 3 In 1 Multi-Chopper



DESCRIPTION

- 3 interchangeable blades included
- 1.2 l bowl included
- Non-slip base
- Soft, non-slip grip

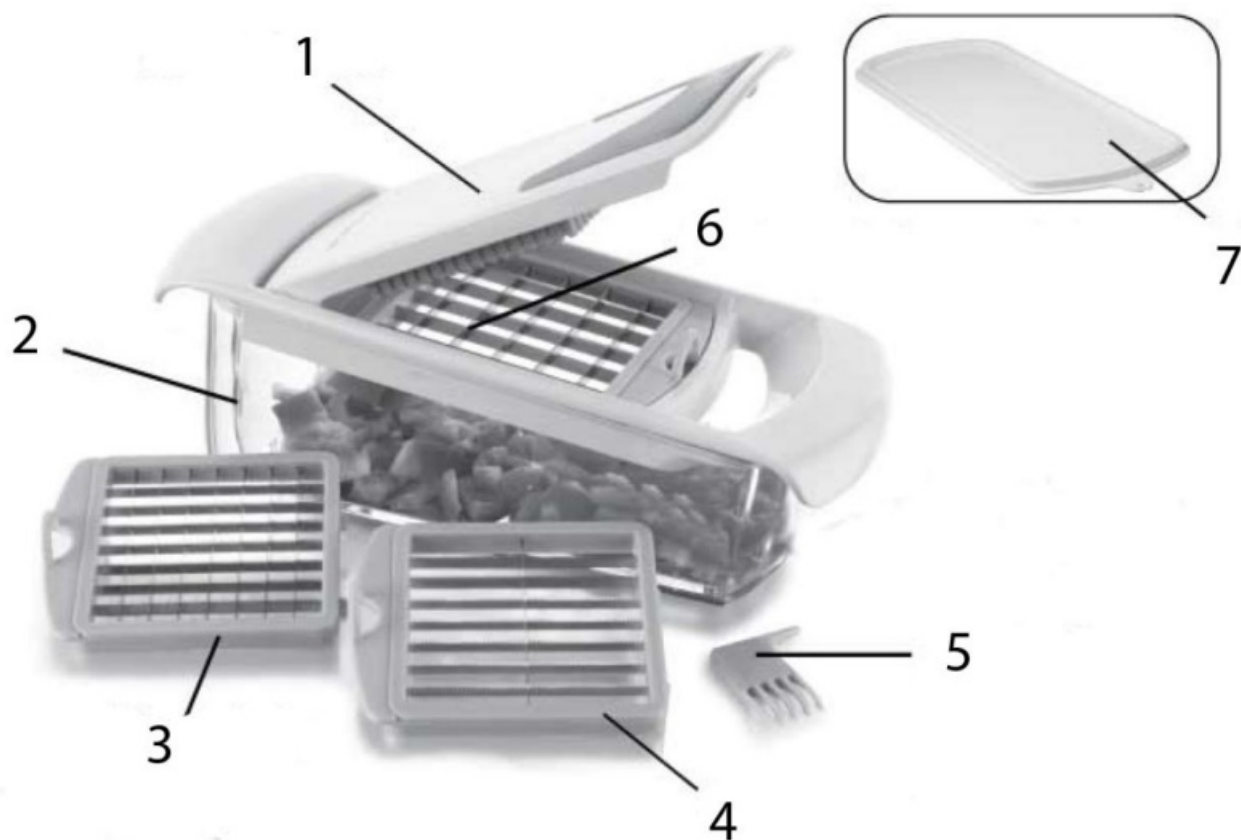

1. Pressure plate
2. Container
3. Dicing blade
4. Slicing blade
5. Cleaning tool
6. Shredding blade
7. Storage lid

USE


1. Put the pressure plate in a vertical position before use. The pressure plate lifts off easily for cleaning.
2. Insert the required blade.
3. Put the food in the middle of the blade with a flat side down.
4. Press down the pressure plate with both hands to shred or slice.
5. Pull the cleaning tool through the slots in the pressure plate to remove any scraps of food.

MAINTENANCE

1. Wash the product with hot water and washing-up liquid. The product must not be washed in a dishwasher.

IMPORTANT: Handle the blades with care – risk of personal injury and/or material damage. Keep the product out of the reach of children.

Documents / Resources

 <p> Menuett <small>810158</small> <small>810158 3 In 1 Multi-Chopper</small> <small>810158 3 In 1 Multi-Chopper, 810158 3 In 1 Multi-Chopper, Multi-Chopper, Chopper</small> </p>	<p>Menuett 810158 3 In 1 Multi-Chopper [pdf] Instruction Manual</p> <p>810158, 3 In 1 Multi-Chopper, 810158 3 In 1 Multi-Chopper, Multi-Chopper, Chopper</p>
---	--