


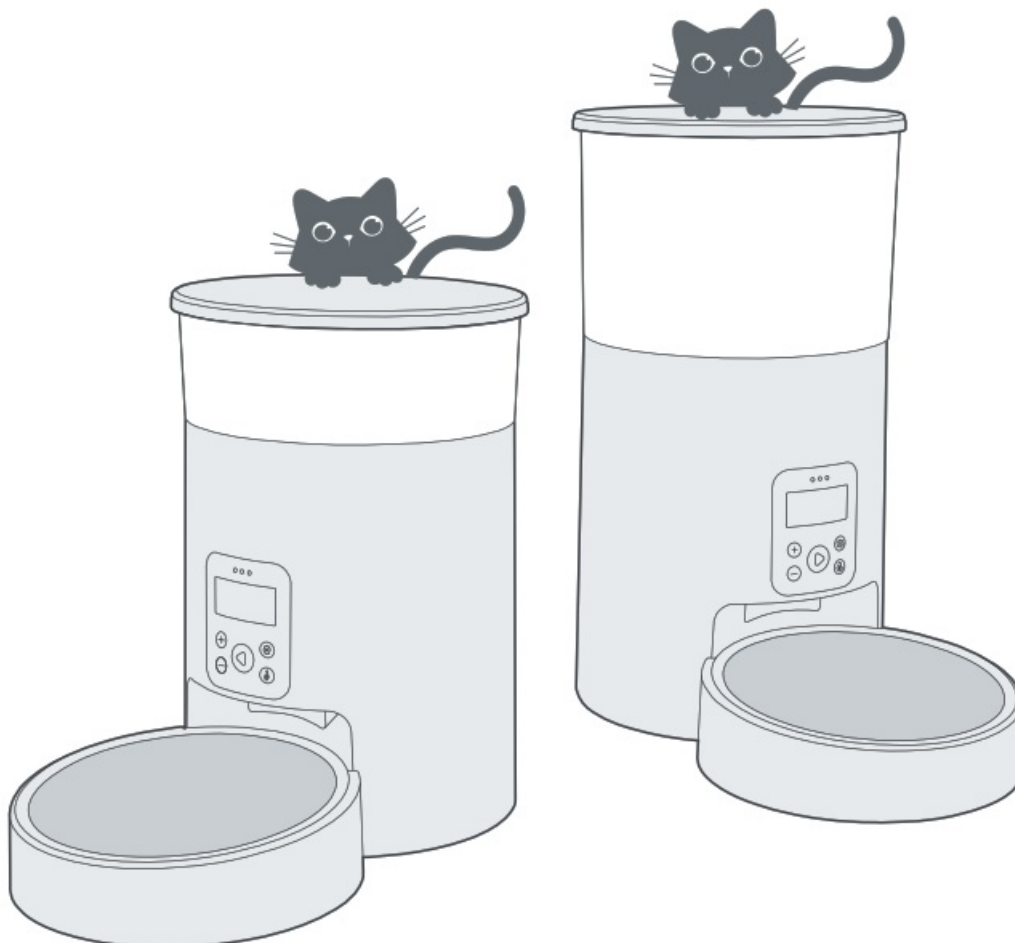 


Meowant MW-PF01 Automatic Pet Feeder User Manual

[Home](#) » [Meowant](#) » Meowant MW-PF01 Automatic Pet Feeder User Manual 

Meowant

Automatic Pet Feeder



MW-PF01 (4L) / MW-PF02 (6L)

Contents

1 IMPORTANT SAFETY INSTRUCTIONS

2 Exploring Your Pet Feeder

3 Using Your Pet Feeder

4 Care and Cleaning

5 Troubleshooting

6 Warranty and Service

7 FCC Compliance

8 Documents / Resources

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE



When using an electrical appliance, especially when children are present, basic safety precautions should always be followed, including the following:

INTENDED USE

- Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with, in or around the appliance.
- Intended for use with dogs or cats only. Do not use this pet feeder with puppies, kittens, dogs or cats not able to reach the food tray or with any physical disability.
- Use the appliance only for intended household purposes as described in this User Manual.

ELECTRICITY SAFETY

- DO NOT operate the appliance if it has a damaged power cord or plug, or if it is malfunctioning or has been damaged in any manner.
- DO NOT immerse power cord, plugs, or the device base in water or other liquid or allow moisture to come into contact with these parts.
- To reduce the risk of electrical shock, do not place or store an appliance where it can fall or be pulled into a tub or sink.
- Always unplug the appliance when not in use, before putting on or taking off parts and before cleaning. Never unplug by pulling on power cord.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard
- Use ONLY the provided power adapter and charging cable.

RELATED TO USE


- DO NOT attempt to disassemble, repair, modify or replace any part of your product. All servicing should be performed by qualified personnel only. No user serviceable parts inside.
- DO NOT allow pets to chew on or swallow any parts. Cover or hide the power cord with care to prevent pets

from biting.


- DO NOT lift the pet feeder by lid, hopper, bowl or bowl holder. Lift and carry feeder using both hands and hopper base, while keeping unit in upright position.
- Install or store pet feeder on a level surface against wall or in a corer to avoid tripping
- For dry food use only. Do not use wet, canned, moist food or pet food with special shapes, holes or diameter above 12mm/0.47 inch.
- Install 4 AA batteries (not included) for back-up power in case of a power outage.
- Before leaving for extended time, always replace batteries with new batteries. Check operation frequently to be sure the pet feeder is dispensing properly.
- Dispose of all packaging materials properly. Keep away from children and pets.

SAVE THESE INSTRUCTIONS


Specifications

Capacity	4L (MW-PFO1) / 6L (MW-PF02)
Applicable Kibble	5-12 mm/0.2-0.47 inch dry food
Power Supply	DC 5V  1A Type-C 4 A batteries (not included) for backup
In the Box	1 x Pet Feeder, 1 x Stainless Steel Bowl, 1 x Bowl Holder, 1 x Desiccant Bag, 1x USB-A to C Cable, 1 x Power Adapter

 
Exploring Your Pet Feeder

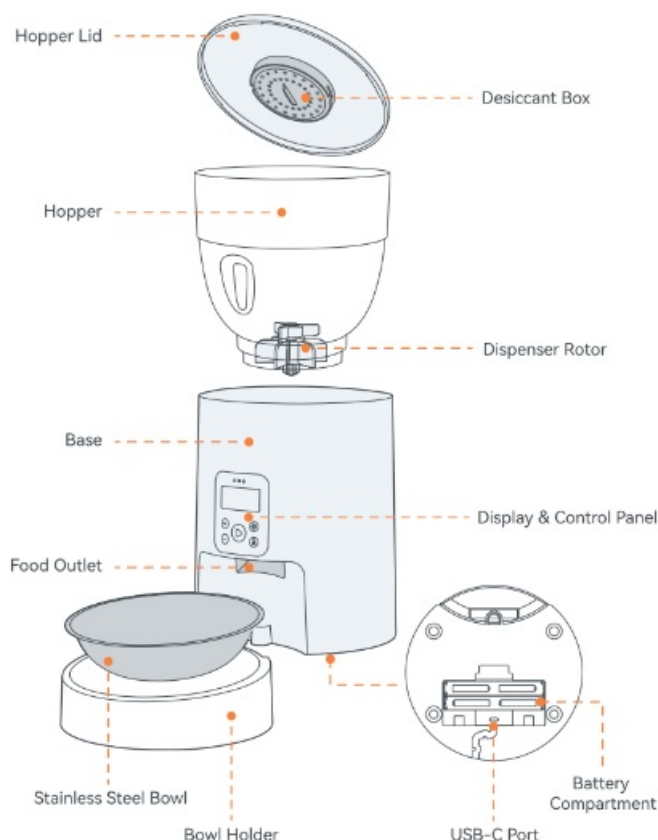

Other Accessories

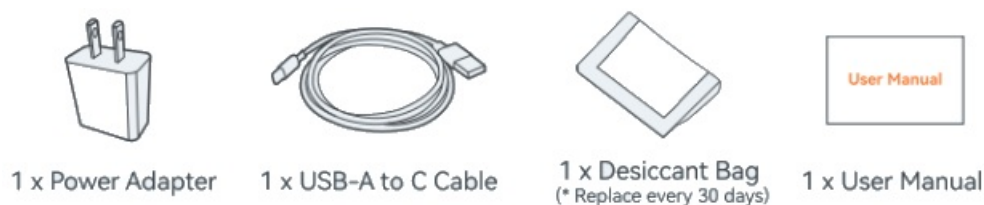 

Status Indicators

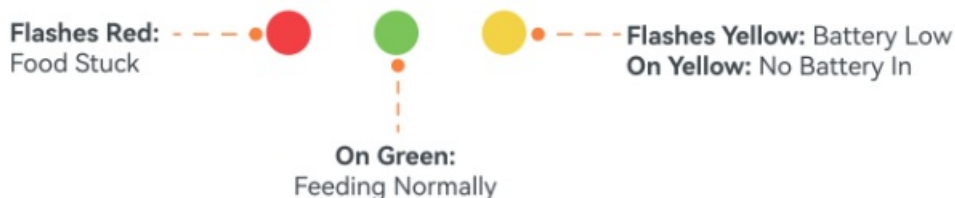 

Display Screen



 
 


 

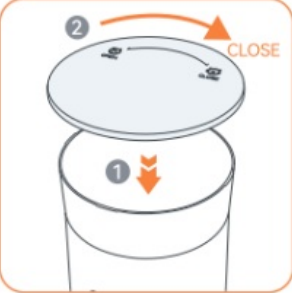 


Control Panel

	Increase Unlocked Status: * Press to increase time, meal or portion. *Hold @ and @ for 3s to clear feeding schedule.
	Decrease Unlocked Status: Press to decrease time, meal or portion.
	Feed Unlocked Status: Press once to dispense one portion of food. Press repeatedly to dispense more portions.
	Settings Unlocked Status: *Press once to enter settings. «During setting, press once to confirm.
	Unlock +Hold for 5s until a beep is heard to unlock. +Auto locks i no operation is done in 5mins.


Using Your Pet Feeder

 
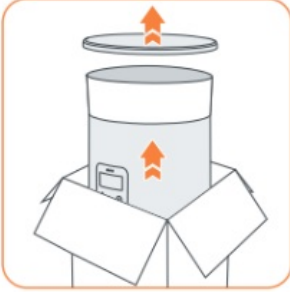 
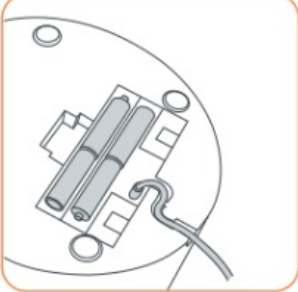 


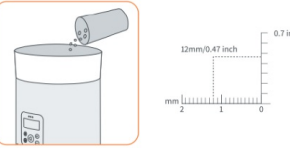






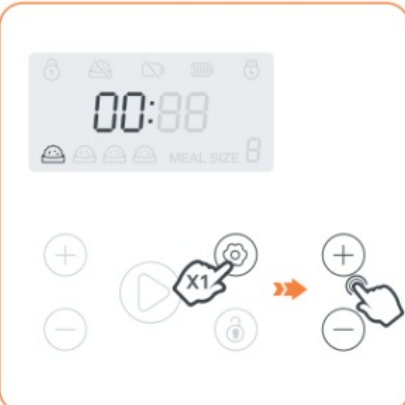 
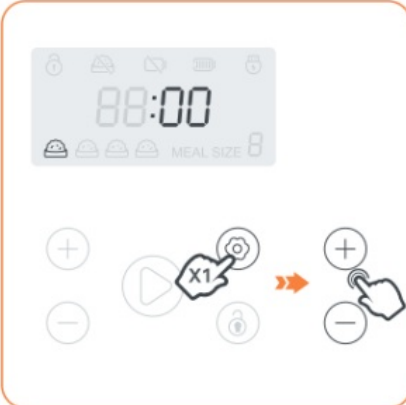 


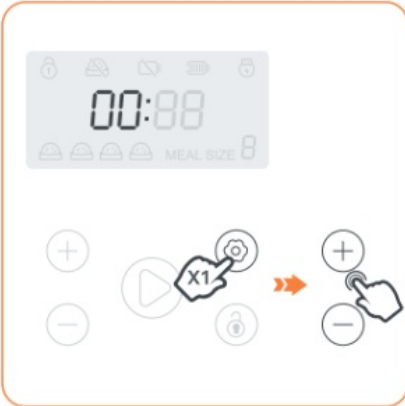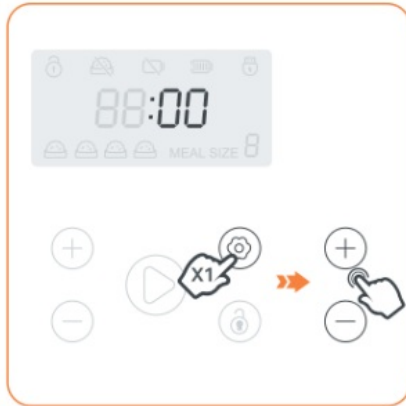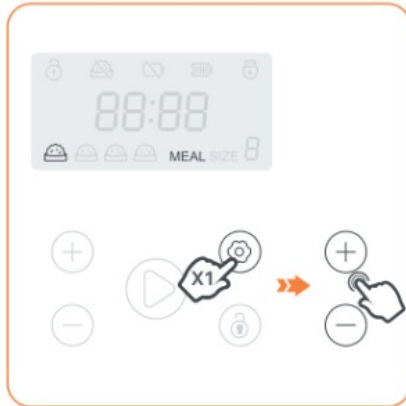
 

 





- ⚠️ Make sure that pet feeder is properly installed before filling the hopper.
- It is recommended to install batteries for back-up power in case of a power outage.

Setting Up

			
<p>Remove the feeder from its package. Take out lid, bowl, bowl holder and all other accessories.</p>	<p>Plug in the included USB-C cable. Install 4 AA batteries (not included) for back-up power in case of a power outage.</p>	<p>Situate the bowl holder on the buckle underneath food outlet. Place the bowl in the bowl holder.</p>	<p>Place the hopper on the base by aligning the front notch. Rotate the dispenser rotor to properly situate the hopper in place.</p>
			
<p>Add proper amount of dry pet food (5-12mm / 0.2-0.47 inch). Make sure food is level.</p>	<p>Rotate clockwise to open the desiccant box. Place desiccant bag in and rotate to lock the box.</p>	<p>Align and cap the hopper lid back. Twist clockwise to CLOSE position to lock in place.</p>	<p>Plug in the included power adapter. Hold  for 5s until a beep is heard to unlock. The feeder is ready for use.</p>


Setting Automatic Feeding Schedule



- ⚠️ Hold  for 5s until a beep is heard to unlock the control panel before use.

		
<p>Press  once to set current time first.</p> <p>Press  or  to adjust the hour.</p>	<p>Press  once to confirm and move to minute setting. Press  or  to adjust the minute.</p>	<p>Press  once to confirm and move to meal setting (MEAL flashes). Press  or  to set the meals (1-4) per day.</p>
		
<p>Press  once to confirm, then press  or  to set the feeding hour for meal 1.</p>	<p>Press  once to confirm and move to minute setting. Press  or  to adjust the minute.</p>	<p>Press  once to confirm and move to portion setting. Press  or  to set the portion (1-9) for meal 1, then press  to confirm. Repeat for the rest meals. Once all meals are successfully set, a beep will be heard.</p>

 Additional Features

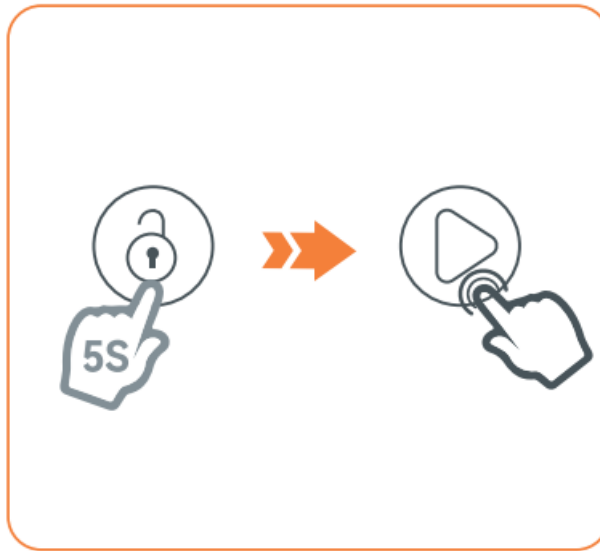


Manual Feeding



1. Hold  for 5S to unlock the control panel.
2. Press  once to dispense one portion of food. Press repeatedly to dispense more.

Clearing Feeding Schedule



1. Hold  for 5s to unlock the control panel
2. Hold  and  simultaneously for 3s until a beep is heard to clear the feeding schedule.






Train Your Pet to Use the Feeder



- **Location is Key.** Place the feeder next to the current food bowl(s). Set it up, and use Feed button to dispense some familiar food. Give your pets a day or two to explore.
- **Introduce Automatic Feeding.** Once you notice that your pet has eaten from the feeder, press the Feed button while your pet is in the room with you so it can observe the food dispensing and become familiar with the sound while you are there to reassure them.
- **Set Automatic Feeding Schedule.** Take away the old food bowls and set automatic feeding schedule. For the

next few days, keep an eye on your pet and the feeder to confirm that your pet is eating comfortably from the unit.

Care and Cleaning

-  Always air dry all parts thoroughly before reassembling for next use.
- We recommend that you clean the feeder at least once a month. The best time to clean is when the hopper and bowl are already empty.

	
<p>Lift to remove the bowl and holder. Hold with both hands to remove the hopper.</p>	<p>Twist to OPEN position to open the lid. Take out the desiccant bag.</p>

	
<p>Rinse clean the lid, hopper, bowl and bowl holder. Dry thoroughly before reassembling.</p>	<p>Wipe the base with a soft and damp cloth. Do not rinse or immerse in water.</p>

Troubleshooting

The troubleshooting guide addresses the most common problems. If problems persist, feel free to contact the Customer Support at support@meowanthome.com.

Q: Display screen or control panel is not responsive.

Q: Food does not come out.

A: • Be sure to add dry food with size of 5-12mm / 0.2-0.47 inch in diameter. • Make sure the hopper is properly installed. Rotate the dispenser rotor to properly situate the hopper in place. • Check if the dispenser rotor is jammed or the food outlet is blocked. • Check if the pet feeder is properly connected to a powered electrical outlet or if outage occurs with no back-up batteries installed.

Q: How often should I feed my cat or dog?

 
A: The amount and frequency depends on your pet's nutritional needs, age, medical conditions and lifestyle, as well as your personal preference. • Growing kittens up to six months of age may require three meals a day. From age six months to maturity, most cats will do well when fed two times a day. • Dogs should eat at least two meals each day, about 12 hours apart. But a breakfast, lunch, and dinner schedule is an equally great option.

Warranty and Service

Thank you for choosing MeoWant Automatic Pet Feeder. This product is covered 'with MeoWant product and labor warranty for 12 months from the date of its original purchase.

The warranty will not apply in cases of:

- Accident, misuse, o repairs performed by unauthorized personnel.
- Any unit that has been tampered with or used for commercial purpose.
- Normal wear and tear of wearable parts.
- Use of force, damage caused by external influences.
- Damage caused by non-observance of the User Manual, e.g. connection to an unsuitable mains supply or non-compliance with the instructions.
- Partially or completely dismantled appliances.
- Defects caused by or resulting from damages from shipping or from repairs, service, or alteration to the product or any of its parts that have been performed by a repair person not authorized

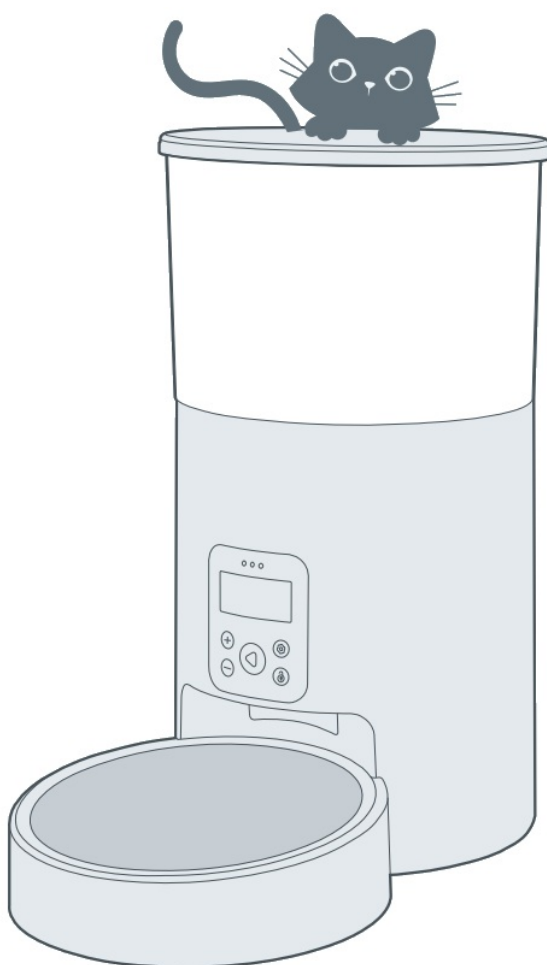

We can only provide after sales service for products that are sold by MeoWant or MeoWant authorized retailers and distributors. If you have purchased your unit from a different place, please contact your seller for return and warranty issues.

* Please have your order ID ready before contacting Customer Support.

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Correct Disposal of This Product (Waste Electrical & Electronic Equipment) wmm (Applicable in countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

Questions or Concerns



support@meowanthome.com

MANUFACTURER

Shenzhen Guiyang Network Technology Co, Ltd

ADDRESS

1404K3, East Block, Shengtang Commercial Building,
Futian District, Shenzhen, China



Made In China
Rev.11.EU

Documents / Resources

	<p>Meowant MW-PF01 Automatic Pet Feeder [pdf] User Manual MW-PF01, MW-PF01 Automatic Pet Feeder, Automatic Pet Feeder, Pet Feeder, Feeder</p>
---	---