Merax WF309375 Dining Table Set



MANUALS PLUS

Merax WF309375 Dining Table Set Instruction Manual

Home » merax » Merax WF309375 Dining Table Set Instruction Manual

Contents

- 1 Merax WF309375 Dining Table Set
- **2 PARTS LIST**
- 3 Installation Instructions
- 4 Documents / Resources
 - 4.1 References




Merax WF309375 Dining Table Set



Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipment.

PARTS LIST

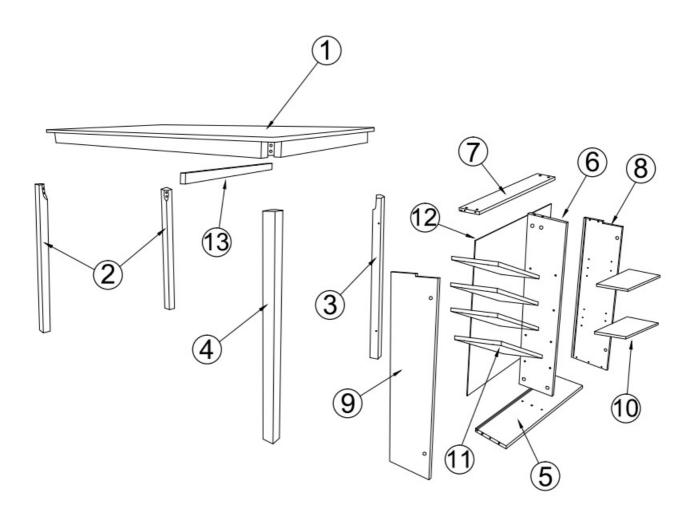


		_	
NO.	DESCRIPTION	SKETCH	QTY.
1	TABLE TOP		1PC
2	TABLE LEG (1)		2PCS
3	TABLE LEG (2)		1PC
4	TABLE LEG (3)		1PC
5	BOTTOM PANEL		1PC
6	CENTER PANEL		1PC
7	TOP PANEL		1PC
8	SIDE PANEL (R)		1PC
9	SIDE PANEL (L)		1PC
10	SHELF PANEL (R)		2PCS
11	SHELF PANEL (L)		4PCS
12	BACK PANEL		1PC
13	TOP SUPPORT		1PC


HARDWARE LIST

NO.	DESCRIPTION	SKETCH	SIZE	QTY.
A	JCBB SCREW		M8*70	8PCS
В	SPRING WASHER		5/16"	8PCS
С	FLAT WASHER	0	5/16"	8PCS
D	CAM LOCK		12mm	12PCS
Е	CAM LOCK DOWEL		M6*34	12PCS
F	WOOD DOWEL		M8*30	3PCS
G	JCBC SCREW		M6*30	4PCS
Н	SHELF PIN		5/16	24PCS
I	ALLEN KEY		M5	1PC
J	ALLEN KEY		M4	1PC
K	CSK SCREW	-aucra (3	M4*32	3PCS

 
TOOLS REQUIRED (Not provided)




Installation Instructions

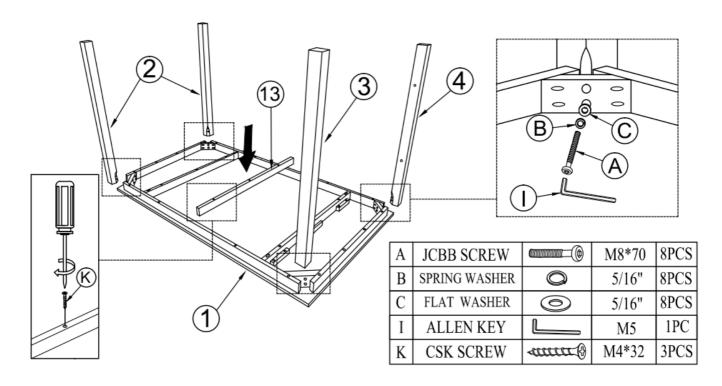


• Step 1: Slide Table Leg 1 (2), Table Leg 2 (3) and Table Leg 3 (4) into place and attach to Table Top (1) using Flat washer (C), Spring Washer (B) and JCBB Screw (A). Tighten JCBB Screw (A) with Allen Key M5 (I). Next, place Top Support (13) to bottom Table Top (1) at the marked place and secure with Csk Screw (K) with a screwdriver.

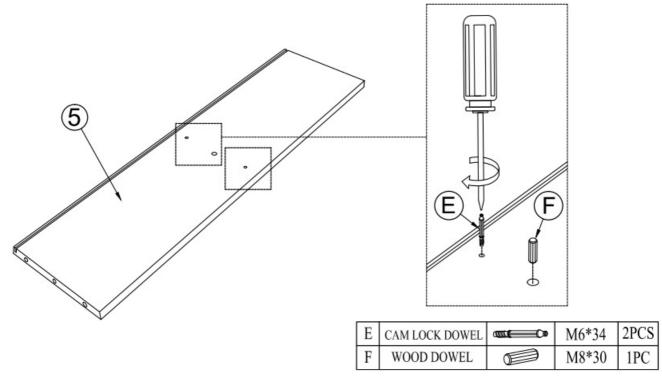


• Step 2: Screw Cam lock Dowel (E) to Bottom Panel (5) and Insert Wood Dowel (F) to Bottom Panel (5).

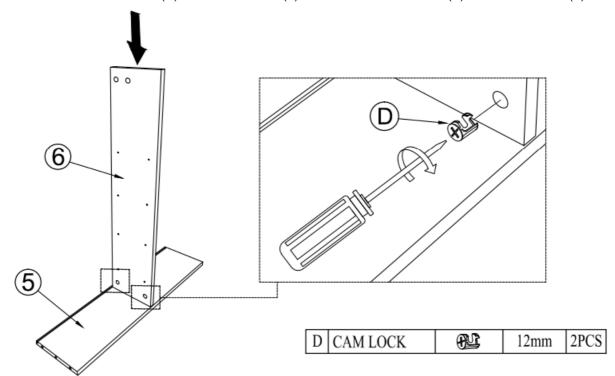


• Step 3: Assembly Center Panel (6) to Bottom Panel (5) and secure using Cam Lock (D). Tighten with Screwdriver.

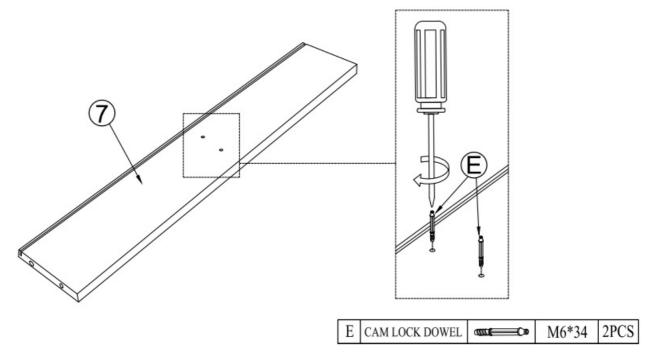


• Step 4: Screw Cam Lock Dowel (E) to Top Panel (7).

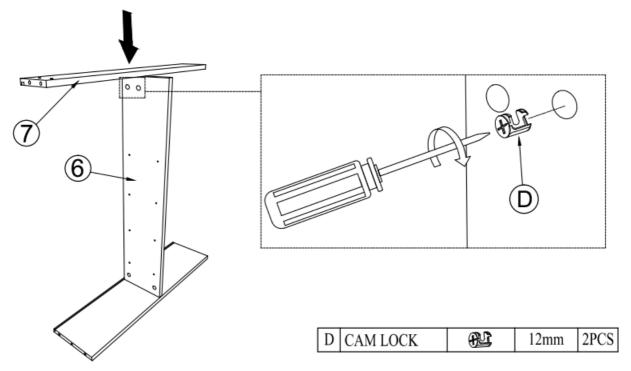


• Step 5: Assembly Top Panel (7) to Center Panel (6) and secure using Cam Lock (D). Tighten with Screwdriver.

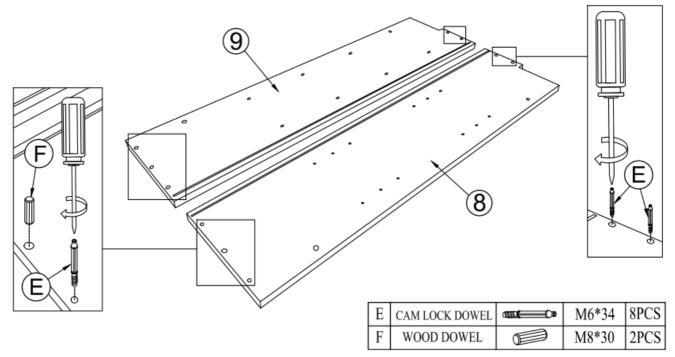


• Step 6: Screw Cam lock Dowel (E) and insert Wood Dowel (F) to Side Panel R (8) and Side Panel L (9).

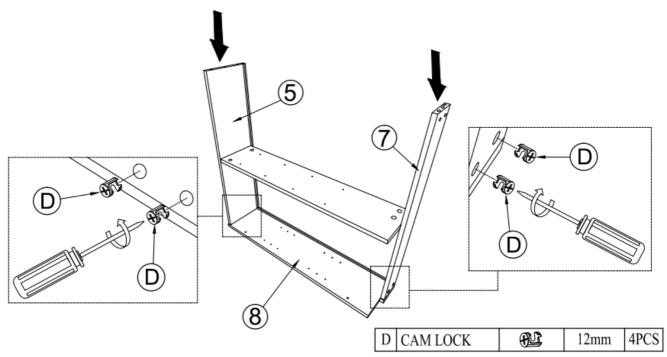


• Step 7: Assembly Bottom Panel (5) and Top Panel (7) to Side Panel R (8) and secure using Cam Lock (D). Tighten with Screwdriver.

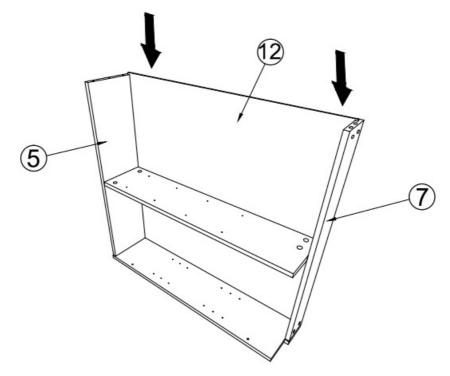


• Step 8: Slide Back Panel (12) into the place between Bottom Panel (5) and Top Panel (7).

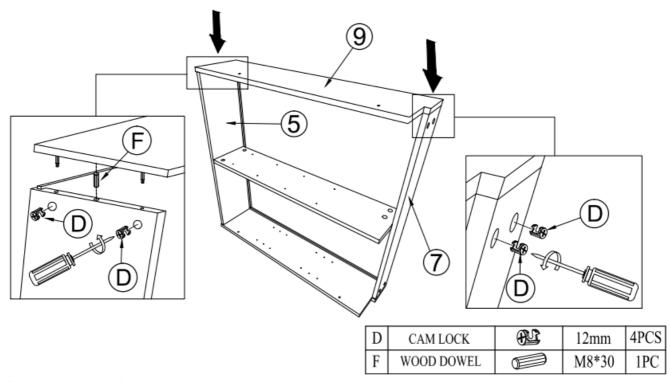


• Step 9: Assembly Side Panel L (9) to Top Panel (7) and Bottom Panel (5) and insert Wood Dowel (F) and secure using Cam Lock (D). Tighten with Screwdriver.

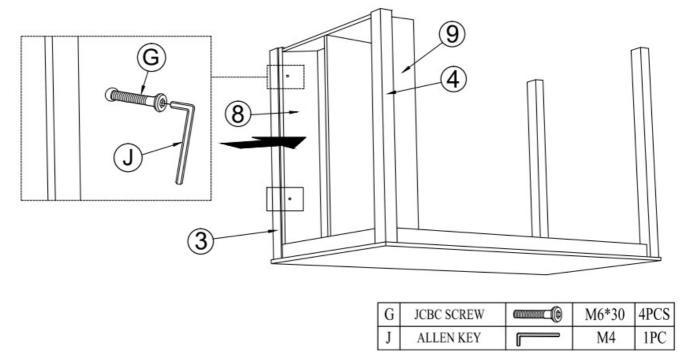


• Step 10: Turn the table and box shelf upside down and slide the shelf box between Table Leg 2 (3) and Table Leg 3 (4). Attach to side panel L (9) and side Panel R (8) to both leg using JCBC Screw (G) and tighten with Allen Key M4 (J).

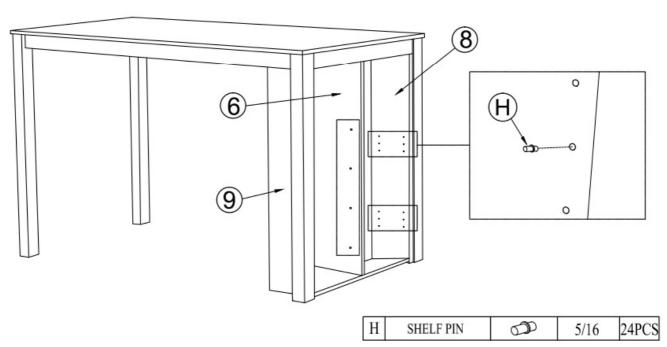


• Step 11: Insert Shelf Pin (H) to Side panel R (8), Side Panel L (9) and Center Panel (6).

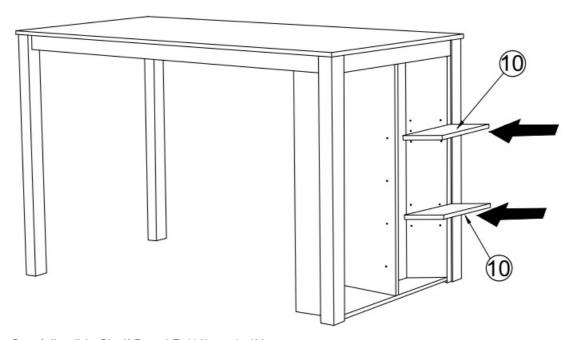


• Step 12: Carefully slide Shelf Panel R (10) to shelf box.

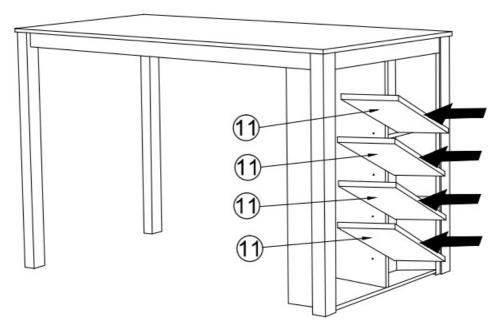


• Step 13: Carefully slide Shelf Panel L (11) to shelf box.

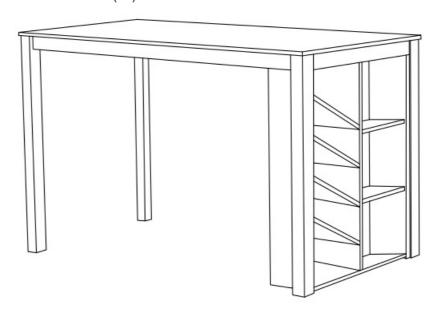

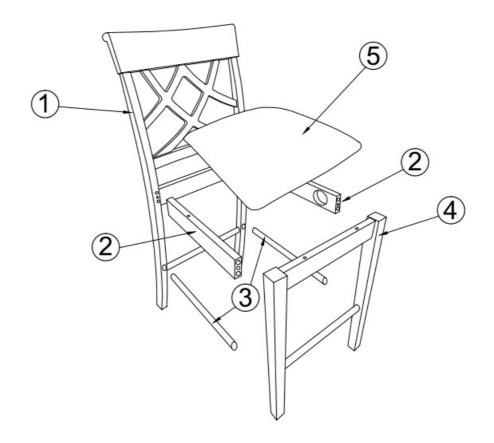


PART LIST:				
NO.	DESCRIPTION	SKETCH	QTY.	
1	BACK LEG		1PC	
2	SIDE RAIL		2PCS	
3	STRECHER		2PCS	
4	FRONT LEG		1PC	
5	SEAT		1PC	

 


HARDWARE LIST :					
NO.	DESCRIPTION	SKETCH	SIZE	QTY.	
A	JCBC SCREW	 _	M6*50	6PCS	
В	WOOD DOWEL		M10*35	6PCS	
С	CSK SCREW	Amma (A	M4*32	8PCS	
D	BEND WASHER	<u> </u>	15*18	6PCS	
Е	ALLEN KEY		M4 L	1PC	


ASSEMBLY INSTRUCTIONS

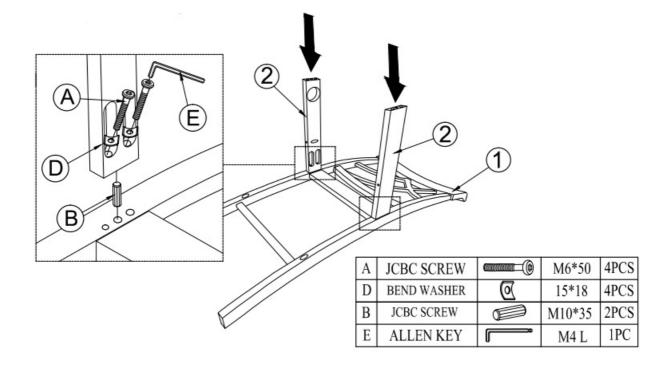


• Step 1: Insert Wood Dowel (B) to Back Leg (I) and Use Allen Key (E) to secure Side Rail (2) to Back Leg (1) with Jebe Screw (A) and Bend Washer (D).

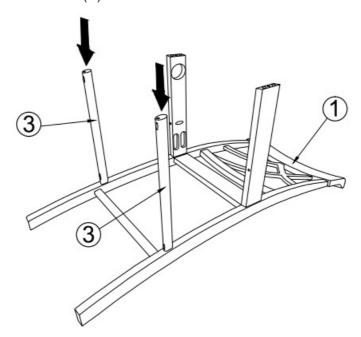


• Step 2: Insert Side Strecher (3) to Back Leg (I).

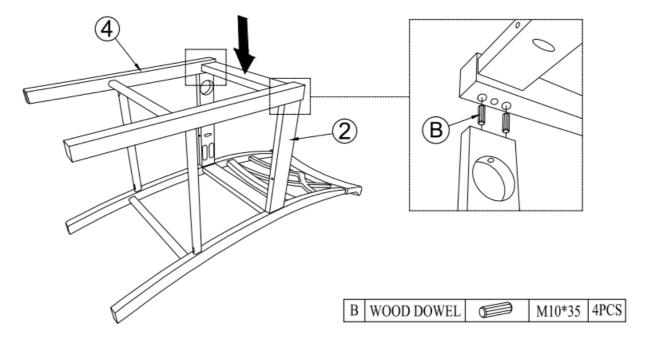


• Step 3: Put Wood Dowel (B) to Side Rail (2) and attach Front Leg (4) to Side Rail (2).

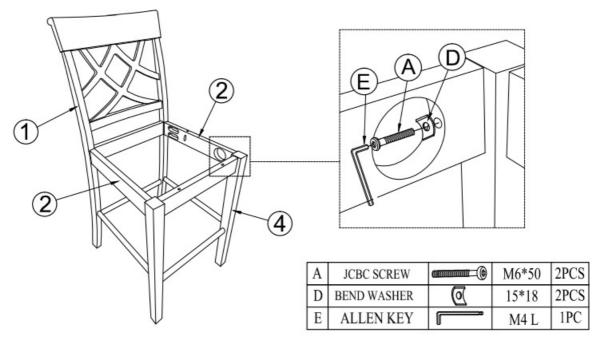


• Step 4: Secure Side Rail (2) to Front Leg (4) using Allen Key (E), Bend Washer (D) and Jebc Screw (A).

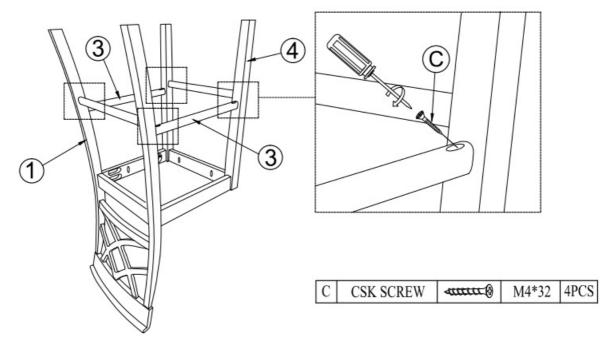

• Step 5: Secure Side Strecher (3) to Front Leg (4) and Back Leg (I) using Csk Screw (C).

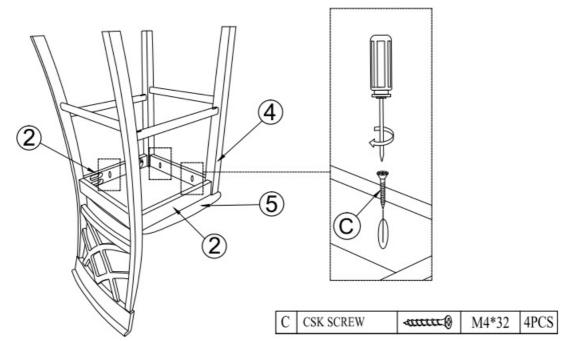

• Step 6: Secure Front Leg (4) and Side Rail (2) to Seat (5) using Csk Screw (C).

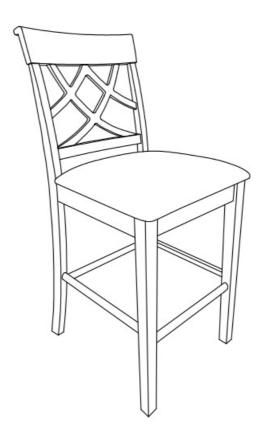

• Step 7: Fully setup.

MADE IN MALAYSIA

Documents / Resources



Merax WF309375 Dining Table Set [pdf] Instruction Manual WF309375 Dining Table Set, WF309375, Dining Table Set, Table Set

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.