



# Mercury NF8AC Netcomm Fibre Configuration User Manual

[Home](#) » [Mercury](#) » Mercury NF8AC Netcomm Fibre Configuration User Manual 

## Contents

- [1 Mercury NF8AC Netcomm Fibre Configuration](#)
- [2 Log into the gateway:](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)



## Mercury NF8AC Netcomm Fibre Configuration



Using your own router? No worries, we've got you covered!

Log into the gateway:

1. Ensure your device is connected to the Router (preferably via cable)
2. Open a web browser
3. Type the following in the address bar at the top: 192.168.20.1
4. Default Username: admin
5. Default Password: password

This should then give access to the router's user interface

(If the password is incorrect you will need to Factory Reset the router by pushing the Inset Reset button on the back for  
10 seconds)

#### **How to add correct settings for the Mercury network:**

1. From the menu on the left select: Advanced Setup
2. From the sub-menu select: WAN Service

#### **In the page Select the Remove tickbox for all connections:**


1. Select: Remove
2. Select: Add

#### **Ensure the following settings are changed:**

1. Wan Service Int Config: ETH4/ETH4
2. Select: Next
3. WAN Service Type: PPP over Ethernet (PPPoE)
4. Service Description: (left as is)
5. 802.1P Priority: 0
6. 802.1Q VLAN ID: 10
7. Select: Next
8. PPP Username: (your mercury acct number) [@mercurybroadband.co.nz](mailto:@mercurybroadband.co.nz)
9. PPP Password: password
10. PPPoE Service Name: Mercury
11. All other settings can be left as is
12. Select: Next
13. Leave this page as is
14. Select: Next
15. Select anything in the right box and move to left box
16. Select: Next
17. Select: Apply/Save

You should now be connected to Fibre

#### **Documents / Resources**

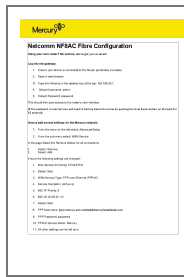

[Mercury NF8AC Netcomm Fibre Configuration](#) [pdf] User Manual  
NF8AC Netcomm Fibre Configuration, NF8AC, Netcomm Fibre Configuration, Fibre Configurati  
on