



MERCURY RT-N10E Wireless N150 Router Instructions

[Home](#) » [Mercury](#) » MERCURY RT-N10E Wireless N150 Router Instructions 

Contents

- [1 MERCURY RT-N10E Wireless N150 Router](#)
- [2 Asus RT N10E Fibre Setup](#)
- [3 How to add correct settings for the Mercury network](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)



MERCURY RT-N10E Wireless N150 Router



Asus RT N10E Fibre Setup

Using your own router? No worries, we've got you covered!

Log into the gateway:

1. Ensure your device is connected to the Router (preferably via cable)
2. Open a web browser
3. Type the following in the address bar at the top: 192.168.1.1
4. **Default Username:** admin
5. **Default Password:** admin

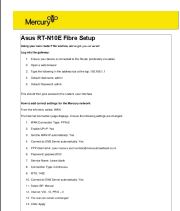
This should then give access to the router's user interface

How to add correct settings for the Mercury network

From the left menu select: WAN. The Internet Connection page displays. Ensure the following settings are changed:

1. **WAN Connection Type:** PPPoE
2. **Enable UPnP:** Yes
3. **Get the WAN IP automatically:** Yes
4. **Connect to DNS Server automatically:** Yes
5. **PPP Username:** (your mercury acct number) @mercurybroadband.co.nz
6. **Password:** password123
7. **Service Name:** Leave blank
8. **Connection Type:** Continuous
9. **MTU:** 1492
10. **Connect to DNS Server automatically:** Yes
11. **Select ISP:** Manual
12. **Internet:** VID – 10, PRIO – 0
13. The rest can remain unchanged
14. **Click:** Apply

Documents / Resources

	MERCURY RT-N10E Wireless N150 Router [pdf] Instructions RT-N10E, Wireless N150 Router, N150 Router, RT-N10E, Router
---	--