




## MERCUSYS ME30 Range Extender Installation Guide

[Home](#) » [MERCUSYS](#) » MERCUSYS ME30 Range Extender Installation Guide 

### Contents

- [1 MERCUSYS ME30 Range Extender](#)
- [2 LED Explanation](#)
- [3 FAQ \(Frequently Asked Questions\)](#)
- [4 Documents / Resources](#)
  - [4.1 References](#)
- [5 Related Posts](#)

# MERCUSYS®

**MERCUSYS ME30 Range Extender**



For technical support, the user guide and more information, please visit <http://www.mercusys.com/en/support>

**1. Power on**

Plug the extender into a power outlet near your router, and the Signal LED turns solid red.

**2. Connect to the extender**

Connect your wireless device to the extender's network MERCUSYS\_RE\_XXXX.

**Note:** The default SSID (network name) is printed on the product label at the back of the extender.

**3. Configure**

- Launch a web browser and enter <http://mwlogin.net>  
Create a password for future login attempts.
- Select your router's host network and enter the network password when prompted.
- Check the Signal LED on your extender. Green or orange LED indicates a successful connection.

**4. Relocate**

To achieve better signal quality, plug in the extender halfway between your router and the Wi-Fi dead zone.

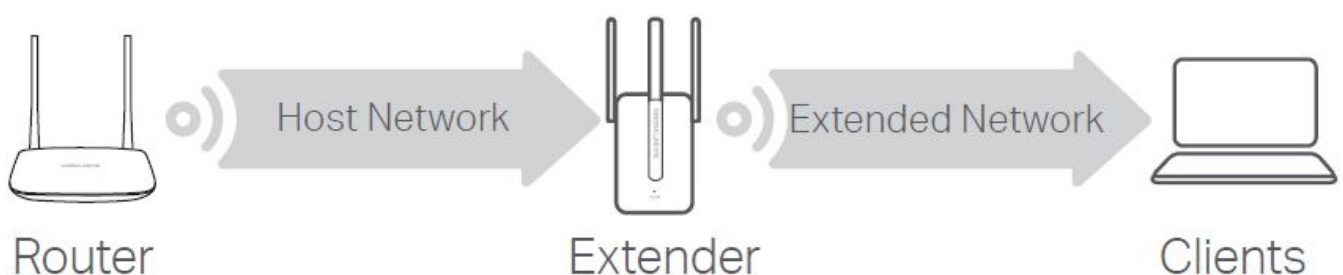


Image may differ from actual product.

## Enjoy!

Connect your device to the extender using the extended SSID. The default Wi-Fi password is the same as your host network.

## LED Explanation

### (For Range Extender Mode)

**Off** Power is off.

**Blinking** The extender is starting or connecting to the host network.

**Solid Red** The extender is not connected to the host network.

**Solid Green** The extender is connected to the host network band works well.

**Solid Orange** The extender is connected to the host network, but is too far away from the router.

## FAQ (Frequently Asked Questions)

### Q1 How do I configure the extender using WPS?

- Plug the extender into a power outlet near your router, and wait until the Signal LED is lit and solid red.
- Press the WPS button on your router.
- Within 2 minutes, press the WPS or RESET/WPS button on the extender. The LED should change from blinking to a solid state, indicating a successful WPS connection.

### Q2 How do I reset the extender?

With the extender powered on, press and hold the Reset or RESET/WPS button until the Signal LED turns off, then release the button. When the Signal LED turns solid on, the reset process is complete.


### Q3 What should I do if I cannot access the extender's web management page?

- Make sure your wireless device is connected to the extended network using the extended SSID.
- Verify that <http://mwlogin.net> is correctly entered in the web browser.
- If you are using a computer, make sure it is set to obtain an

### IP address automatically.

Refer to Q2 to reset the extender and try again.

## Documents / Resources

	<a href="#">MERCUSYS ME30 Range Extender</a> [pdf] Installation Guide ME30, Range Extender
---	---

## References

-  [Support-Welcome to MERCUSYS](#)

