



MERCUSYS Wireless N ADSL2+ Modem Router Installation Guide

[Home](#) » [MERCUSYS](#) » MERCUSYS Wireless N ADSL2+ Modem Router Installation Guide 

MERCUSYS®

Quick Installation Guide Wireless N ADSL2+ Modem Router


Contents

- [1 Connecting the Hardware](#)
- [2 Configuring the Modem Router](#)
- [3 Configure Via the Web Browser](#)
- [4 FAQ \(Frequently Asked Questions\)](#)
- [5 Safety Information](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

Connecting the Hardware

* Images may differ from actual products.

If you don't need the phone service just directly connect the modem router to the phone jack with the provided phone cable, then follow steps 3 and 4 to complete the hardware connection.

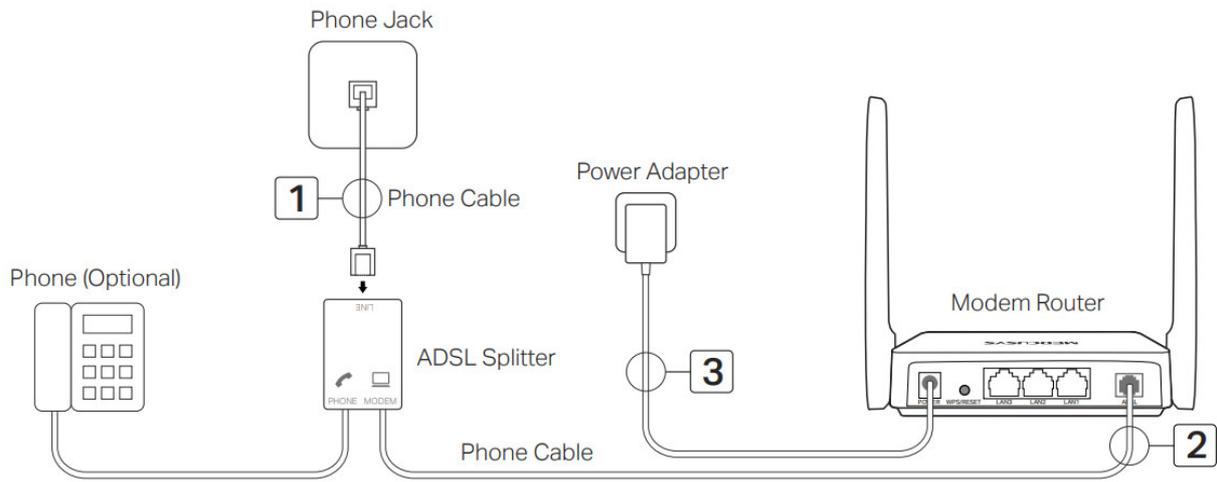

Wait about 1 to 2 minutes, then verify that the Power, ADSL and Wi-Fi LEDs are on before continuing.




Note: If the ADSL LED  does not turn solid on, please refer to FAQ > Q2.

Configuring the Modem Router

Before You Start

1. You'll usually need an internet service username and password, given to you by your internet service provider (ISP) when you first signed up with them. If you are unsure, please check with your ISP.
2. Find the product label at the bottom of your modem router. The modem router's default SSID (network name) is printed on the product label.

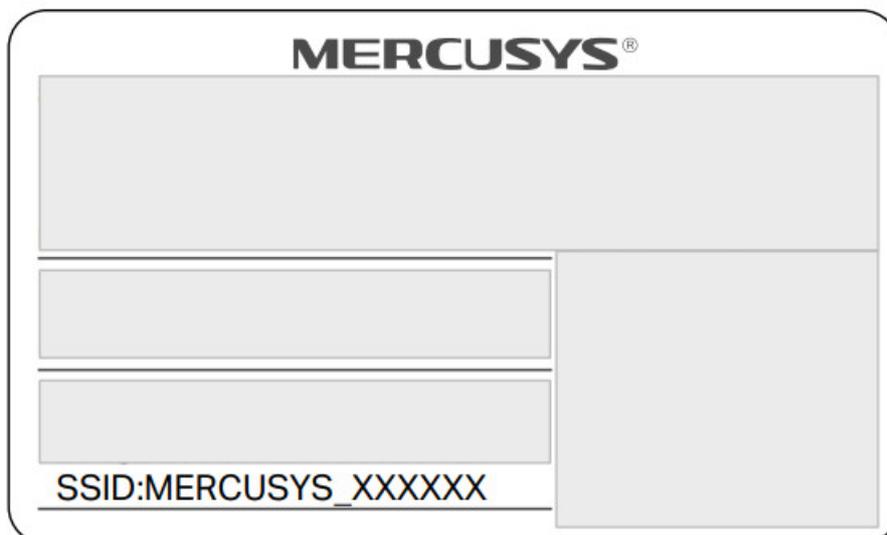

Configure Via the Web Browser

1. Connect your device to the modem router (Wired or Wireless).

Wired: Turn off the Wi-Fi on your computer and connect your computer to the modem router's LAN port using an Ethernet cable.

Wireless: Connect your computer or smart device to the modem router wirelessly. The default SSID (Network Name) is on the modem router's label.

2. Launch a web browser and enter <http://mwlogin.net> or 192.168.1.1 in the address bar. Use admin (all lowercase) for both username and password, and then click Login.

Note: If the login window does not appear, please refer to FAQ > Q1.



The screenshot shows a web browser window with the address bar containing 'http://mwlogin.net'. Below the address bar, there is a login form with two input fields: 'Username:' and 'Password:', both containing the text 'admin'. Below the password field is a 'Login' button. A mouse cursor is pointing at the 'Login' button.

3. A Quick-Start window will pop up automatically when logging in for the first time; otherwise, select **Quick Enjoy the internet!** from the menu. Follow the step-by-step instructions to set up an internet connection.



Enjoy the internet!

FAQ (Frequently Asked Questions)

Q1. What can I do if the login page does not appear?

- A1. Make sure the computer is connected to the modem router properly.
- A2. If the computer is set to a static or fixed IP address, change the computer's settings to obtain an IP address automatically from the modem router.
- A3. Verify <http://mwlogin.net> or 192.168.1.1 is correctly entered in the web browser and press **Enter**.
- A4. Use another web browser and try again.
- A5. Reboot your modem router and try again.
- A6. Disable and enable the active network adapter.

Q2. What can I do if the ADSL LED does not turn solid on?

- A1. Check your cables and make sure they are all plugged in correctly, including the telephone lines and power adapter.
- A2. Manually change your ADSL settings. Log in to the modem router's web management page. Go to **Advanced Setup > ADSL**, change the **ADSL Mode** to **G.DMT**, and click **SAVE**. If this cannot work, try to change the **ADSL Mode** to **ADSL2** and click **SAVE**.
- A3. Restore your modem router to its factory default settings.
- A4. Remove the ADSL splitter, directly connect the modem router to the phone jack and then reconfigure the modem router by following the instructions in this Quick Installation Guide.

Q3. What can I do if I cannot access the internet?

- A5. Contact your internet service provider to verify if the ADSL line is in good status.
- A6. If you have tried all the suggestions above and the problem persists, contact our Technical Support.

A1. Make sure the telephone and Ethernet cables are plugged in correctly.

A2. Try to log in to the web management page of the modem router using the default address at <http://mwlogin.net> or 192.168.1.1. If you can, try the following answers. If you cannot, change your computer to obtain an IP address automatically from the modem router.

A3. Consult your ISP and make sure all the VPI/VCI, Connection Type, account username, and password are correct. If they are not, please replace them with the correct settings and try again.

A4. Restore the modem router to its factory default settings and reconfigure the modem router by following the instructions in this Quick Installation Guide.

Q4. What can I do if I forget my password?

A5. If you have tried all the suggestions above and the problem persists, contact our Technical Support.

- **Web management page password:**

Refer to FAQ > Q5 to reset the modem router, and then use **admin** (all lowercase) for both username and password to log in.

- **Wireless network password:**

A1. By default, the wireless network has no password.

A2. If you have set a password for the wireless network, log in to the modem router's web management page and go to Interface Setup > Wireless to retrieve or reset your password.

Q5. How do I restore the modem router to its factory default settings?

A1. With the modem router powered on, press and hold the **WPS/RESET** button on the rear panel of the modem router for at least 5 seconds until there is an obvious change of the LED, and then release the button.

A2. Log in to the web management page of the modem router, and go to Maintenance > SysRestart, select Factory Default Settings and click **RESTART**, then wait until the reset process is complete.

Note: To learn more about the router, please visit our website <http://www.mercusys.com>.



Safety Information

Keep the device away from water, fire, humidity, or hot environments.

Do not attempt to disassemble, repair, or modify the device.

Do not use a damaged charger or USB cable to charge the device.

Do not use any other chargers other than those recommended.

Do not use the device where wireless devices are not allowed.

The adapter shall be installed near the equipment and shall be easily accessible



For technical support, the user guide, and more information, please visit <http://www.mercusys.com/en/support>.

©2019 MERCUSYS 7107500116 REV1.0.0

Documents / Resources

	MERCUSYS Wireless N ADSL2+ Modem Router [pdf] Installation Guide Wireless N ADSL2 Modem Router
---	---

References

- [M Welcome to MERCUSYS](#)
- [M Support-Welcome to MERCUSYS](#)

Manuals+.