



MERLIN Pistol Grip Inflator with Analog Gauge User Manual

[Home](#) » [Merlin](#) » MERLIN Pistol Grip Inflator with Analog Gauge User Manual 

Contents

- [1 MERLIN Pistol Grip Inflator with Analog Gauge](#)
- [2 IMPORTANT SAFETY INFORMATION](#)
- [3 Specifications](#)
- [4 Controls](#)
- [5 Operating Instructions](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)



MERLIN Pistol Grip Inflator with Analog Gauge



IMPORTANT SAFETY INFORMATION

CAUTION

Do not exceed maximum pressure of tire. Consult vehicle recommendations for optimum and safe pressure. If a problem occurs, have the problem corrected before further use. Do not use damaged equipment.


1. Never connect to an air source that is capable of exceeding 160 psi. Over pressurizing the tool may cause bursting, abnormal operation, breakage of the tool or serious injury to persons. Use only clean, dry, regulated compressed air at the rated pressure or within the rated pressure range as marked on the tool. Always verify prior to using the tool that the air source has been adjusted to the rated air pressure or within the rated air-pressure range.
2. Never use oxygen, carbon dioxide or combustible gases as an air source for the tool. Such gases are capable of explosion and serious injury to persons.
3. BEFORE EACH USE, inspect the general condition of the tool. Check for:
 - loose fittings

- cracked or deformed o-rings
- damaged pressure gauge or hose
- any other condition that may affect its safe operation.

Specifications

- Range 0-160 PSI / 0-11 BAR
- Air Inlet 1/4" NPT female
- Hose 3/8" ID x 15.7" L

Controls

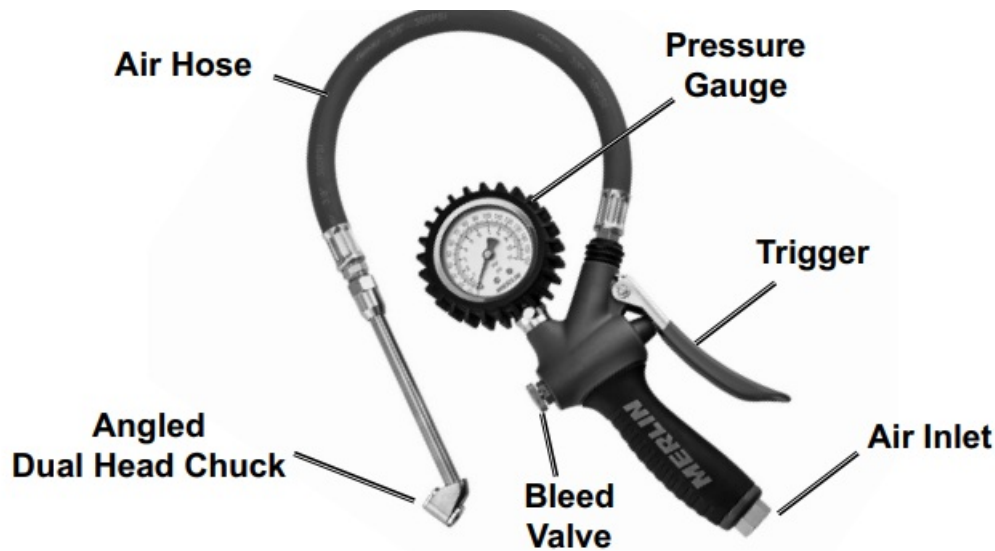

Operating Instructions

1. Connect compressed air source to Air Inlet of Inflator.
2. Push Dual Head Chuck onto valve core of tire. The Gauge will show internal pressure of tire.
3. If displayed air pressure is low, press Trigger all the way to inflate. When desired pressure is shown, release Trigger and check Gauge again.
4. If displayed air pressure is high, press Trigger part-way and allow excess air to bleed through the Valve.

IMPORTANT:

Dual Head style tire Chucks are not able to inflate a completely flat (zero air pressure) tire. Tire air pressure is needed to cause the sealing valve to move and seal the unused side of the chuck. If a tire has 0 air pressure, the self-sealing valve has no pressure to react to.


Record Serial Number Here:

Note: If product has no serial number, record month and year of purchase instead.

Note: Some parts are listed and shown for illustration purposes only, and are not available individually as replacement parts.

SAVE THESE INSTRUCTIONS

For technical questions, please call 1-888-866-5797.

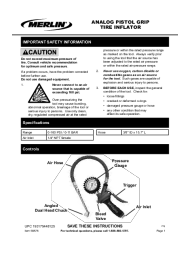

MERLIN Pistol Grip Inflator with Analog Gauge [pdf] User Manual

Pistol Grip Inflator with Analog Gauge, Grip Inflator with Analog Gauge, Inflator with Analog Gauge, Analog Gauge, Gauge