



## meross 24 Smart Interruttore WiFi Alexa User Manual

[Home](#) » [Meross](#) » meross 24 Smart Interruttore WiFi Alexa User Manual 

# meross

### User Manual

#### Contents

- [1 Safety Information](#)
- [2 Package Contents](#)
- [3 Beep Rules](#)
- [4 Installation Guide](#)
- [5 FAQs](#)
- [6 Hardware Installation](#)
- [7 Disclaimer](#)
- [8 Warranty](#)
- [9 Documents / Resources](#)
  - [9.1 References](#)

### Safety Information


1. It is recommended that this device is used indoors in a dry location only.
2. The device shall be used within its published power rating included in the product specifications on the package.
3. Connect this device only in the way shown in this manual. Any other method could cause damage and/or injury.
4. The device may be connected to and may control electric circuits and appliances only if they comply with the respective standards and safety norms.
5. Please do not disassemble the device, otherwise there may be product damage or security risks.

6. Most accidents resulting from electric tool operation and maintenance are caused by the failure to observe basic safety rules or precautions. Therefore, please read and understand all the safety precautions.
7. Make sure the device is kept out of reach of children for safety concern.
8. Please contact seller for replacement in the event of freight damages.

## CAUTION

1. Danger of electrocution. Mounting the device to the power grid has to be performed with caution.
2. Danger of electrocution. The mounting or installation of the device should be done by a qualified person (electrician).
3. Danger of electrocution. Even when the device is turned off, it is possible to have voltage across its clamps. Every change in the connection of the clamps has to be done after ensuring all local power is cut off or disconnected.

## Package Contents

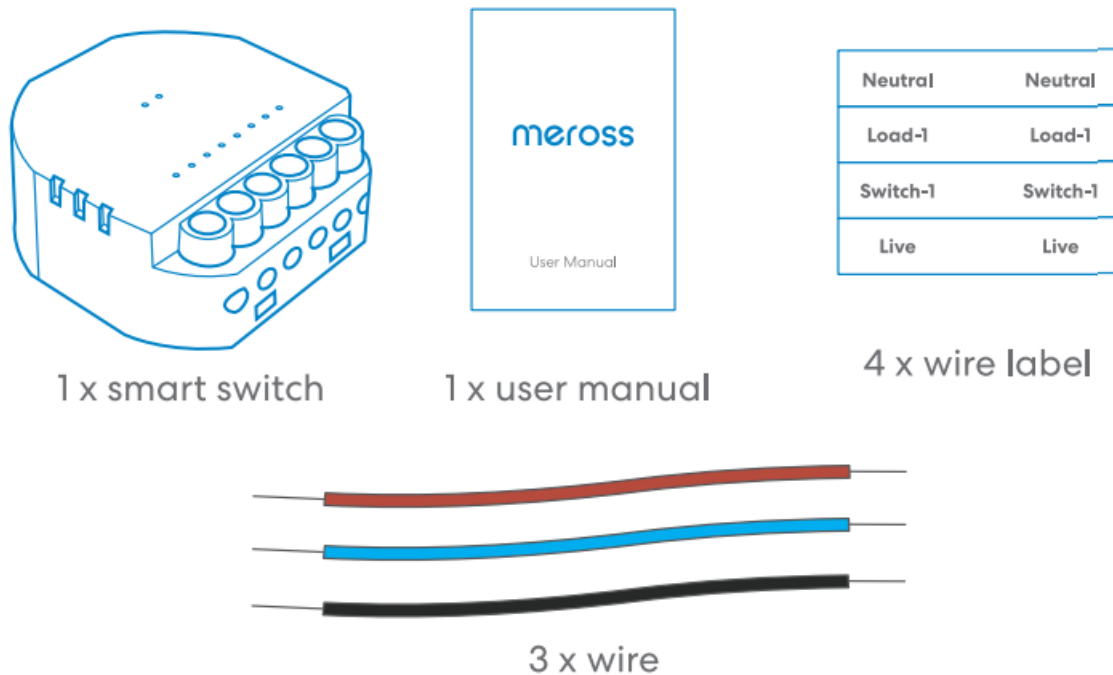

## Beep Rules

Slow beep(10 times): Ready to pair.

Fast beep: Pairing/Connecting to Wi-Fi.

Extremely fast beep(3 times): Connected to Wi-Fi successfully.

Fast beep to slow beep: Failed to set up and ready to be 7 paired again.

Fast beep to no beep: Setup succeeded.

## Installation Guide

1. Download the Meross app. You will need it to set up, manage and upgrade your smart switch.



<http://bucket-meross-static.meross.com/production/qrcode/meross.html>

Log in to your account, or if you are a new user, tap Sign up to create a new account.

2. Connect your smartphone or tablet to the 2.4 GHz Wi-Fi.
3. Launch the Meross app, tap the "+" icon to select the type of smart device you want to add, then you can just follow the setup wizard to finish configuration.

#### **Note:**

To reset the device, you can switch the existing switch 5 times within 10 seconds until it starts to beep slowly.

#### **Link Meross to Google Assistant or Amazon Alexa**

Please don't try to add the device directly in any third-party app. You have to set up the device in Meross app first and then you can link it to voice assistants.

##### **Link to Amazon Alexa**

Go to Account-> Amazon Alexa and allow Meross to link with Alexa.



##### **Link to Google Assistant**

Go to Account-> Google Assistant and follow the step-by-step instructions to complete the linking process.



## **FAQs**

At Meross, we strive to assure your satisfaction.

Attached below is a non-exhaustive list of questions that users are mostly concerned about.

1. Can I control multiple lights with this switch?

As long as the total power is below 400W, you can control multiple lights.

2. Can this switch work with two-gang traditional switch?

No. This device can only work with one-gang/single-pole switch.

3. I can't pair the switch. What should I do?

a) Make sure you wire the device as illustrated in this manual.

b) Make sure you connected to 2.4GHz home Wi-Fi.


c) Make sure your switch is covered by strong 2.4GHz Wi-Fi.

d) Reset the device and start again. To reset the device, you can switch the existing switch 5 times within 10 seconds until it starts to beep slowly.

To learn more, please visit

<https://www.meross.com/support#/fags> to find solutions for more frequently asked questions.

## **Hardware Installation**

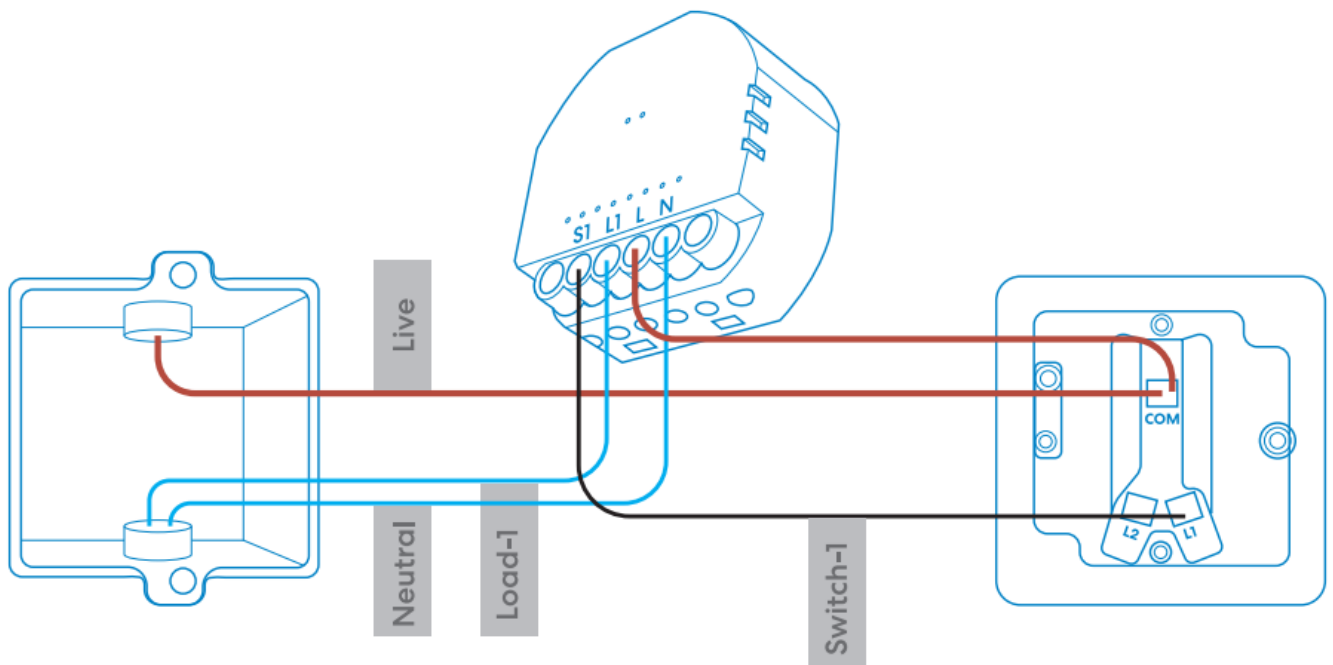

## Disclaimer

1. The function of this smart switch is tested under a typical circumstance described in our specifications. Meross does NOT guarantee that the smart switch shall perform exactly the same as described under all circumstances.
2. By using third-party services such as Amazon Alexa, Google Assistant, Apple Home kit, customers acknowledge that Meross shall not be held liable in any way for the data and private information collected by such parties. Meross's total liability is limited to what is expressly covered in its Privacy Policy.
3. Damages arising from ignorance of the SAFETY INFORMATION shall not be covered by Meross aftersales service, nor does Meross take any legal responsibility therefrom.

Customers acknowledge understanding of these articles clearly by reading this manual.

## Warranty

Meross products are covered by a 24-month limited warranty from the date of purchase. Please visit <https://www.meross.com/support/warranty> for detailed warranty policy and product registration.

Email: [support@meross.com](mailto:support@meross.com)

Website: [www.meross.com](http://www.meross.com)

Manufacturer: Chengdu Meross Technology Co., Ltd.

Address: No. 1312, Building E6-1. Tianfu Software Park. Chengdu, China



Product Ident GmbH (for Prodsg authorities only)  
 HoferstraBe 9B, 71636 Ludwigsburg,  
 Baden-Wuerttemberg, Deutschland  
 MADE IN CHINA  
 INDOOR USE ONLY



## Documents / Resources

	<p><a href="#">meross 24 Smart Interruttore WiFi Alexa</a> [pdf] User Manual</p> <p>24 Smart Interruttore WiFi Alexa, 24, Smart Interruttore WiFi Alexa, Interruttore WiFi Alexa, WiF i Alexa, Alexa</p>
---	--

## References

- [User Manual](#)