

Contents [[hide](#)]

- [1 meross MSS210 Smart Wi-Fi Plug](#)
- [2 Safety Information](#)
- [3 Package Contents](#)
- [4 LED and Button Rules](#)
- [5 Installation Guide](#)
- [6 Warranty](#)
- [7 Disclaimer](#)
- [8 FAQ](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)

meross

meross MSS210 Smart Wi-Fi Plug



Safety Information

- It is recommended that this device is used indoors in a dry location only.
- The device shall be used within its rated power included in the product specifications

on the package.

- Make sure the device is fully plugged in and kept out of reach of children for safety concern.
- Operating Frequency / max output power
- 2400MHz~2483.5MHz / 20dBm

Package Contents

- 1 x Smart Plug
- 1 x User Manual

LED and Button Rules



1. Power Button

Press the button to turn the smart plug ON or OFF.

To factory reset the smart plug, press and hold the button for 5 seconds until the LED flashes between amber and green.

2. Status LED

Solid amber: Initializing/ Firmware upgrading

Rapidly flashing green:

Wi-Fi connecting

Slowly alternating between amber and green: Ready to pair



Solid green: Connected to home Wi-Fi/ Successfully paired

Solid red: No internet connection OFF: Your receptacle is not powered on/ The smart plug is not turned on.

Installation Guide

1. Make sure your smart device is covered by strong Wi-Fi signal.
2. Download the Meross app. (P5)

3. Launch the Meross app and log in to your account, or if you are a new user, tap Sign up to create a new account.
4. Tap the “+” icon to select the type of smart device you want to add, then you can just follow the setup wizard to finish configuration. (P5)
5. Relocation of the smart device does not require additional operations provided that it is on the same network with strong Wi-Fi signal.

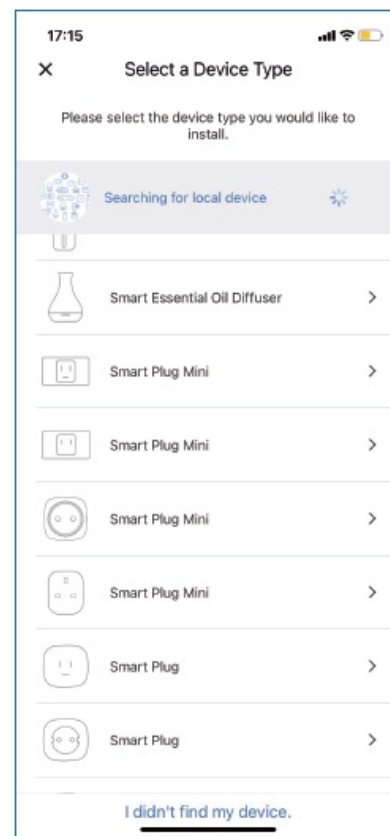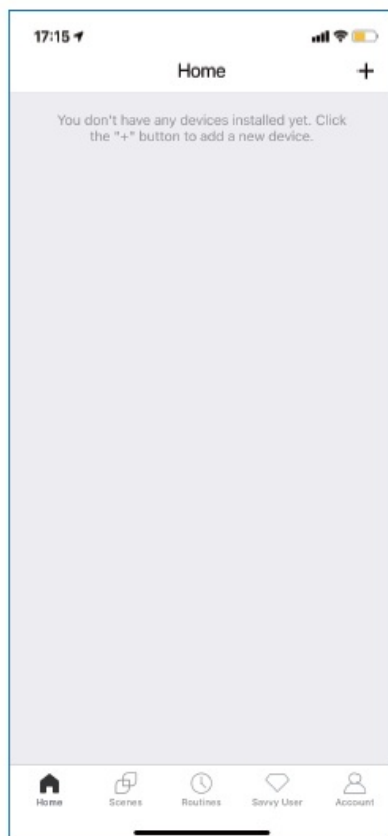

Link to Google Assistant or Alexa

Set up the device in the Meross app first, then link it to voice assistants. Link to Alexa Go to Account-> Alexa and allow Meross to link with Alexa. Link to Google Assistant Go to Account-> Google Assistant and follow the step-by-step instructions to complete the linking process.

Learn more at <https://www.meross.com/support/faqs>.

Warranty

Meross products are covered by a 24-month limited warranty from the date of purchase. Please visit <https://www.meross.com/support/warranty> for detailed warranty policy and product registration.

Disclaimer

1. The function of this smart device is tested under a typical circumstance described in our specifications. Meross does NOT guarantee that the smart device shall perform exactly the same as described under all circumstances.
2. By using third-party services including but not limited to Alexa, Google Assistant, Apple HomeKit and SmartThings, customers acknowledge that Meross shall not be held liable in any way for the data and private information collected by such parties. Meross's total liability is limited to what is expressly covered in its Privacy Policy.
3. Damages arising from ignorance of the SAFETY INFORMATION shall not be covered by Meross aftersales service, nor does Meross take any legal responsibility therefrom.

Customers acknowledge understanding of these articles clearly by reading this manual.

SIMPLE DEVICE SIMPLIFY YOUR LIFE

- Email: support@meross.com
- Website: www.meross.com

Manufacturer: Chengdu Meross Technology Co., Ltd. Address: No. 1312, Building E6-1, Tianfu Software Park, Chengdu, China CET PRODUCT SERVICE SP. Z O.O.(for authorities only) Ul. Długa 33 102 95-100 Zgierz Polen



FAQ

At Meross, we strive to assure your satisfaction. Attached below is a non-exhaustive list of questions that users are mostly concerned about.

1. **What devices can I control with Meross smart plug?**


You can control lights, fans, humidifiers, portable heaters, and other small appliances that are in conformity with the specifications of the smart plug, i.e. up to 13A/16A/10A/16A output for UK/EU/AU&US/FR appliances, respectively.

2. **What should I do when the LED turns solid red?**

You can troubleshoot the following:


- Check if your home Wi-Fi is working properly.
- Make sure that you have disabled access control in your router and that the smart plug is not blocked by the router’s firmware.
- Factory reset your Meross smart plug and try to add it again.

Documents / Resources

	meross MSS210 Smart Wi-Fi Plug [pdf] User Manual MSS210, MSS210 EU -QIG-230106, MSS210 Smart Wi-Fi Plug, MSS210 , Smart Wi-Fi Plug, Wi-Fi Plug, Plug
---	---

References

- [User Manual](#)

 Meross, MSS210, MSS210 EU -QIG-230106, MSS210 Smart Wi-Fi Plug, Plug, Smart Wi-Fi Plug, Wi-Fi Plug

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.