

meross

MSS710 Smart Wi-Fi Switch

User Manual



Contents [[hide](#)]

- [1 MSS710 Smart Wi-Fi Switch](#)
- [2 Safety Information](#)
- [3 Installation Guide](#)
- [4 FAQ](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)

MSS710 Smart Wi-Fi Switch

Dear customer,


Thank you for purchasing our product. Please read the following instructions carefully before first use and keep this user manual for future reference. Pay particular attention to the safety instructions. If you have any questions or comments about the device,

please visit our customer support page: www.alza.cz/EN/kontakt.

Safety Information


- It is recommended that this device is used indoors in a dry location only.
- Use the device within its rated power included in the product specifications on the package.
- Make sure the device is properly installed and kept out of reach of children for safety reasons.
- Please do not disassemble the device, otherwise there may be product damage or security risks.
- Please contact seller for replacement in the event of freight damages.

Package Contents

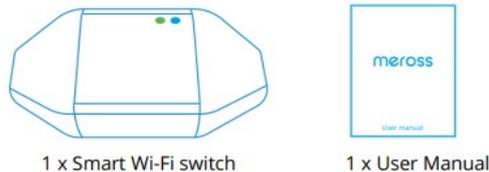

Installation Guide

Typical wiring diagram:

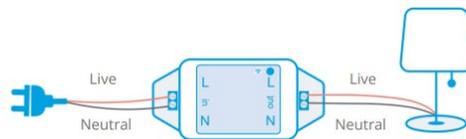

Download the Meross app




<http://bucket-meross-static.meross.com/production/qrcode/meross.html>

- Download the Meross app.
- Follow the instructions in the Meross app to complete the setup.

NOTE:

- The Matter device requires Bluetooth to set up. Please make sure the Meres app is granted to access the required system permissions, and the Bluetooth of your smart phone has been enabled.
- If this is not the first time you've added this smart device, you'll have to reset it before going any further.

LED and Button Rules

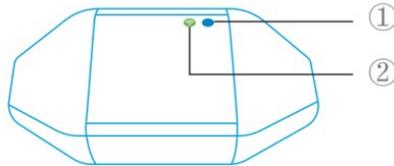

1. Button

Press to turn the switch ON or OFF.

Press and hold (for 5 seconds) until LED turns solid amber to initiate factory reset process.

2. LED

Solid amber: Initialization/ Reset/ Firmware upgrading mode.

Flashing amber and green slowly: Configuration mode.

Flashing green rapidly: Wi-Fi connecting mode.

Solid green: Successfully connected, and the switch is ON.

Solid red: No Internet connection, and the switch is ON.

OFF: The switch is OFF.

FAQ

- What should I do when I can't turn the smart switch on/off manually?

a) Make sure the smart switch is wired correctly. b) Please pay attention to the difference between input and output sides. c) Make sure that you restore power to the electric appliance.

- What if I can't control the smart device?

You can try the following troubleshooting steps: a) Ensure that your home

Wi-Fi is working properly. b) Check that access control is disabled on your router and that the smart device isn't blocked by the router's firmware. c) Factory reset your smart device, then try adding it again.

Disclaimer

- The function of this smart device is tested under a typical circumstance described in our specifications. Meross does NOT guarantee that the smart device shall perform exactly the same as described under all circumstances.
- By using third-party services including but not limited to Amazon Alexa, Google Assistant, Apple HomeKit and SmartThings, customers acknowledge that Meross shall not be held liable in any way for the data and private information collected by such parties. Meross's total liability is limited to what is expressly covered in its Privacy Policy.

- **Damag**

es arising from ignorance of the SAFETY INFORMATION shall not be covered by Meross aftersales service, nor does Meross take any legal responsibility therefrom.

Customers acknowledge understanding of these articles clearly by reading this manual.

Operating Frequency

No restrictions exist in the use of radio frequencies or frequency bands in all EU member states, EFTA countries, Northern Ireland and Great Britain.

yle="height: 18px" width="701">

Operating Frequency	2400MHz~2483.5MHz
Maximum Output Power	20dBm

Warranty Conditions

A new product purchased in the Alza.cz sales network is guaranteed for 2 years. If you need repair or other services during the warranty period, contact

the product seller directly, you must provide the original proof of purchase with the date of purchase.

The following are considered to be a conflict with the warranty conditions, for which the claimed claim may not be recognized:

- Using the product for any purpose other than that for which the product is intended or failing to follow the instructions for maintenance, operation, and service of the product.
- = "text-align: justify" > Damage to the product by a natural disaster, the intervention of an unauthorized person or mechanically through the fault of the buyer (e.g., during transport, cleaning by inappropriate means, etc.).
- Natural wear and aging of consumables or components during use (such as batteries, etc.).
- = "text-align: justify" > Exposure to adverse external influences, such as sunlight and other radiation or electromagnetic fields, fluid intrusion, object intrusion, mains overvoltage, electrostatic discharge voltage (including lightning), faulty supply or input voltage and inappropriate polarity of this voltage, chemical processes such as used power supplies, etc.
- If anyone has made modifications, modifications, alterations to the design or adaptation to change or extend the functions of the product compared to the purchased design or use of non-original components.

EU Declaration of Conformity

This equipment is in compliance with the essential requirements and other relevant provisions of EU directives.



This product must not be disposed of as normal household waste in accordance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE – 2012/19/EU).

Instead, it shall be returned to the place of purchase or handed over to a public collection point for the recyclable waste. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. Contact your local authority or

the nearest collection point for further details. Improper disposal of this type of waste may result in fines in accordance with national regulations.



Documents / Resources

	<p>meross MSS710 Smart Wi-Fi Switch [pdf] User Manual</p> <p>MSS710 Smart Wi-Fi Switch, MSS710, Smart Wi-Fi Switch, Wi-Fi Switch, Switch</p>
---	--

References

- [User Manual](#)

Meross, MSS710, MSS710 Smart Wi-Fi Switch, Smart Wi-Fi Switch, switch, Wi-Fi

Meross Switch

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.