



Contents [[hide](#)]

- 1 meross MSS810HK Smart Wi-Fi In-Wall Switch
- 2 Product Specifications
- 3 Pairing process
- 4 Installation Instructions
- 5 Hardware Installation
- 6 Disclaimer
- 7 Operating Frequency
- 8 Warranty Conditions
- 9 EU Declaration of Conformity
- 10 WEEE
- 11 FAQs
- 12 Documents / Resources
 - 12.1 References



meross MSS810HK Smart Wi-Fi In-Wall Switch



Product Specifications

- Product Name: Smart Wi-Fi In-Wall Switch
- Requirement: Neutral Wire Required
- Operating Frequency: 2400MHz~2483.5MHz
- Maximum Output Power: 20dBm

Safety Information:

Before using the product, ensure you carefully read and understand all safety instructions provided in the user manual. Failure to follow safety precautions could result in damage or injury.

Package Contents:

- 1 x Smart Switch
- 1 x User Manual
- 4 x Wire Label
- 3 x Wire

Installation Instructions:

- Download the Meross App from the App Store or Google Play Store.
- Follow the instructions in the app for setup.

Hardware Installation:

Connect the Live Load-1, Neutral, and Switch-1 wires according to the provided instructions. Use the button to turn the device on/off. To reset, press and hold the button for 5 seconds to toggle the traditional switch on and off 10 times within 10 seconds.

Disclaimer:

Customers must acknowledge their understanding of the articles provided in the manual.

Operating Frequency:

No restrictions exist on radio frequency use within EU member states, EFTA countries, Northern Ireland, and Great Britain. The maximum output power is 20dBm within the frequency range of 2400MHz~2483.5MHz.

Dear customer,

Thank you for purchasing our product. Please read the following instructions carefully before first use and keep this user manual for future reference. Pay particular attention to the safety instructions. If you have any questions or comments about the device, please visit our customer support page: www.alza.cz/EN/kontakt.

 
Safety Information

- It is recommended that this device is used indoors in a dry location only.
- The device shall be used within its published power rating included in the product specifications on the package.
- Connect this device only in the way shown in this manual. Any other method could cause damage or injury.
- The device may be connected to and may control electric circuits and appliances only if they comply with the respective standards and safety norms.
- Please do not disassemble the device, otherwise there may be product damage or security risks.
- Most accidents resulting from electric tool operation and maintenance are caused by the failure to observe basic safety rules or precautions. Therefore, please read and understand all the safety precautions.
- Make sure the device is kept out of reach of children for safety concern.
- Please contact the seller for replacement in the event of freight damage.

Caution

- Danger of electrocution. Mounting the device to the power grid has to be performed with caution.
- Danger of electrocution. The mounting or installation of the device should be done by a qualified person (electrician).
- Danger of electrocution. Even when the device is turned off, it is possible to have voltage across its clamps. Every change in the connection of the clamps has to be done after ensuring all local power is cut off or disconnected.

Package Contents

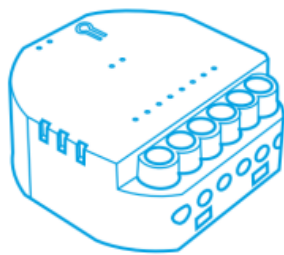


1 x smart switch



1 x user manual

Neutral	Neutral I
Load-1	Load-1
Switch-1	Switch-1
Live	Live

 4 x wire label

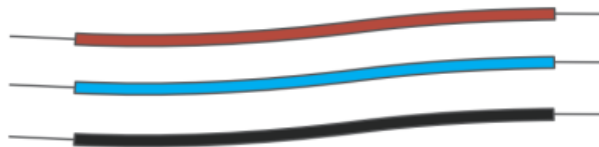

3 x wire

Beep Rules

- Power on: Three slow beeps.
- Reset successful: One long beep for both button and switch resets.

Pairing process

- a. Wi-Fi connection: Three slow beeps.
- b. Matter pairing: Three fast beeps (may repeat based on different apps).
- c. Successful connection: Three fast beeps, and the app will display “Pairing successful.”
- d. Failed pairing: No beep.

Installation Instructions

 


- Download the Meross app.
- Follow the instructions in the Meross app to complete the setup.

NOTE:

- The Matter device requires Bluetooth to set up. Please make sure the Meross app is granted access to the required system permissions, and the Bluetooth of your smartphone has been enabled.
- If this is not the first time you've added this smart device, you'll have to reset it before going any further.

Hardware Installation

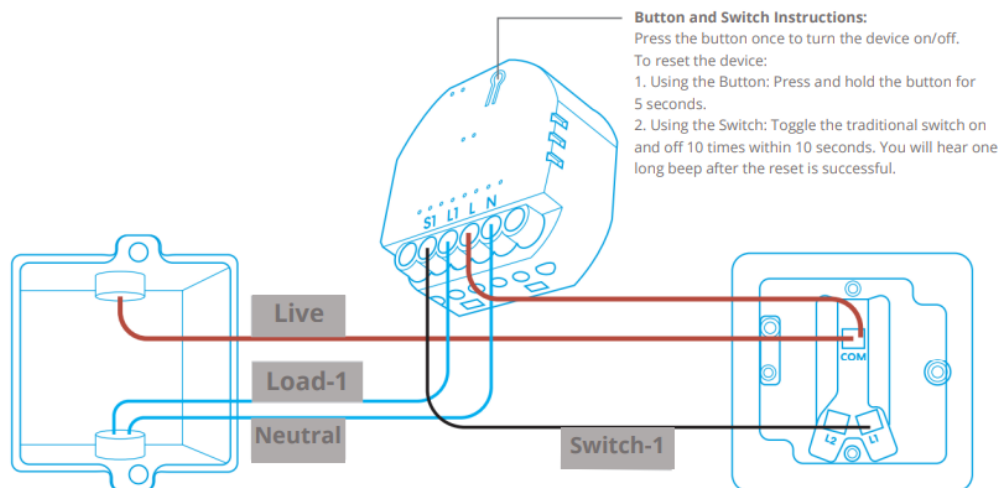

Disclaimer

- The function of this smart switch is tested under a typical circumstance described in our specifications. Meross does NOT guarantee that the smart switch shall perform

the same as described under all circumstances.

- By using third-party services such as Amazon Alexa, Google Assistant, Apple HomeKit, customers acknowledge that Meross shall not be held liable in any way for the data and private information collected by such parties. Meross's total liability is limited to what is expressly covered in its Privacy Policy.
- Damages arising from ignorance of the SAFETY INFORMATION shall not be covered by Meross aftersales service, nor does Meross take any legal responsibility therefrom.
- Customers acknowledge understanding of these articles clearly by reading this manual.

Operating Frequency

- No restrictions exist in the use of radio frequencies or frequency bands in all EU member states, EFTA countries, Northern Ireland, and Great Britain.
- Operating Frequency
2400MHz~2483.5MHz
- Maximum Output Power
20dBm

Warranty Conditions

A new product purchased in the Alza.cz sales network is guaranteed for 2 years. If you need repair or other services during the warranty period, contact the product seller directly, you must provide the original proof of purchase with the date of purchase.

The following are considered to be a conflict with the warranty conditions, for which the claimed claim may not be recognized:

- Using the product for any purpose other than that for which the product is intended or failing to follow the instructions for maintenance, operation, and service of the product.
- Damage to the product by a natural disaster, the intervention of an unauthorized person or mechanically through the fault of the buyer (e.g., during transport, cleaning by inappropriate means, etc.).
- Natural wear and aging of consumables or components during use (such as batteries, etc.).

- Exposure to adverse external influences, such as sunlight and other radiation or electromagnetic fields, fluid intrusion, object intrusion, mains overvoltage, electrostatic discharge voltage (including lightning), faulty supply or input voltage and inappropriate polarity of this voltage, chemical processes such as used power supplies, etc.
- If anyone has made modifications, modifications, alterations to the design, or adaptations to change or extend the functions of the product compared to the purchased design or use of non-original components.

EU Declaration of Conformity

This equipment is in compliance with the essential requirements and other relevant provisions of EU directives.

WEEE



— This product must not be disposed of as normal household waste in accordance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE – 2012/19/EU). Instead, it shall be returned to the place of purchase or handed over to a public collection point for the recyclable waste. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. Contact your local authority or the nearest collection point for further details. Improper disposal of this type of waste may result in fines in accordance with national regulations.

FAQs


Can I control multiple lights with this switch?

As long as the total power is below 400W, you can control multiple lights

Can this switch work with two-gang traditional switch?

No. This device can only work with one-gang/single-pole switch.

Documents / Resources

 <p>Smart Wi-Fi In-Wall Switch Neutral Wire Required</p>	meross MSS810HK Smart Wi-Fi In-Wall Switch [pdf] User Manual MSS810HK Smart Wi-Fi In-Wall Switch, MSS810HK, Smart Wi-Fi In-Wall Switch, Wi-Fi In-Wall Switch, In-Wall Switch, Switch
---	---

References

- [User Manual](#)

Meross

In Wall Switch, Meross, MSS810HK, MSS810HK Smart Wi-Fi In-Wall Switch, Smart Wi-Fi In-Wall Switch, switch, Wi-Fi In-Wall Switch

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.