



MerryloT Hotspot Miner Onboarding Instructions

[Home](#) » [MerryloT](#) » MerryloT Hotspot Miner Onboarding Instructions 


MerryloT Hotspot Miner Onboarding Instructions

Contents

- [1 Create Account](#)
- [2 Onboarding Hotspot Miner](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)


Create Account

Download Helium Hotspot APP

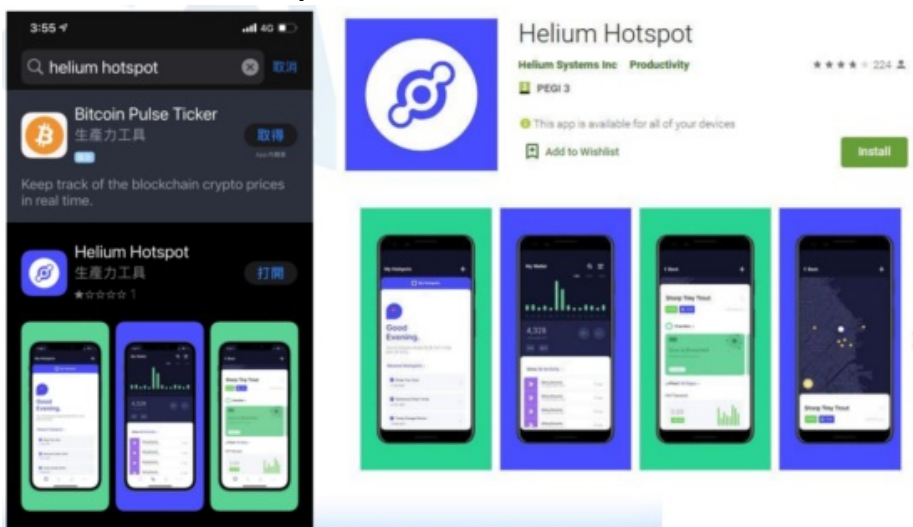

Create an Account

Generate the 12 Words for Protecting Helium Account

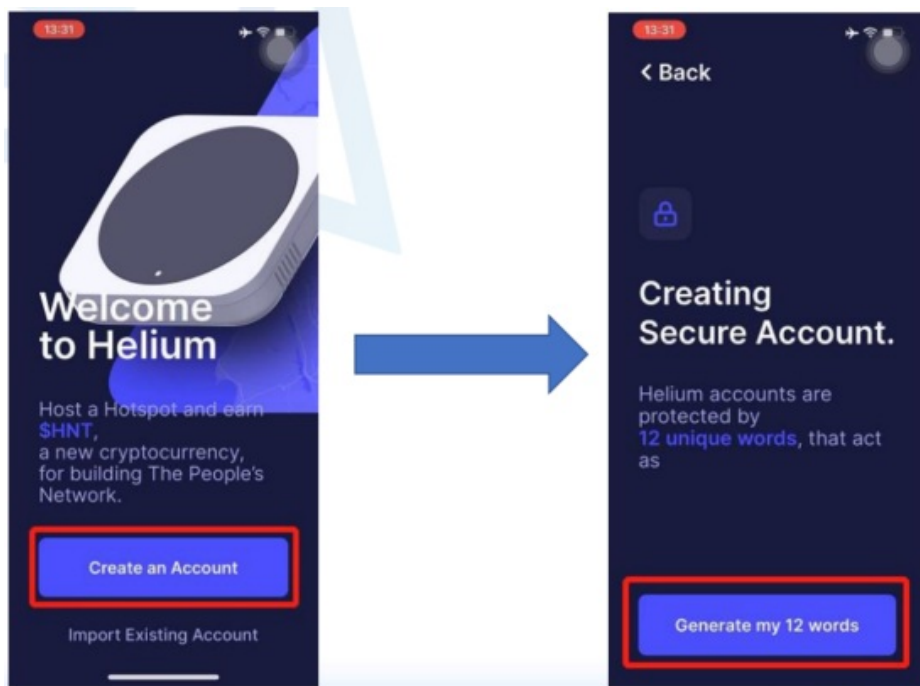


Example – the 12 Words Password




*Please write or screenshot each word!!

Confirm and Verify those words

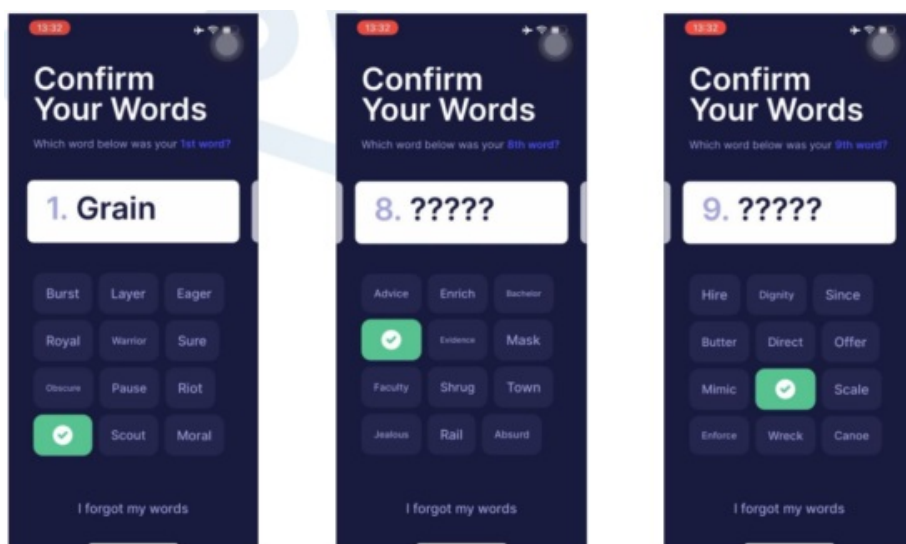


Set PIN Code and Repeat PIN
Recommend to Allow the Notifications

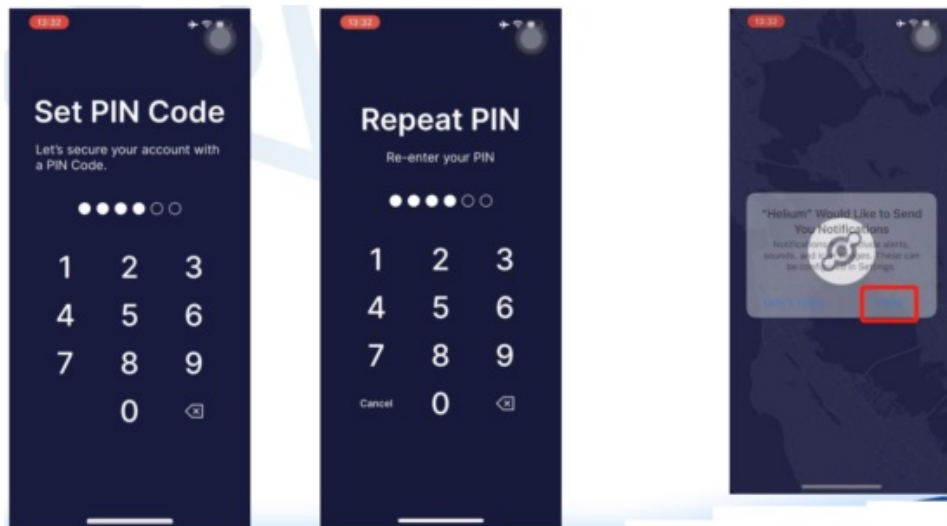


Onboarding Hotspot Miner

Power up the MerryloT Hotspot Miner


1. The MerryloT logo's LED light will flash when miner booting up.
2. Wait for MerryloT logo's LED with solid light, then go next step.

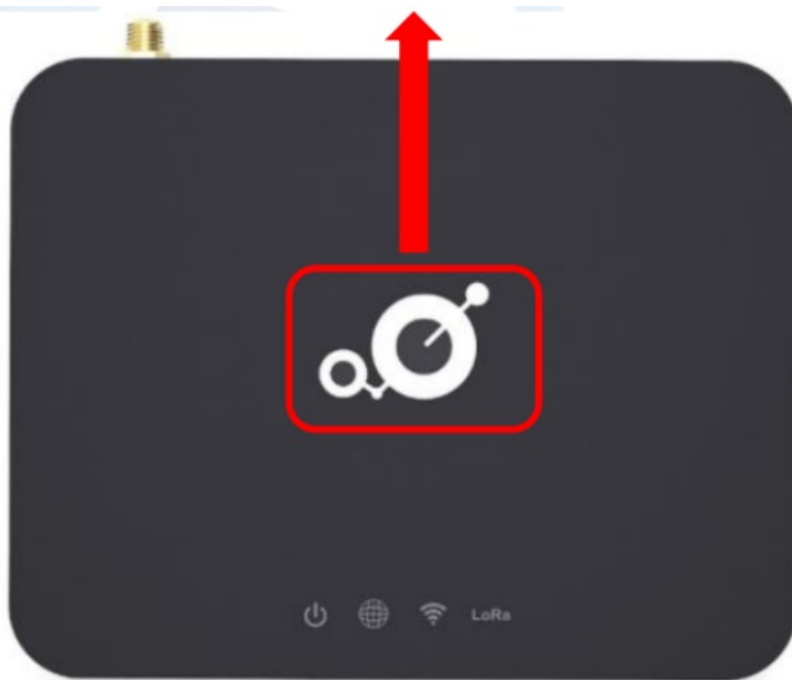


Add a Helium Miner
Choose MerryloT Hotspot V1

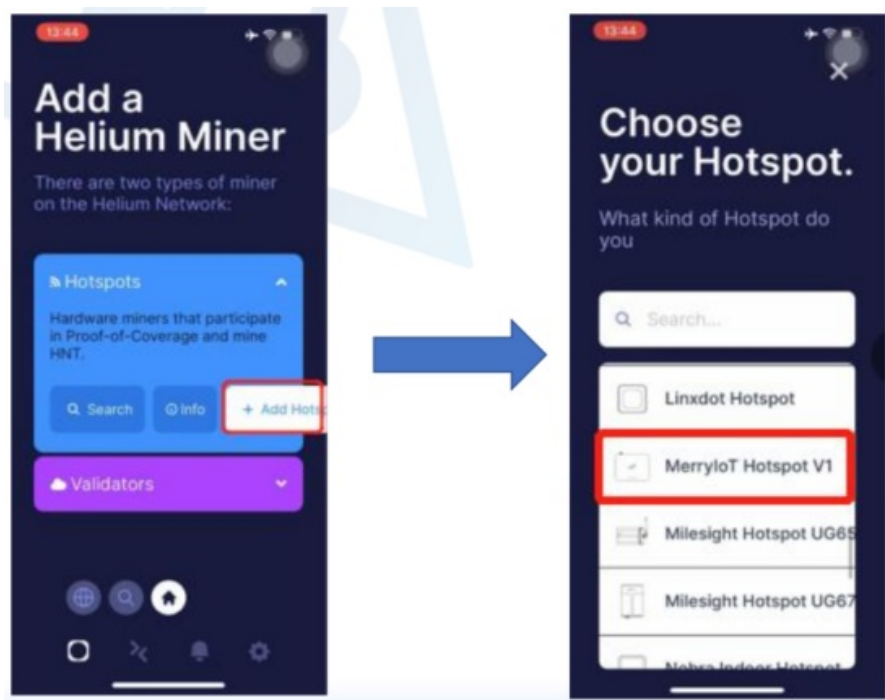


There are some hints before onboarding miner

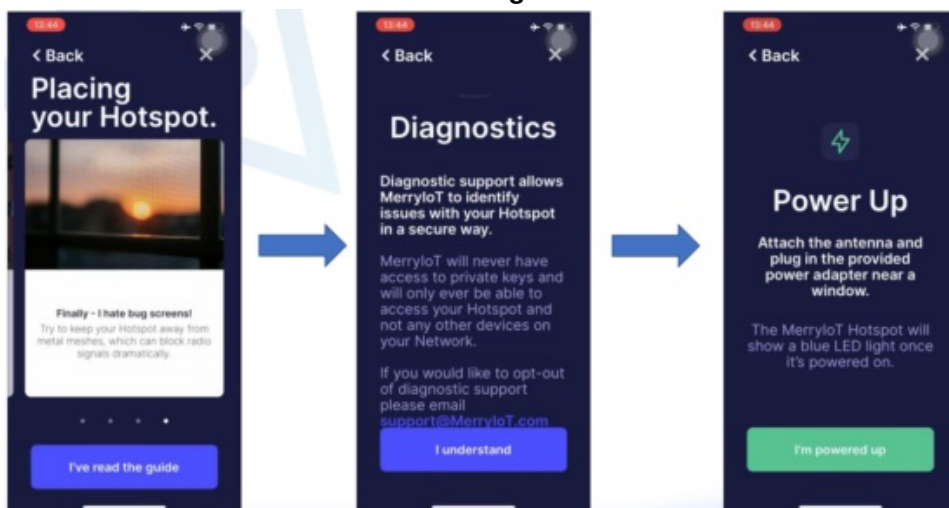


Enable smart phone's Bluetooth
Scan for Hotspot Miner

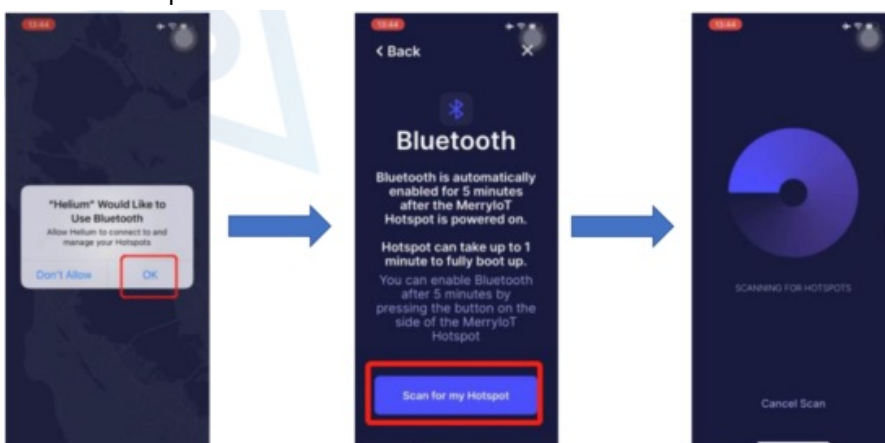


Select your Hotspot to continue
Pair with MerryIoT Hotspot Miner

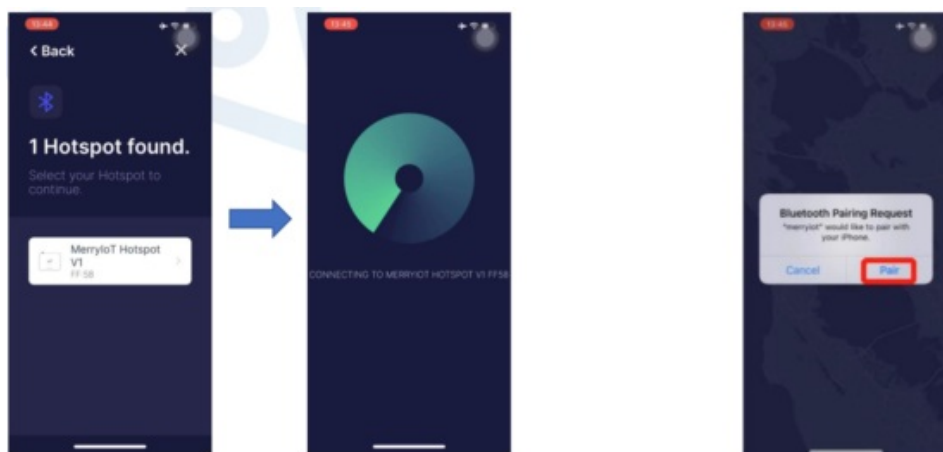


Select the WiFi network
Enter WiFi access password

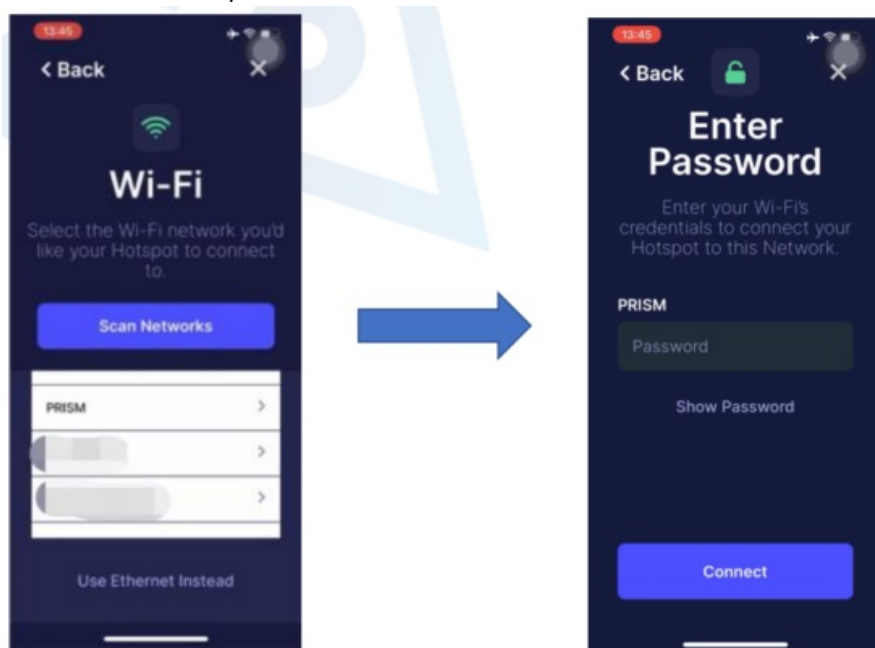

Set Hotspot Location
Enable Location Services
Set Location on the Map

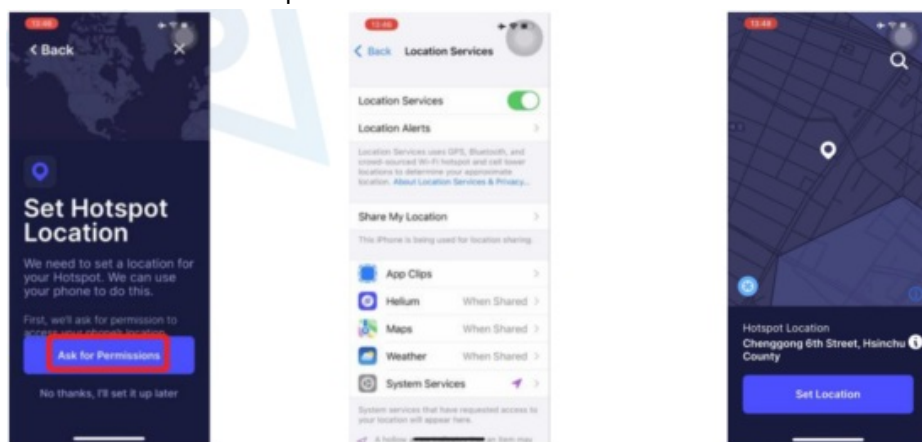


Antenna Setup (Default is 1.2 dBi)
Set Hotspot Installation Height

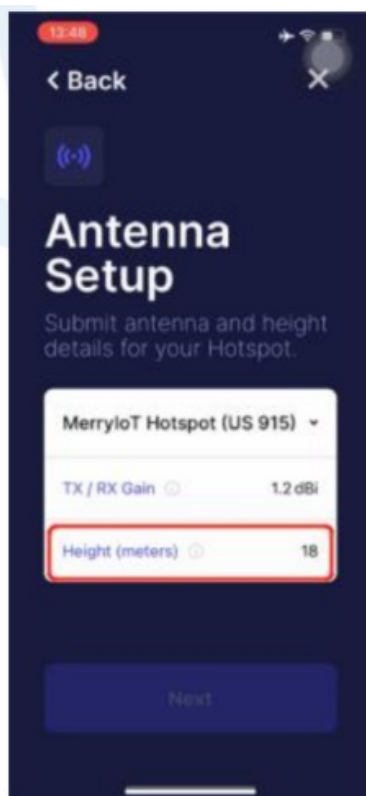

Register Hotspot

(Hotspot will take a while for sync up with Helium Blockchain)

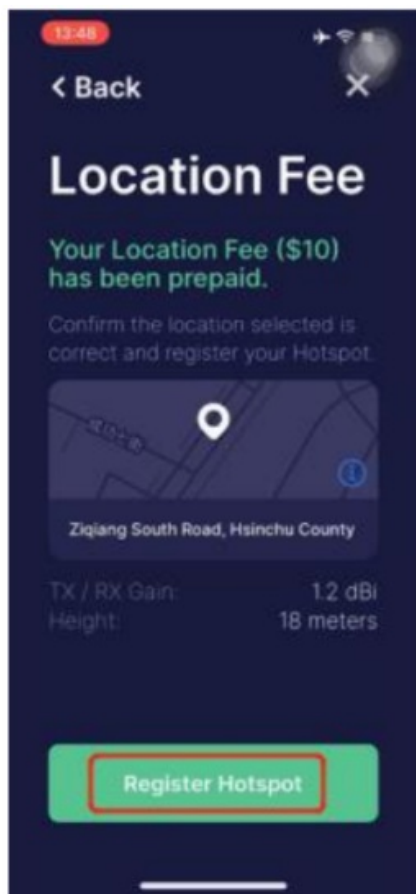

THANKS

Documents / Resources

	MerryIoT Hotspot Miner Onboarding [pdf] Instructions Hotspot Miner Onboarding
---	--

Manuals+.