



## Mesqool CR01019 Stylish Calendar Clock with Thermometer User Manual

[Home](#) » [Mesqool](#) » Mesqool CR01019 Stylish Calendar Clock with Thermometer User Manual 

# mesqool

**Stylish Calendar Clock with Thermometer**  
**THE BEST CHOICE FOR YOUR HOME**




**CR01019**

## Contents

- 1 Chapter 1 LOCATION OF CONTROLS
- 2 Chapter 2 POWER SOURCES
- 3 Chapter 3 TIME SETTING
- 4 Chapter 4 ALARM SETTING
- 5 Chapter 5 DIMMER
- 6 Chapter 6 USB & TYPE-C CHARGING
- 7 Chapter 7 DST
- 8 Chapter 8 RED INDICATOR LIGHT
- 9 Chapter 9 TEMPERATURE
- 10 Chapter 10 HUMIDITY
- 11 Chapter 11 ATTENTION
- 12 Documents / Resources
  - 12.1 References
 
## Chapter 1 LOCATION OF CONTROLS

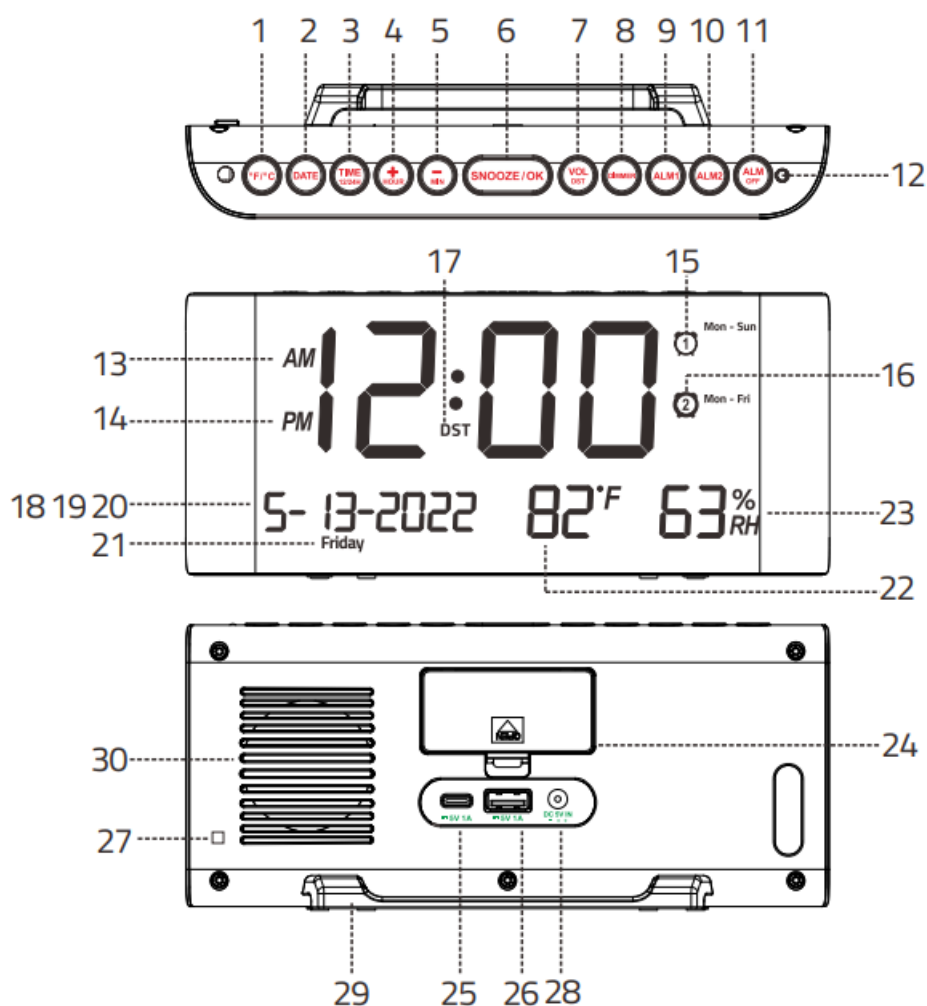

- 1. °F/°C
- 2. DATE
- 3. TIME & 12/24H
- 4. HOUR & Up
- 5. MINUTE & Down


6. SNOOZE & OK
7. VOL & DST
8. DIMMER
9. ALARM 1
10. ALARM 2
11. ALARM OFF
12. ALARM INDICATOR LIGHT
13. AM INDICATOR
14. PM INDICATOR
15. ALARM 1 INDICATOR
16. ALARM 2 INDICATOR
17. DST
18. MONTH DISPLAY
19. DATE DISPLAY
20. YEAR DISPLAY
21. WEEK DISPLAY
22. TEMPERATURE DISPLAY
23. HUMIDITY DISPLAY
24. BACKUP BATTERY COMPARTMENT
25. Type-C CHARGING PORT
26. USB CHARGING PORT
27. TEMPERATURE/HUMIDITY INDUCTOR
28. DC IN Jack
29. BRACKET
30. SPEAKER

## Chapter 2 POWER SOURCES

 1. Install 2pcs 1.5V “AAA” size batteries to the proper terminals in the battery compartment to memorize the time setting and the alarm will ring in case of power outage.





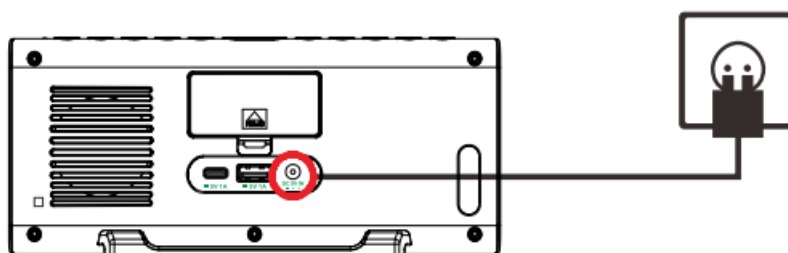

**NOTE:** Batteries are not included and don't support time display or any other functions

2. Connect the adapter line to DC jack , then plug into a 100~240V AC wall power outlet.




## Chapter 3 TIME SETTING







1. Press  button once, display  starts flashing.

- Press  button to set the hour.  
press  button to set the minute. Hold press  or  to quickly set the hour or minute.
- Press  button or  button to save time or wait for another 10 seconds to confirm automatically.














### To change 12H/24H time format

Hold press  button to change 12H/24H time format.

### YEAR/MONTH/DAY SETTING


- Press  once to maintain 2022 year flashing.
- Press  to increase year. Press  to reduce year.  
Hold press  or  to quickly increase or reduce.
- When you finish the year adjustment. Press  to save the setting.
- When month flashing, repeat Step-2 and Step-3 to set and save the month.
- When day flashing, repeat Step-2 and Step-3 to set and save the day.

### Chapter 4 ALARM SETTING

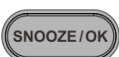- Press  button, the alarm indicator  will light up, the display  starts flickering.
- Press  button to set the hour, press  button to set the minute. Hold press  or  to quickly set the hour or minute.
- Press  button or  button to save alarm time or just wait for another 10 seconds to confirm automatically.
- When the display "Mon-Sun" flashes. Press  or  to adjust alarm period range. Mon-Sun / Mon-Fri / Sat-Sun/OneTime. Press  button or  button again to save setting.

### Setting ALARM 2 is the same as ALARM 1.

#### Set Alarm Ring Volume





Repeat  button to adjust the alarm ring volume for your preference.

There is 5 levels, The sequence is as follows:












03(default)-04-05-04-03-02-01-02.....

### Turn off Alarm


When alarm goes off:

 
- Press  button to temporarily turn off alarm for 9 minutes. Alarm will ring every next 9 minutes.
- Press  button to turn off alarm for 24 hours. The alarm indicator  or  is still on, which means alarm is still activated and will ring after 24 hours.

## Cancel Alarm

1. Hold press  button to turn off alarm1 and alarm 2 permanently. And corresponding indicator and will turn off.
2. Hold press  button, just turn off alarm 1 permanently.  indicator will turn off.
3. Hold press  button, just turn off alarm 2 permanently.  indicator will turn off.
4. If alarm 1 goes off, then hold press  or , just turn off alarm1 permanently.  indicator will turn off .
5. If alarm 2 goes off, then hold press  or , just turn off alarm 2 permanently.  indicator will turn off.


## Chapter 5 DIMMER

Repeat  button to adjust the brightness of display for your preference.  
There is 5 levels, The sequence is as follows:  
05(default)-04-03-02-01-02.....

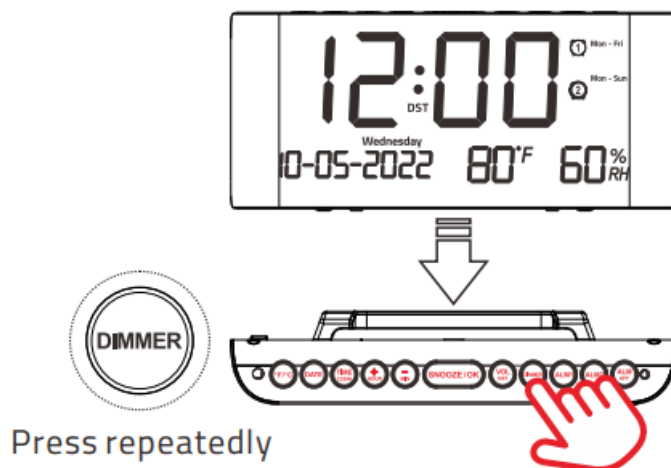

## Chapter 6 USB & TYPE-C CHARGING

 Plug charging cable into device such as phone or tablet.  
Device can charge both your phone or tablet at the same time.  
The maximum charge current is 1 Ampere.

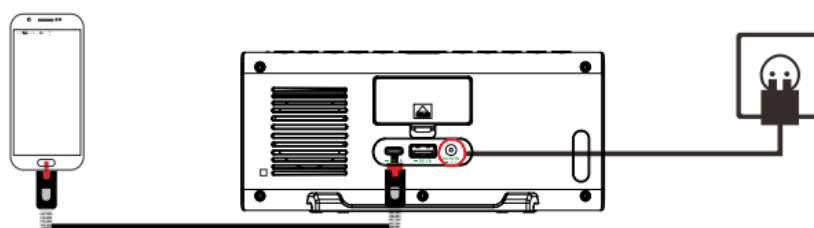

## Chapter 7 DST

Hold press  button to switch DST function. DST indicator will turn on.


Hold press  button again to turn off DST function. DST indicator will turn off.

## Chapter 8 RED INDICATOR LIGHT

When the alarm goes off the Red Indicator Light will flash.

## Chapter 9 TEMPERATURE

### TEMPERATURE FORMAT SWITCH

Displays in Fahrenheit by default. If you want to switch Fahrenheit / Celsius. Just press  button.

### IMPORTANT REMINDER

1. It may take 1 minute for the temperature sensor to complete the initialization.
2. Accuracy of thermometer is 1 degree Celsius.
3. There might be 1-3 degrees Celsius deviation within normal limits due to unstable air flow and room heating.

## Chapter 10 HUMIDITY

The measurement range of humidity is 0-99%RH, and accuracy deviation of humidity is 2%RH.

## Chapter 11 ATTENTION

Please note that the surface texture of each machine will be slightly different due to the use of natural wood grain materials.

 
Contact our experts  
[support@mesqool.com](mailto:support@mesqool.com)  
<https://www.mesqool.com>



Made in China

---

## Documents / Resources

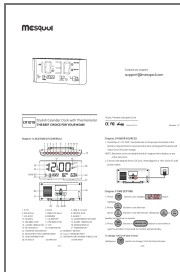

[Mespool CR01019 Stylish Calendar Clock with Thermometer](#) [pdf] User Manual  
CR01019 Stylish Calendar Clock with Thermometer, CR01019, Stylish Calendar Clock with Thermometer, Calendar Clock with Thermometer, Clock with Thermometer, Thermometer

References

- [User Manual](#)