



# metabo 600738000 OFE738 710 Watt Electronically Adjustable Router Instruction Manual

[Home](#) » [metabo](#) » metabo 600738000 OFE738 710 Watt Electronically Adjustable Router Instruction Manual 

## Contents

- [1 metabo 600738000 OFE738 710 Watt Electronically Adjustable Router](#)
- [2 General Power Tool Safety Warnings](#)
- [3 Warranty](#)
- [4 Documents / Resources](#)
  - [4.1 References](#)
- [5 Related Posts](#)

# metabo®

**metabo 600738000 OFE738 710 Watt Electronically Adjustable Router**



## Product Information

This product is an electric power tool that can be operated using either a power cord or a rechargeable battery. It can be used for various cutting, drilling, and grinding tasks.

## Electric Safety

- The power tool should only be connected to the power supply using the appropriate plug.
- The plug used should match the socket.
- Do not use the power tool with an adapter as it increases the risk of electrical shock.
- If the power cord is damaged, it should be replaced immediately.
- Use a residual current device (RCD) to avoid the risk of electrical shock in wet conditions.

## Personal Safety

- Do not operate the power tool under the influence of drugs or alcohol.
- Pay attention to what you are doing and avoid distractions.
- Wear appropriate clothing and keep loose clothing and jewelry away from moving parts.
- Avoid unintentional starting of the power tool, ensure that it is switched off before connecting it to a power source or replacing batteries.
- Store unused power tools out of reach of children and untrained persons.

## Product Usage Instructions

- Ensure that you have read and understood the safety warnings and instructions provided in the user manual before using the tool for the first time.
- Clean and keep your work area well-lit and free from clutter.
- Make sure that the power tool is switched off before connecting it to a power source or replacing batteries.
- When using the power tool, hold it firmly with both hands to maintain control and stability.
- Use the appropriate cutting or grinding attachment for the job.
- Keep sharp and clean cutting edges to reduce the risk of accidents and improve work quality.
- When drilling, ensure that the workpiece is securely clamped to prevent movement during operation.
- When using the power tool outdoors, ensure that it is used within the recommended power range.
- Store the power tool in a dry place, away from moisture and dust, and out of reach of children and untrained persons.

## **General Power Tool Safety Warnings**

**WARNING** Read all safety warnings, instructions, illustrations and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury. Save all warnings and instructions for future reference. The term “power tool” in the warnings refers to your mainsoperated (corded) power tool or battery-operated (cordless) power tool.

### **Work area safety**

- Keep the work area clean and well lit. Cluttered or dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks that may ignite the dust or fumes.
- Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

### **Electrical safety**

- Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges, and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.
- If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply. Use of an RCD reduces the risk of electric shock.

### **Personal safety**

- Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while

operating power tools may result in serious personal injury.

- Use personal protective equipment. Always wear eye protection. Protective equipment such as a dust mask, non-skid safety shoes, hard hat or hearing protection used for appropriate conditions will reduce personal injuries.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to a power source and/or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or energizing power tools that have the switch on invites accidents.
- Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
- Dress properly. Do not wear loose clothing or jewelry. Keep your hair and clothing away from moving parts. Loose clothes, jewelry or long hair can be caught in moving parts.
- If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of dust collection can reduce dust-related hazards.
- Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles. A careless action can cause severe injury within a fraction of a second.

### **Power tool use and care**

- Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.
- Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- Disconnect the plug from the power source and/or remove the battery pack, if detachable, from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.
- Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.
- Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
- Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.
- Keep handles and grasping surfaces dry, clean and free from oil and grease. Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.

### **Battery tool use and care**

- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.

- Use power tools only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
- When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- Do not use a battery pack or tool that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Do not expose a battery pack or tool to fire or excessive temperature. Exposure to fire or temperature above 130 °C may cause an explosion.
- Follow all charging instructions and do not charge the battery pack or tool outside the temperature range specified in the instructions. Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.

## Service

- Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.
- Never service damaged battery packs. Service of battery packs should only be performed by the manufacturer or authorized service providers.

## Warranty


The Metabo 3-year warranty

The XXL warranty is only available in countries that are listed on our website. Visit [www.metabo.com/xxl](http://www.metabo.com/xxl) for more information.




Metabowerke GmbH Metabo-Allee 1 72622 Nuertingen Germany

[www.metabo.com](http://www.metabo.com)

## Documents / Resources

	<p><a href="#">metabo 600738000 OFE738 710 Watt Electronically Adjustable Router</a> [pdf] Instruction Manual</p> <p>600738000 OFE738 710 Watt Electronically Adjustable Router, 600738000, OFE738 710 Watt Electronically Adjustable Router, Adjustable Router</p>
---	---

## References

-  [Metabo - Power Tools for professional users](#)
-  [metabo-service](#)
-  [Metabo | Электроинструменты для профессионального применения](#)

