




METEORCOMM BIB65010 Wayside Packet Data Transceiver User Guide

[Home](#) » [METEORCOMM](#) » METEORCOMM BIB65010 Wayside Packet Data Transceiver User Guide 



ITCR NG

1.0 Wayside Radio Installation and Field
Service Guide

DCN 00004464-B

Tier 2: Proprietary and Confidential – Do Not Distribute

Contents

- [1 BIB65010 Wayside Packet Data Transceiver](#)
- [2 Revision History](#)
- [3 Introduction](#)
- [4 Safety](#)
- [5 Wayside Radio Transmitter Operation](#)
- [6 Installation](#)
- [7 Command Security](#)
- [8 Troubleshooting](#)
- [9 Real-Time Log \(a.k.a “Trace”\) Monitoring](#)
- [10 Managing Software Application Images](#)
- [11 Routine Maintenance](#)
- [12 Appendix C: Block Diagram](#)
- [13 Documents / Resources](#)
 - [13.1 References](#)
- [14 Related Posts](#)

BIB65010 Wayside Packet Data Transceiver

Legal Notices

© Copyright 2023 Meteorcomm LLC. All rights reserved.

By downloading, using, or referring to this document or any of the information contained herein you acknowledge and agree:

Ownership

This document and the information contained herein are the sole and exclusive property of Meteorcomm LLC ("MCC"). Except for a limited review right, you obtain no rights in or to the document, its contents, or any related intellectual property. MCC may, upon written notice, terminate your internal review of this document and, upon such notice, you will return the original of this document to MCC together with the originals and all copies of all documents in your possession or under your control that refer or relate to it.

Limited Use and NonDisclosure

This document contains information that is considered confidential and/or proprietary to MCC. It is protected by copyright, trade secret, and other applicable laws. This document is provided to you for your internal review only and you may not disclose, transmit, distribute, duplicate or use it or any of the information contained herein, in whole or in part, except as agreed under separate written agreement with MCC. All information contained herein shall be kept strictly confidential.

Disclaimer of Warranty

THIS DOCUMENT AND ALL INFORMATION CONTAINED HEREIN OR OTHERWISE PROVIDED BY MCC, AND ALL INTELLECTUAL PROPERTY RIGHTS THEREIN ARE PROVIDED ON AN "AS IS" BASIS. MCC MAKES NO WARRANTIES OF ANY KIND WITH RESPECT THERETO AND EXPRESSLY DISCLAIMS ALL WARRANTIES OF ANY KIND, WHETHER EXPRESS, IMPLIED OR STATUTORY, INCLUDING BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, NON-INFRINGEMENT, ACCURACY, COMPLETENESS, INTERFERENCE WITH QUIET ENJOYMENT, SYSTEM INTEGRATION OR WARRANTIES ARISING FROM COURSE OF DEALING, USAGE OR TRADE PRACTICE.

Assumption of Risk

You are responsible for conducting your own independent assessment of the information contained in this document (including without limitation schematic symbols, footprints and layer definitions) and for confirming its accuracy. You may not rely on the information contained herein and agree to validate all such information using your own technical experts. Accordingly, you agree to assume sole responsibility for your review, use of, or reliance on the information contained in this document. MCC assumes no responsibility for, and you unconditionally and irrevocably release and discharge MCC and its affiliates and their respective officers, directors, and employees ("MCC Parties") from any and all loss, claim, damage or other liability associated with or arising from your use of any of the information contained in this document.

Limitation of Liability

IN NO EVENT SHALL MCC OR THE MCC PARTIES BE LIABLE FOR ANY INDIRECT, INCIDENTAL, EXEMPLARY, SPECIAL, PUNITIVE OR TREBLE OR CONSEQUENTIAL DAMAGES OR LOSSES, WHETHER SUCH LIABILITY IS BASED ON CONTRACT, WARRANTY, TORT (INCLUDING NEGLIGENCE), PRODUCT LIABILITY OR OTHERWISE, REGARDLESS AS TO WHETHER THEY HAVE NOTICE AS TO ANY SUCH CLAIMS.

Hazardous Uses

None of the information contained in this document may be used in connection with the design, manufacture or use of any equipment or software intended for use in any fail safe applications or any other application where a failure may result in loss of human life or personal injury, property damage, or have a financial impact or in connection with any nuclear facility or activity or shipment or handling of any hazardous, ultra hazardous or similar materials ("Hazardous Uses"). MCC disclaims all liability of every kind for any Hazardous Uses, and you release MCC and the MCC Parties from and shall indemnify MCC and the MCC Parties against any such liability, including, but not limited to, any such liability arising from MCC's negligence.

Copyright and Trademark

ARM™; AR cpu edge™ are trademarks of Meteorcomm LLC, and Meteorcomm®; ITCM®; ITCnet®; ITCview®; stylized METEORCOMM®; and Powering the Digital Railroad Network® are registered trademarks of Meteorcomm LLC; these trademarks may not be used without express written permission of Meteorcomm LLC.

Revision History

Revision	Date	Notes / Summary of changes
A	6/30/2021	Initial draft.
B	12/13/2023	Initial document release. Published in support of Release 1.0 of the ITCR NG 2 20 MHz Radio software.

Third-Party Trademarks

- Linux® is a registered trademark of Linus Torvalds in the U.S. and other countries.
- Microsoft® and Windows® are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- ZYNQ® is a registered trademark of Xilinx, Inc.

Introduction

The ITCRNG Wayside Radio Installation and Field Service Guide provides important radio-frequency safety information, installation procedures, and servicing instructions for the Meteorcomm Interoperable Train Control (ITC) Wayside radio model 65010. Throughout this and other documents the radio is referred to as the ITCR NG Wayside radio.

1.1 Audience

This guide is intended for users who perform any of the following tasks on Wayside radios:

- Install or replace them.
- Diagnose common problems.
- Adjust radio characteristics.
- Make simple repairs.
- Perform routine maintenance.

Prerequisites for users of this guide include:

- The ability to work with standard radio-frequency (RF) test equipment, including knowledge of how to prevent equipment damage or personal injury.
- The ability to measure basic transceiver performance, including RF power, frequency and receiver sensitivity, and the knowledge to analyze RF performance.
- Basic knowledge of the Linux shell.
- Knowledge of how to use an SSH client.
- Familiarity with means to limit RF exposure from antennas and familiarity with the Meteorcomm RF Energy Exposure Guide.

1.2 Some Terms Used in this Documentation

The term “Base radio” refers to the radio hardware unit and its immediately associated equipment, such as antenna and power source.

The term “base” refers to a network role that provides RF connectivity between the Back Office and locomotives and waysides. At present, only a Base radio can occupy the base role.

The term “remote” refers to a network role that does not provide a connection to the Back Office but that monitors its connection to a radio in the base role. A Locomotive or Wayside radio normally fills the remote role, but you can configure a Base radio to operate in the remote role.

NG The ITCR Wayside Radio Installation and Field Service Guide uses Linux-style notation.

Throughout this document the names of commands and their arguments in running text, as well as examples of commands and their outputs in shaded example boxes, are printed in fixed-width font, as in the following example:

```
config –profile –list
```

1.3 Specifications for ITC Model Wayside Radio 65010

The following tables describe the general, transmitter and receiver specifications for the Wayside Radio 65010.

Note: Specifications are subject to change without notice.

Table 1-1: ITC Model Wayside Radio 65010 General Specifications

Specification	Description
Frequency range	217.6 to 222 MHz
Channel spacing	25 kHz
Temperature range	Operating: -40°C to +70°C Storage: -55°C to +85°C
Humidity, operating	0% to 95% noncondensing; Test per S-5702, clause 3.2.3.2
Frequency stability	±1.5 ppm over operating temperature range (+25°C reference)
DC input voltage range	10.9 to 15.5 V Damage limit 17 VDC
DC current drain (13.6VDC input)	Transmit: 10A max into 50 Ohm load, 7.5A typical Receive: 1A max while receiving
DC power connector	Wago p/n 231-833/001-000
Height	15.5 in.
Width	9.5 in.
Depth	2.0 in.
Weight	6.9 lbs. (3.1 kg)
Antenna connector	Type N female
GNSS receiver	6.9 lbs. (3.1 kg) Type N female
GNSS antenna	Active or passive
External interface: Ethernet (3) 10/100/1000 Mbps	Maintenance port – Type RJ-45
External interface: USB	USB 2.0/3.0 compatible
General purpose I/O	3 TTL Inputs, 3 open collector outputs, 5V at 50mA
Display	Activity/Diagnostic LEDs on front panel

Table 1-3: ITC Model Wayside Radio 65010 Receiver Specifications

Specification	Description
Maximum usable sensitivity, static, BER<10 ⁻⁴	16kbps PI/4DQPSK -111dBm 32kbps PI/4DQPSK -108dBm
Adjacent channel selectivity	70dB @ 25kHz offset
Spurious response rejection	65dB
Intermodulation response rejection	65dB
High input level (-7dBm)	BER<10
Blocking, 1MHz offset	Half rate: 80dB Full rate: 77dB
Number of channels simultaneously received	20
Diversity support	No

1.4 Release Documentation

Along with this document, the following documents are included in the release package.

- ITCNG Radio System Architecture, DCN 00004692-A
- ITCRNG 1.0 Release Notes, DCN 00004475-A
- ITCR API Reference, DCN 00004474-A
- ITCR' Command Line Reference for Administration and Service (also called "CLI Reference'), DCN 00004461-C
- ITCR' Data Dictionary User Guide and Reference, DCN 00004470-C
- ITCR' Getting Started Guide, DCN 00005090-A
- ITCR™ Logging User Guide and Reference, DCN 00004469-C
- ITCR Radio Configuration Guide, DCN 00004468-C
- ITCR" Radio Management Guide, DCN 00004463-C
- ITCR' Security User Guide and Reference, DCN 00004471-A
- Meteorcomm Product Compatibility Matrix, DCN 00003775-L
- RF Energy Exposure Guide, DCN 00001235-G

1.5 How to Get Help

Please contact our Service Desk (<https://support.meteorcomm.com/home>) if you have any questions regarding this release.

We encourage you to provide feedback, comments, and suggestions so that we can improve the documentation to better meet your needs. Send your comments to the Service Desk and provide the following information:

- Document name
- Section or page number
- Software release number

Safety

Your employer has created safety guidelines that apply to your work environment and tasks. Please follow them. If

you have questions about general on-the-job safety concerns, please consult your employer's established safety guidelines.

2.1 Electrical Safety Guidelines

To reduce the risk of electric shock:

- Follow your employer's established electrical-safety guidelines.
- Disconnect power from radio before removing the cover.
- Be aware that removing the radio cover may expose you to dangerous voltages or other risks. Avoid making internal adjustments to the radio when you are alone.
- Avoid contact with a radio's electrical components. Electric shock from voltages present within the radio is potentially fatal.
- Reassemble radios correctly. Incorrect reassembly of a radio can cause a harmful electric shock to radio handlers.

2.2 RF Safety Information

You must be aware of the following information to prevent your physical harm or death or damage to the equipment.

2.2.1 Limiting RF Exposure



CAUTION! Please see the ITCR RF Energy Exposure Guide that is packaged with each radio for specific information regarding safe distances that must be maintained between personnel and energized transmitting antennas.

The information in the ITCR RF Energy Exposure Guide is determined from FCC and Industry Canada (IC) rules that, when followed, limit human exposure to radio frequency energy to acceptable levels. Note that although the Wayside radio should be sited, installed, and maintained only by professionals in a controlled-exposure environment, the ITCR RF Energy Exposure Guide lists the larger lateral safe distances for an uncontrolled environment. Obeying these limits will protect both railroad employees and the public.

The transmitter should be operated with a fixed antenna in an Occupational/Controlled Exposure environment per Federal Communications Commission (FCC) Office of Engineering and Technology (OET) 65 or Controlled Use Environment per IC RSS-102. The Maximum Permitted Exposure (MPE) limit for devices in the presence of the general public in the 100-300 MHz range is $0.2 \text{ mW/cm}^2 = 2 \text{ W/m}^2$ vs.

10 W/m^2 in a controlled-exposure environment.

This radio is intended for use by railroad employees who have full knowledge of their exposure and can exercise control over their exposure to meet FCC and IC limits. This radio device is not intended for use by consumers or the general population.

The table in the ITCR RF Energy Exposure Guide lists the calculated lateral distances to be maintained between the general public and an operational Wayside radio transmitter antenna for two antenna types suitable for fixed Wayside applications.



CAUTION! RF exposure compliance while servicing multiple transmitter sites must be addressed on a site-by-site basis. It is the responsibility of the licensee to ensure compliance with maximum exposure limits.

2.2.2 Fixed Antenna Guidelines

This section contains antenna information and additional notes regarding methods to limit RF exposure.

You must:

- Comply with limits on antenna location, power and effective antenna height per 47CFR Subpart T §90.701 et. seq., or Industry Canada SRSP-512 §6.3 as applicable. See section 4.3 for additional information about how to

comply with ERP limits. See the

- ITCR RF Energy Exposure Guide for specific guidelines regarding the siting and installation of fixed antennas.
- Follow the acceptable fixed-antenna types that are listed in the lateral separation distance tables in the ITCR RF Energy Exposure Guide.
- Install antennas in accordance with the manufacturer's instructions.
- Disable the transmitter when installing or servicing its antenna or transmission line.
- Maintain a safe distance from energized transmitting antennas. See the table of safe distances for Wayside radios in the ITCR RF Energy Exposure Guide, which is packaged with each radio.
- Remove any unauthorized antennas, equipment modifications, or attachments that could invalidate any equipment warranty or authority to transmit. Modification could damage the radio and may violate FCC or IC regulations. Contact Meteorcomm before using other antennas.

2.2.3 RF Interference with Residential Receivers

Notice to user: This device complies with Part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio-frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, you should try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from the one that the receiver is connected to.
- Consult the dealer or an experienced radio/TV technician for help.

2.2.4 Equipment Modifications



CAUTION! Any changes or modifications to this equipment not expressly approved by the party responsible for compliance (in the respective country of use) could void the user's authority to operate the equipment.

Wayside Radio Transmitter Operation

It is your responsibility, as the licensee, to operate this radio transmitter in compliance with FCC and Industry Canada service rules for 220-222 MHz, namely FCC Rules Part 90 Subpart T and Industry Canada SRSP-512.

3.1 Wayside Radio Channelization and Frequency Range

You can configure the Wayside radio to transmit on any one of 80 selectable 25 kHz-spaced channels ranging from 220.0125 to 221.9875 MHz inclusive. The spectrum included corresponds to all 5-kHz-wide FCC channels numbered from 1 at 220.0025 MHz to 400 at 221.9975 MHz. Each Wayside radio transmission occupies five of the FCC-defined 5 kHz channels. The lowest channel center frequency for the Wayside radio is in the center of FCC channel 3 and the next is FCC channel 8, then 13, 18, and so on, up to the highest in the center of channel 398.

3.2 Wayside Channel Restrictions

Section 90.715 of the FCC Rules lists the authorized frequencies of the 400 total 5-kHz-wide channels.

According to §90.733(d), these can be aggregated into larger channel widths with the exception of FCC channels 161 through 170 and 181 through 185. Therefore, the Wayside radio may not transmit on those channels or their 221 MHz counterparts, 361 through 370 and 381 through 385. This corresponds to Wayside radio frequencies 220.8125, 220.8375, 220.9125, 221.8125, 221.8375, and 221.9125 MHz.

Please see Part 90 Subpart T and SRSP-512 for additional frequency use restrictions in Canadian and Mexican border areas.

3.2.1 Restricting Wayside Transmission

If a Wayside radio connects to a Base radio advertising a local channel with a restricted frequency, the Wayside radio will transmit on that frequency. To prevent this situation, the `localInhibit` configuration parameter specifies a list of channels that the Wayside radio will not use.

```
{
  "itcnetd" : {
    "channels" : {
      "localInhibit" : [140, 141, 142]
    }
  }
}
```

There is no need to inhibit a channel if there is no risk of connecting to a Base radio using that channel.

3.3 Wayside-Radiated Power Limits



WARNING! It is your responsibility, as the licensee, to comply with the effective radiated power limits based on operating frequency, geographic location, and effective antenna height set out in 47CFR Subpart T §90.701 et. seq., or Industry Canada SRSP-512 §6.3, as applicable.

Important: The following supplementary antenna system information discusses methods for you, as the licensee, to determine effective radiated power (ERP) and comply with regulatory power limits.

You must comply with the specific power and antenna height limitations for fixed-antenna stations per §90.729 or SRSP-512 §6.3. Note that U.S. and Canadian power limits vs. HAAT are not identical.

You should note that all mobiles and also fixed installations transmitting between 221 and 222 MHz must limit ERP to 50W or $10 \cdot \log(50) + 30 = 47$ dBm peak envelope power (PEP) referenced to the 2.15 dBi gain of a dipole, unless operating under a waiver of FCC rule §90.729(b) or SRSP-512 §6.3 as applicable. The EIRP for this case is 49.15 dBm. Also note that the maximum ERP on FCC/IC channels 196 through 200 at 220.975 to 221.000 MHz is 2W.

The allowable transmitter peak envelope power output in dBm is determined by subtracting the antenna gain in dBi from 47, then adding the loss from the antenna feedline and connectors. If the result is greater than or equal to 44.85 dBm = 14.85 dBW then the maximum power output of the Wayside radio transmitter can be used. If the value is less than 44.85 dBm, then the transmitter output power must be reduced to the calculated value.

3.3.1 Mobile Installation

As an example of a mobile installation, consider a vertical half wave ground plane on a vehicle metal rooftop. In an ideal installation the antenna gain = 2.4 dBd = 4.55 dBi. Ignoring connector losses, feedline loss is at least 0.6 dB for 10 feet of Times Microwave LMR-195 Ultra Flex coaxial cable.

Transmitter power output limit = $47 - 2.4 + 0.6 = 45.2$ dBm PEP and therefore the system is compliant with the 50W ERP limit. The actual ERP in this case is $10^{[(45.2 - 2.4 - 0.6)/10]} = 46.2$ W. This installation is not allowed to transmit on FCC channels 196 through 200 because the maximum ERP is greater than 2W.

3.3.2 Fixed Installation

In a fixed installation, a common single-element exposed folded dipole antenna without reflector has 0 up to 2.9

dBd (2.1 – 5.0 dBi) azimuthal gain depending on the design.

After the allowable ERP is determined by applying all the previously listed power-restrictive rules and the antenna gain is known, the transmitter peak envelope power output feeding the transmission line is determined by subtracting the antenna gain in dBd from the ERP and adding the loss from the antenna feedline and connectors plus the loss from any external inline power sensors, combiners, filters or lightning arresters. If the net value is greater than or equal to 44.85 dBm, then the maximum power of the Wayside radio transmitter can be used. If the value is less than 44.85 dBm, then the transmitter output power must be reduced to the net value.

Example for the 50W ERP fixed case: Antenna gain = 2.9 dBd and feedline loss is at least 0.5 dB for 25 feet of Times Microwave LMR-400 coax plus 0.4 dB for inline lightning arrester and three connectors.

Assuming no other losses, the transmitter power output limit = $47 - 2.9 + 0.9 = 45$ dBm PEP. In this case, the actual Wayside ERP is $44.85 + 2.9 - 0.9$ dBm = 46.85 dBm = 48.4W PEP and therefore the system is compliant with the 50W ERP limit. This installation is not allowed to transmit on FCC channels 196 through 200 because the maximum ERP is greater than 2W.

Installation

The Wayside radios satisfy the industry standard ITC requirements as part of an integrated 220 MHz radio network supporting the implementation of Positive Train Control (PTC) systems. The Base radio, Locomotive radio, and Wayside radios form the transportation backbone on which a messaging application provides communication capabilities between railroad assets and their Back Offices. The ITC radio provides communication in an interoperable fashion enabling messaging to occur across railroad boundaries.

Wayside radios are typically installed at wayside locations and configured as remotes to make connections with bases. Wayside radios are housed in metal enclosures. The Wayside radio dimensions are approximately 15.5"W x 9.5"H x 2.0"D and it weighs less than 8 pounds.

All input/output ports are grounded and/or shielded. Internal shielding, unit assembly and printed circuit board (PCB) design are used to minimize unwanted radiated emissions.


 **WARNING!** This radio requires an external isolated power supply to provide ground isolation between the radio and the site electronics. Failure to use an isolated power supply (for example, connecting unit directly to site batteries) would induce a ground fault at the site because the radio unit is grounded to the bungalow both through the ground lug as well as the global navigation satellite system (GNSS) and 220 antennas.

Figure 4-1: Wayside radio





Radio installation consists of these steps:

1. Unpack and inspect the radio.
2. Mount the radio.
3. Ground the radio.
4. Install current-limiting circuit protection.
5. Connect the antenna.
6. Connect the Ethernet cable.
7. Connect the GNSS antenna.
8. Connect the power cable.
9. Power on the radio.
10. Check front-panel LEDs.
11. View the power-on self-test (POST) results.
12. Initialize coordinated universal time (UTC) time correction data.

The following sections describe each of these steps in detail.

4.1 Equipment Required for Verification of Specification Compliance

Following is a list of equipment required to perform all of the tests described in this document. You should be familiar with the pieces of test equipment listed in the following table. Instructions about how to use the following equipment are beyond the scope of this document.

Table 4-1: Equipment required for installation and field service

Type	Model	Notes
Vector signal generator	Agilent E4438C or equivalent	Recommend option for 50VDC, SOW input protection of RF signal output port. Preprogrammed with DQPSK data packet
Vector signal analyzer	Agilent E9010A or equivalent	
10 MHz frequency standard	Standard Research Systems model FS725 or equivalent	Wayside radio frequency adjustments require frequency standard accuracy to 0.01 ppm or better.
60 dB power attenuator/load		Consists of two pieces with 100W and 2W min. power rating.
Constant voltage DC power supply		Verify unit supports voltage and current draw required by unit under test
Host computer with at least one Ethernet port and MobaXterm, PuTTY, or equivalent terminal program installed		If the host computer's Ethernet port has not been configured, follow the instructions in "Appendix A Configure Computer Ethernet Interfaces" on page 50.
Wilmore DC-DC Converter 1675-12-12- 15 or equivalent		The radio must be grounded to a proper isolated converter.
Clip-on ammeter		
Antenna/VSWR test kit		
Cable ties as required		
Digital volt meter		
Network analyzer		
Portable power meter		
Site tester		

4.2 Unpacking and Inspecting the Radio

When you unpack and inspect the radio, note any damage that may have resulted from shipping including dents or loose parts. Also note any damage or discrepancies between the contents in the shipping container and the packing list.

Note: The radio is shipped with a power connector (Meteorcomm [MCC] part number 010031-0306).

Please ensure it is connected to the radio and not left in the packing box.

If you detect damage or the contents do not match the invoice, make note of the defect and contact the radio manufacturer, with particular attention to the following:

- Observable damage to chassis and connectors
- Missing parts such as screws and included connectors
- Evidence of contamination including stains and odors
- Evidence of electrical stress such as plasma flashover, pitting, and arc damage

If you do not detect any damage and the shipping invoice matches the contents, continue with the installation.

4.3 Mounting the Radio

The radio cover is equipped with top and bottom mounting features. The Wayside radio should be mounted on a vertical surface with the cooling fins oriented vertically for maximum heat dissipation. In mounting the radio, ensure that:

- Equipment that produces substantial heat is not installed below the radio.
- Each radio is secured with a minimum of two screws on the top and bottom.
- There is adequate room to install and remove a USB memory stick.
- There is adequate room for cable connections.
- Cables are restrained to prevent kinking, and stressing connectors.

Figure 4-2: Vertical mount


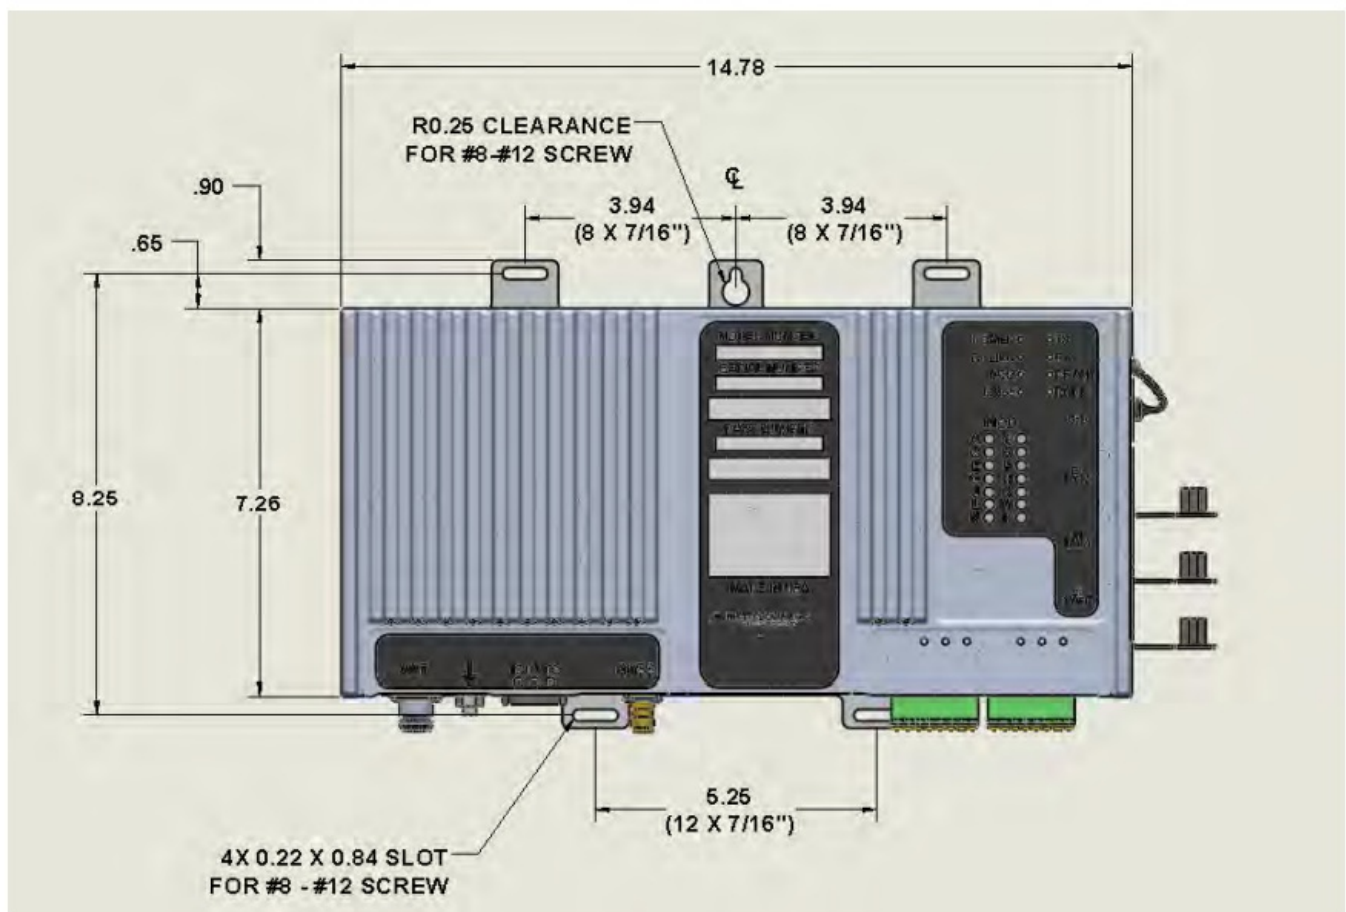


Figure 4-3: 19-inch rack mount



4.4 Power Supply Requirements for Wayside Radios

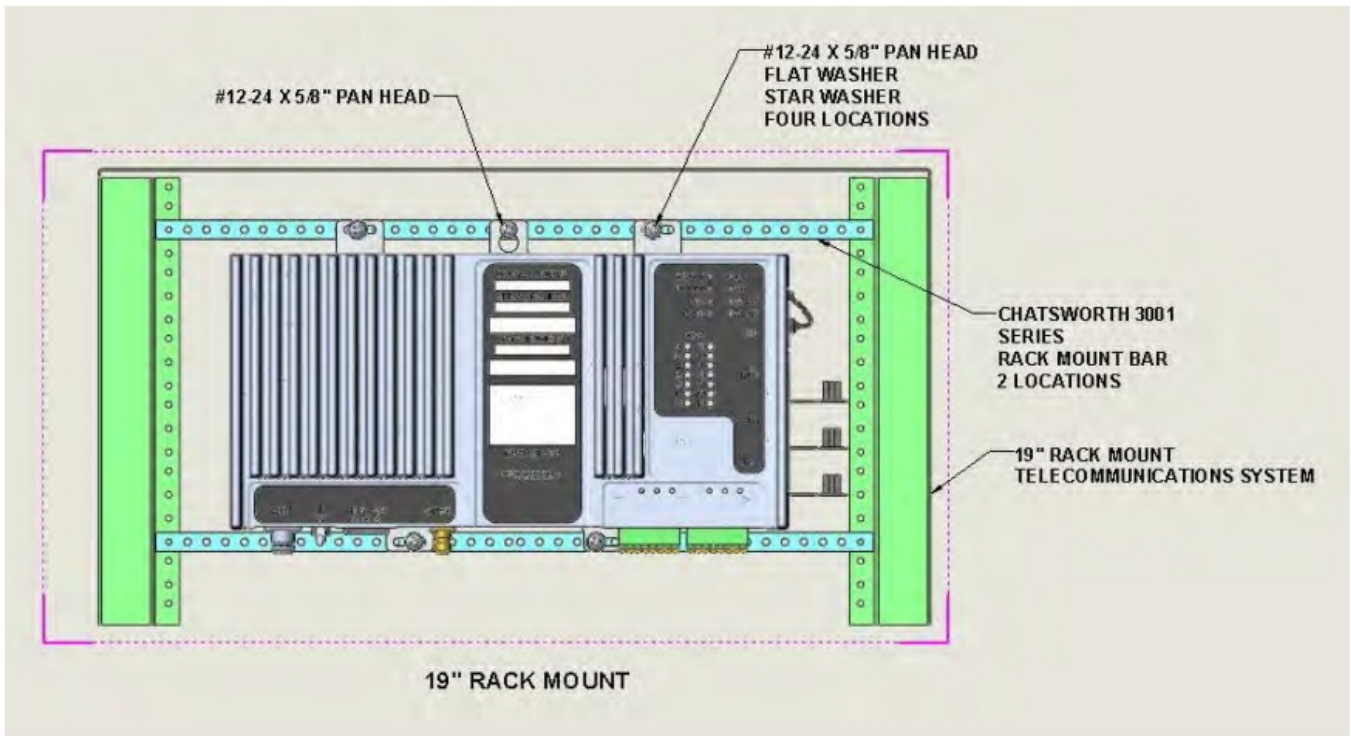

CAUTION! Applying an incorrect voltage outside the rated voltage range of a Wayside radio can damage it. Confirm the voltage ratings of the radio and the power supply before applying power.

Table 4-2: Wayside radio input power parameters

Parameter	Value
Nominal DC Power Input Voltage	13.6VDC
Operational Range	10.9 – 15.5VDC (+14%/-20%)
Damage Limit	17VDC
Current Drain (while transmitting rated power)	7.5A typical while transmitting into 50 Ohm load, 10A maximum

4.5 Grounding the Radio



WARNING! This radio requires an external isolated power supply to provide ground isolation between the radio and the site electronics. Failure to use an isolated power supply (for example, connecting unit directly to site batteries) would induce a ground fault at the site because the radio unit is grounded to the bungalow both through the ground lug as well as the GNSS and 220 antennas.



WARNING! Ensure the radio is grounded. Not grounding the radio could result in possible bodily injury.

The Wayside radio is equipped with a 1/4-inch grounding stud located between the antenna connection and the external power connection.

Note: The radio must be grounded to a proper isolated converter such as the Wilmore DC-DC

isolated converter (P/N 1675-12-12-15) or equivalent.

To ground the radio:

1. Remove the nut and washer from the grounding stud.
2. Connect the ground wire ring lug to ground.

4.6 Installing Current Limiting Circuit Protection

External circuit protection must be supplied to each radio. If necessary, always replace the fuse with a 10A/32V-rated ATO fuse.

4.7 Connecting the Antenna

You must plan the location before you can connect the antenna.

4.7.1 Antenna planning


The radio is designed to be properly terminated to 50-Ohm resistance load. Wayside radios have one antenna port.

4.7.2 Connecting the cable

The Wayside radio is rated for 25W PEP. Sufficient termination is required to protect test equipment.

The Wayside radio uses N-type connectors for narrowband RF antennas. For transmitter and receiver testing, connect the test equipment to the port labeled ANT.

Figure 4-4: Antenna connector

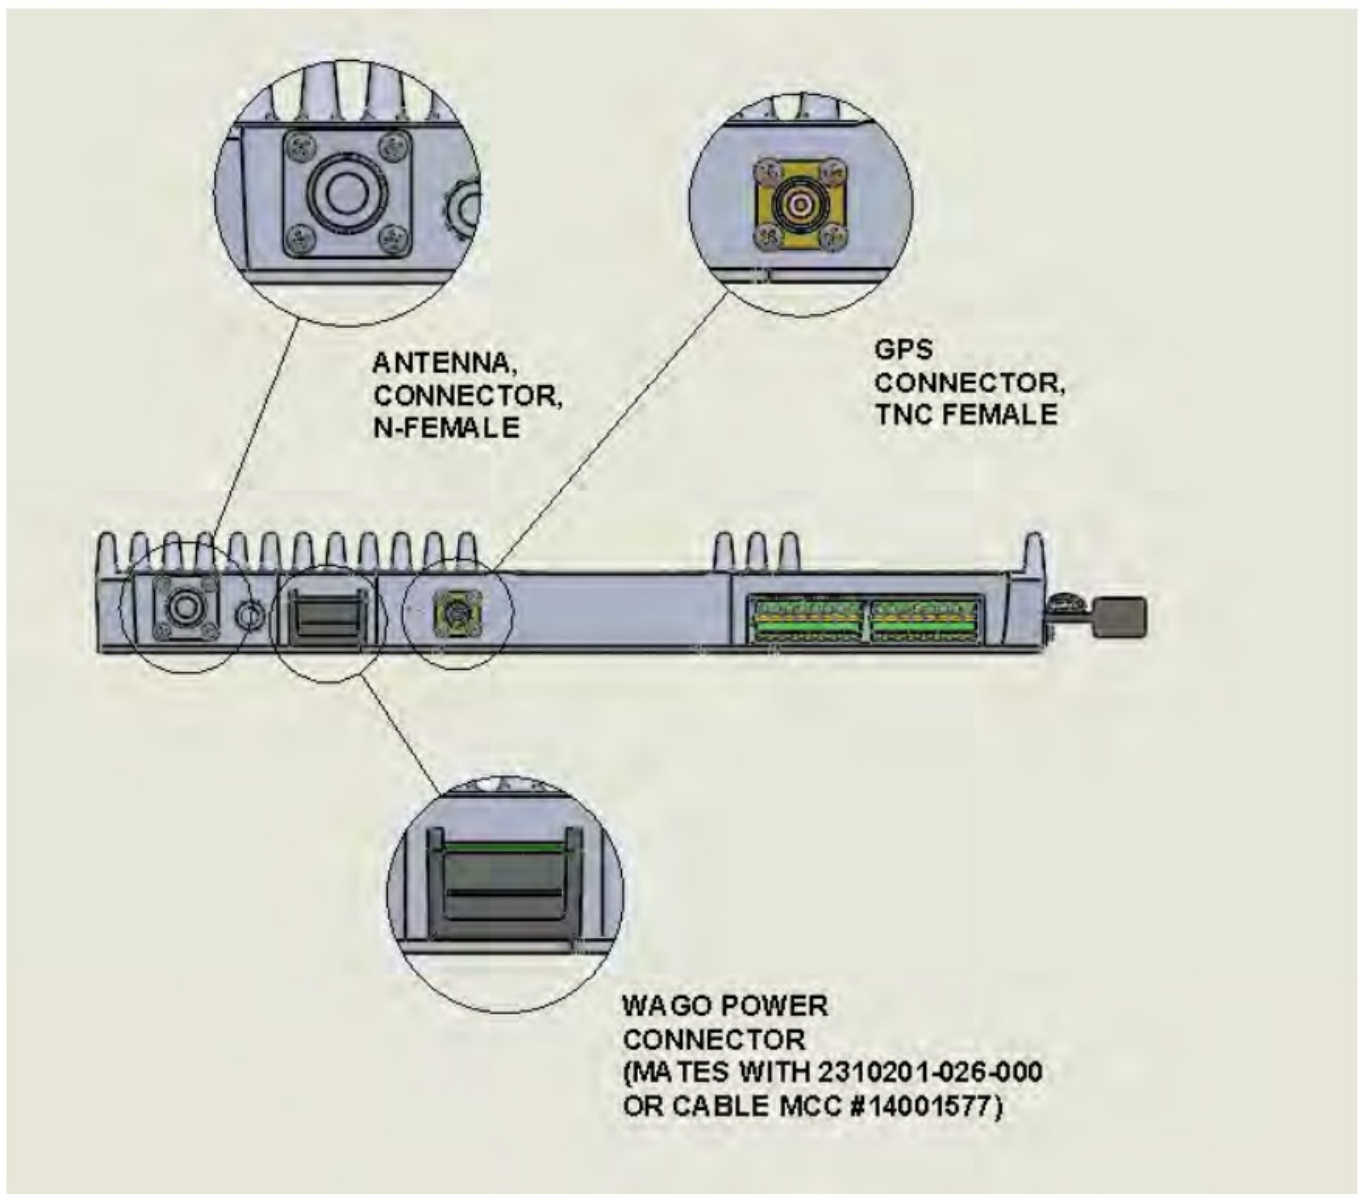


To connect the cable:

1. Perform or confirm a 220 MHz antenna voltage standing wave ratio (VSWR) test prior to connecting the antenna to the radio using an antenna/VSWR test set.
2. Slip the connector over the radio port and tighten.
3. Restrain all cables while observing the cable manufacturer's minimum bend radius requirements.

4.8 Connecting the Ethernet Cable

The Wayside radio uses a standard CAT5 or CAT6 Ethernet cable and three RJ-45 Ethernet I/O ports, each on its own network.

Figure 4-5: Ethernet connections

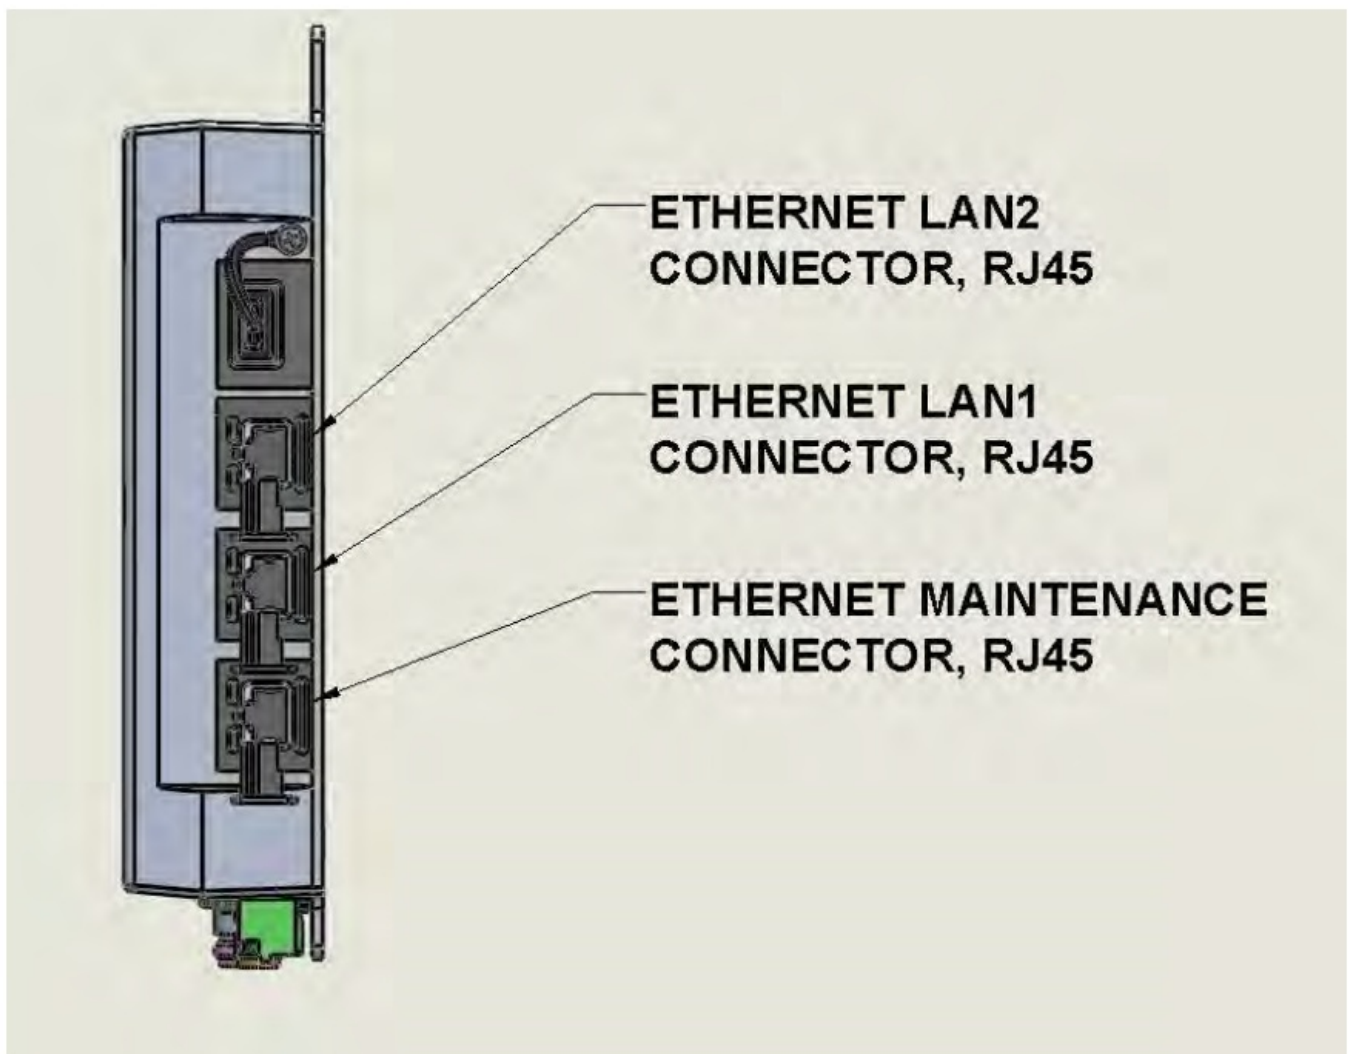

Insert the cable into one of the ports on the radio marked LAN for 'local area network'.

4.9 Connecting the GNSS Antenna


Position the GNSS antenna to avoid strong interferers that could saturate the antenna low noise amplifier or the radio GNSS receiver internal low noise amplifier. Combinations of strong interferers could mix and interfere directly with the GNSS signal quality. Test the Wayside radio GNSS with any interference source active to qualify the antenna-antenna isolation of the GNSS antenna position.

4.9.1 GNSS satellite constellation overview

The current GNSS satellite constellation is comprised of 30 active satellites in six inclined orbits, with several on-orbit spares. The GNSS satellites operate in circular, ~11-hour, 58-minute orbits at an inclination of 55 degrees, at an altitude of 20,200 km.

This type of satellite is referred to as a medium Earth orbit (MEO). It is not in geostationary orbit. This is important because unlike geostationary orbit (GEO) satellites, which are located at an altitude of 35,790 km over the equator, MEO satellites move throughout most of the sky so there is no significant preferential sky visibility sector when installing the GNSS antennas at the site. You must optimize the GNSS antenna location selection for as much sky visibility as possible, in all directions, not just south.


Figure 4-6: GNSS satellite constellation

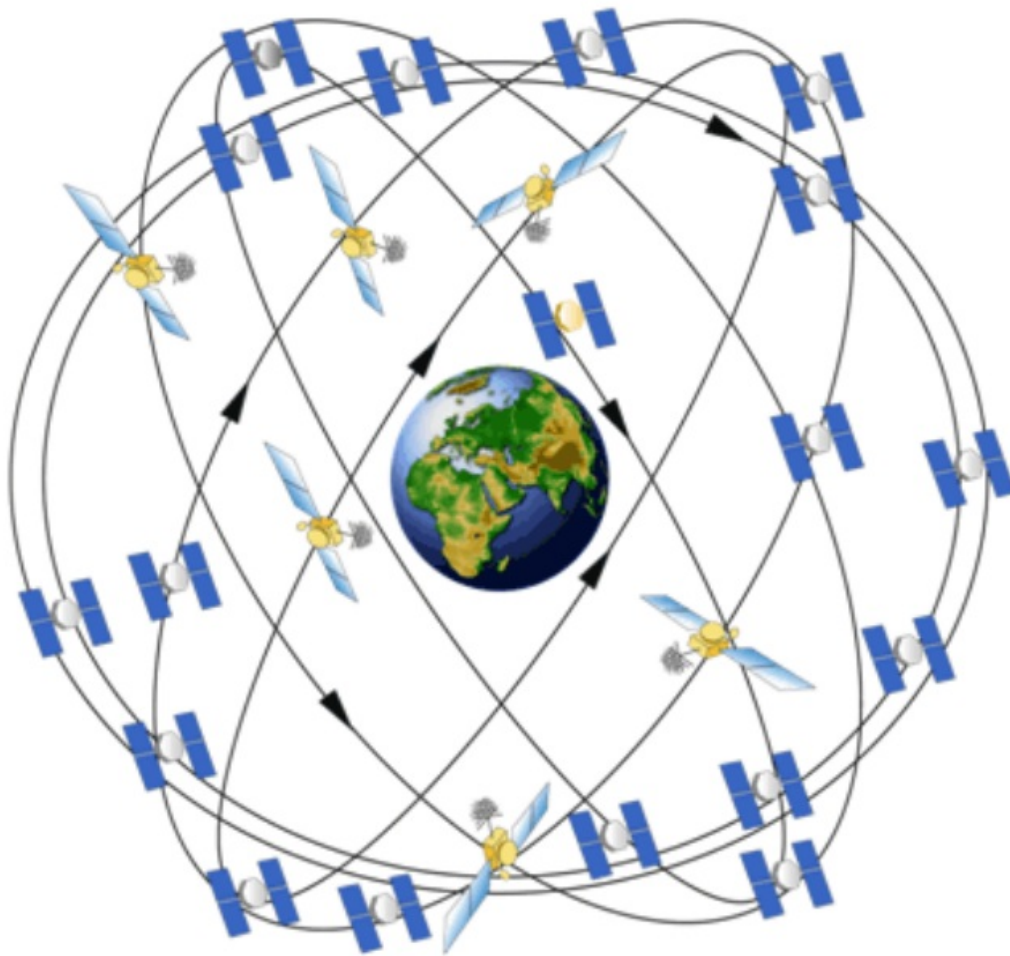

4.9.2 GNSS antenna planning considerations

When determining antenna locations, you should consider several factors. The figure below illustrates four typical degradation conditions that a GNSS antenna may face.

Figure 4-7: GNSS antenna considerations

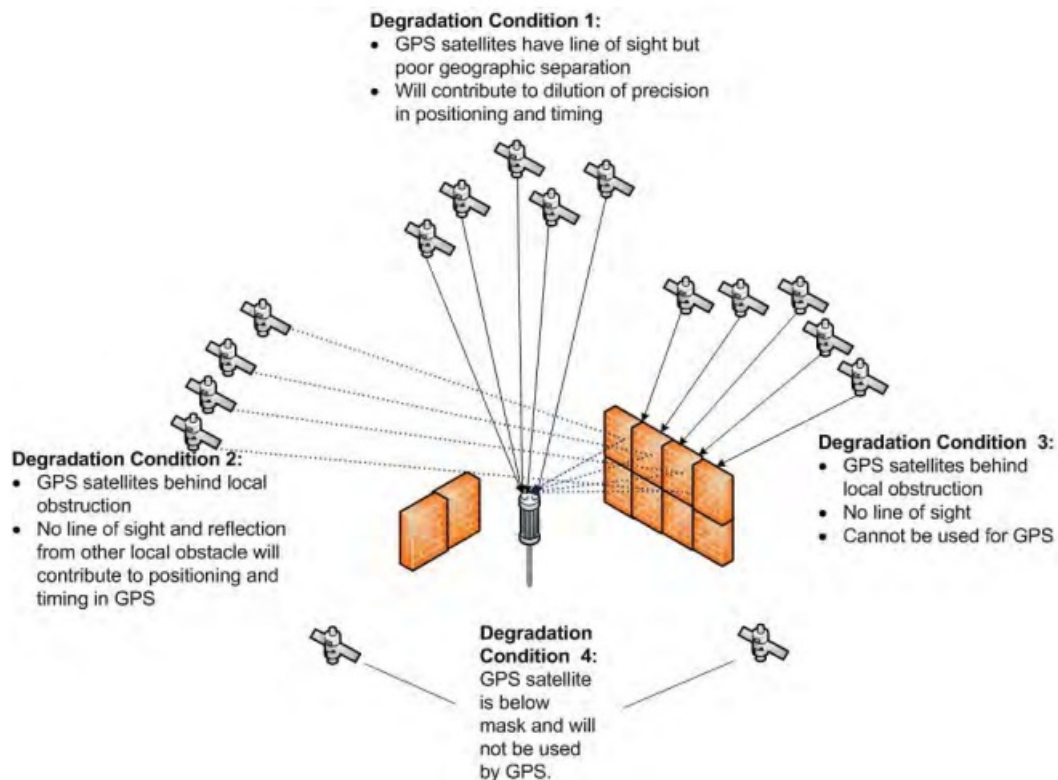

- Degradation Condition 1: Some of the satellites have a direct view to the GNSS antenna and as they move they fall behind various obstructions. There may be instances where the satellite constellation can provide replacement satellites that have unobstructed visibility. However, in the example shown, even the visible GNSS satellites have a poor geographic separation and this contributes to a poor dilution of precision (DOP).
- Degradation Condition 2: Some satellites may only have an indirect view of the GNSS antenna so that a reflected path that is longer than the direct path is all that is available. This results in an artificially long path, and timing errors are introduced, likely causing position errors during the self-survey and timing anomalies, depending on the distance of the reflecting object.
- Degradation Condition 3: Satellites that are completely obstructed have no view of the antenna and are invisible to the antenna, even though they are in the GNSS Almanac in the radio.
- Degradation Condition 4: Satellites that are below the mask angle (~10 degrees) that is set in the radio are ignored by the radio, even if they have perfect visibility of the antenna.

4.9.3 Minimize potential of GNSS antenna issues

You should optimize the GNSS antenna installation to avoid intermittent timing anomalies. In many cases, simply roof-mounting the GNSS antenna to a bungalow may not be sufficient.

The best ways to minimize impact from timing problems are to do the following:

- Install the antenna as high as is practical and as allowed by local, state, and federal laws.
- Reduce the obstruction angles by installing the antenna further from obstructions to reduce their apparent size from the perspective of the GNSS antenna:
- Static obstructions to sky aperture include terrain, buildings, highway overpasses, flyovers, and coniferous vegetation.
- Transient obstructions to sky aperture include vehicles, rolling stock (either moving or parked in a siding, especially at AAR Plate H), stored Conexes, and deciduous vegetation.

- Always note the format of the GNSS coordinates (for example, decimal-degrees or decimalminutes).

4.9.3.1 Antenna separation at collocated sites

If multiple GNSS antennas are to be collocated, you should consider separation options.

This consideration stems from the use of high-gain low-noise amplifiers (LNAs) in the GNSS antenna itself. Close proximity can result in the input of one LNA detecting the output of an adjacent LNA, creating a feedback loop that may result in jitter and desensing.


Generally, active GNSS antennas should be separated by at least 6 feet, without compromising sky aperture. This is especially important at collocated sites where maintenance responsibilities of the various GNSS antennas and their transmission systems may span different departments, or even different companies. This is less of an issue with GNSS antennas installed on locomotives, where one department in a single company is responsible for the maintenance of GNSS antennas and their transmission systems.

Sometimes, due to environmental and economic constraints, optimizing the GNSS antenna location any further is not possible. In those cases, it may be more effective to reconsider which of the three available timing modes will best serve an impaired GNSS installation.

4.9.4 Connecting the GNSS antenna

The GNSS antenna connection is a threaded Neill–Concelman (TNC) female connector and always provides an active antenna voltage. If the active antenna installed exceeds either the voltage or current ability of the radio then external power must be supplied to that antenna. A DC block must be used at the radio when the additional power is supplied to avoid damage to the radio.

Figure 4-8: GNSS connector

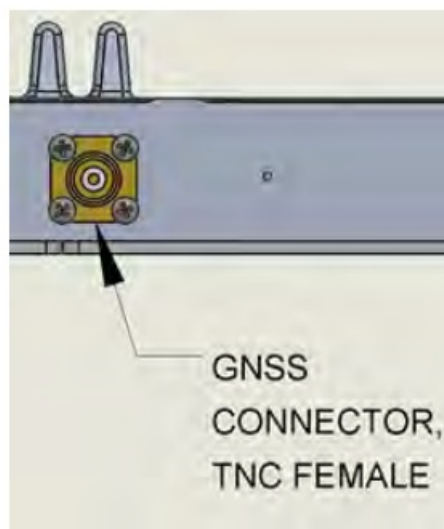

To connect the GNSS antenna:

1. Confirm that the GNSS antenna has been verified with a network analyzer.
2. Verify the power requirement of the GNSS antenna and connect a DC block and tee in the case that external power is necessary.
3. Connect the GNSS antenna cable to the GNSS antenna input connector on the radio and tighten securely but do not overtighten. Avoid cross-threading the connector.

4.10 Connecting the Power Cable



CAUTION! Applying an incorrect voltage to a radio can cause damage. Confirm the voltage of the power supply and the polarity before applying power to the radio.

The Wayside radio operates from a 13.6VDC nominal supply (10.9 – 15.5 VDC range) isolated from other electronic equipment using a DC-DC isolated converter such as the Wilmore Model 1675-12-1215. The Wayside radio uses a Wago-type connector supplying 10.9 – 15.5VDC.

Note: The radio only operates on DC voltage. Any application of AC voltage could damage the radio.

Figure 4-9: Example of a typical power cable externally fused with 10A ATO


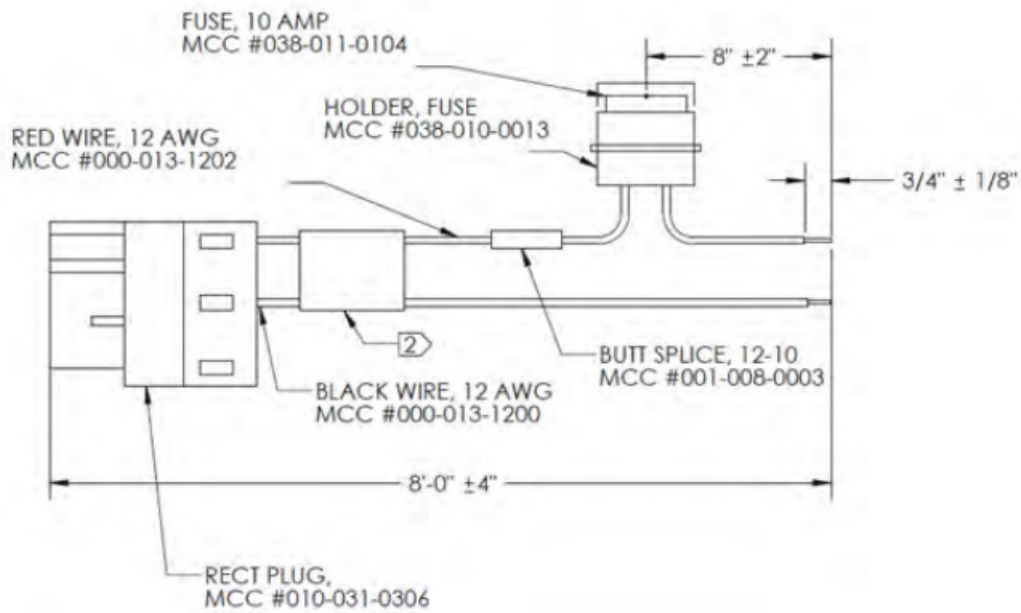


Figure 4-10: Power connector



1. The radio does not have a power switch. Verify that the power is off before connecting the radio to a power source.
2. Confirm proper grounding.
3. Verify the ground bond from the ground lug on the radio through external surge protection.
4. Confirm that the ground lug connection has not bypassed the isolator converter.
5. Insert the connector into the slot. The connector can only fit one way. Make sure the red wire is connected to the slot marked +.

4.11 Powering On the Radio

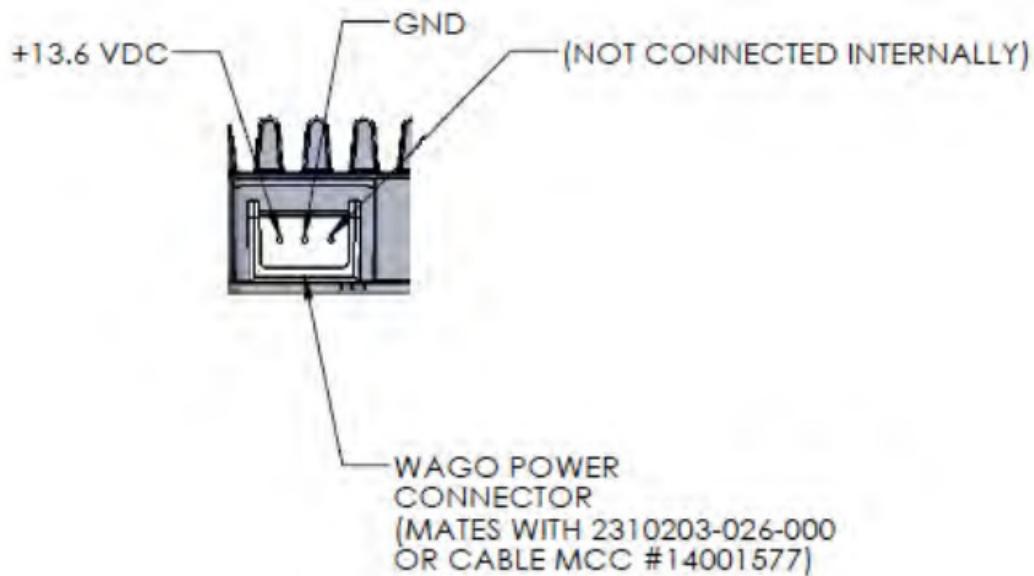

WARNING! You should never apply power to any radio unless you are acutely aware of your intentions and the environment in which the radio is operating. Applying power to an improperly terminated radio may result in

damage to the radio, cause operator injury, or violate regulatory laws regarding radio transmissions because radios will begin transmitting full-rated power without any user intervention under certain conditions.

To power on the radio:

- 1. Confirm that all connections are tight and secure.
- 2. Power on the radio.

4.12 Checking the Front Panel LEDs


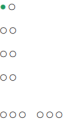



The layout of the LEDs is as follows:

First row:	POWER TX
Second row:	RF LINK RX
Third row:	MSG RF ANT
Fourth row:	GNSS RADIO
Bottom row:	GPIO LEDs

4.12.1 LEDs at Power-On

On power-on, the front panel LEDs, including the GPIO LEDs, progress through a sequence indicating that the operating system has booted and the radio application software is starting. The Power LED is not under software control. The progress is described in Table 4-3.

Table 4-3: Front panel LED sequence on radio start-up

Trigger	Pattern	Notes
sequence		approximately 0.5 seconds.
		All settable LEDs Off for a brief period, approximately 2.5 seconds.
		All settable LEDs Red for a brief period, approximately 2.5 seconds. GPIO LEDs are Off.
		All settable LEDs Green for a brief period, approximately 2.5 seconds.
		All settable LEDs Amber for a brief period, approximately 2.5 seconds. GPIO LEDs are Off.

The LEDs take on their normal states upon completion of the boot sequence. These are described in Table 4-4. The LEDs (except POWER) remain amber if the radio is booted to the failsafe partition upon factory reset.

4.12.2 Normal LED States

The normal states of the front panel LEDs are described in the following table.

Important: Read the description of each LED below carefully. Some LEDs, such as the POWER LED, indicate a problem when they are off. Other LEDs, such as MSG (Message) and RADIO, indicate a problem when they are steady red.

Table 4-4: Normal states of front panel LEDs

Label	Description	Color
POWER	<ul style="list-style-type: none"> • GREEN when the power is good. 	Red/Green/Amber
RF LINK	<ul style="list-style-type: none"> • OFF before itcnetsd is running. • AMBER when waiting for first base selection upon startup. • GREEN upon selection and connection to a base (indicates radio is registered with the network). • RED if radio remains in selected state for more than 5 seconds (indicates radio is having trouble completing connection to the selected base). • RED upon transition to disconnected state from selected/connected. 	Red/Green/Amber
MSG	<ul style="list-style-type: none"> • OFF until configured HRX servers are started. • AMBER after HRX servers are started and waiting for ELM connection on startup. • GREEN when primary and backup ELMs are connected. • RED if primary connection is lost (indicates message fault). • RED for 5 seconds if backup connection attempt fails. <p>Note: The MSG LED will remain OFF if, for any reason, the radio is not configured for an HRX connection to a messaging host.</p>	Red/Green/Amber
GNSS	<ul style="list-style-type: none"> • OFF after timesyncd service starts. • AMBER after GNSS initialization is complete and before radio enters Precise timesync state (or a valid GNSS UTC time is received). • GREEN when a valid GNSS fix is achieved. • RED when initial configuration is not complete within 60 seconds. • RED when the valid GNSS UTC time has not been received within 60 seconds after timesyncd service starts or 3 seconds after previous GNSS UTC time update, which occurs every second. • RED when an SBF ReceiverStatus is not received within 60 seconds. • RED when GNSS antenna circuit is open or short (an overcurrent is detected); remains RED until condition is cleared (the fault condition of not receiving GNSS UTC time within 3 seconds will likely be triggered before an antenna fault condition but the LED remains RED until the next ReceiverStatus report, which occurs every 30 seconds, to confirm the antenna condition is cleared or not). • RED when radio discovers any health related issues causing reconfiguration or recovery; remains RED until fully recovered (i.e. Precise timesync state is entered). 	Red/Green/Amber
TX	<ul style="list-style-type: none"> • OFF initially • OFF when transmit is completed successfully • GREEN when the transmitter is active 	Red/Green

RX	<ul style="list-style-type: none"> • OFF initially • OFF when no receiver is in RECEIVING state • GREEN when any receiver is in RECEIVING state 	Red/Green
RF ANT	<ul style="list-style-type: none"> • OFF before itcnetd or testmoded is running. • AMBER when no transmit measurements have been made. • GREEN if VSWR is less than the threshold AND forward power is between 75% to 133% of PA power. The threshold is 4.0 (if transitioning from AMBER) or 3.0 (if transitioning from RED or GREEN). • RED when VSWR is greater than 4.0. • RED when forward power is less than 75% or more than 133% of PA power. • AMBER when no VSWR measurements have been made within 30 minutes of a good transmission. 	Red/Green/Amber
RADIO	<ul style="list-style-type: none"> • OFF Initially upon radio boot until software is sufficiently running to maintain proper states. • OFF when a restart is requested. • AMBER when one or more of the following conditions exists: <ul style="list-style-type: none"> • Configuration and calibration have not yet completed. • The duration of the period when duty cycle limiting is being enforced. • Radio is configured to be in test mode. • Transmitter is disabled (as for example with the txdisable command). • GREEN when all of the following conditions are met: <ul style="list-style-type: none"> • Radio is in normal mode (itcnetd is operational). • A valid configuration is loaded and calibration is locked. • Transmitter is not disabled. • RED when any of the following conditions are met, regardless of above conditions: 	Red/Green/Amber
GPIO OUTPUT 1	Illuminated on GPIO Output 1 activity.	Green
GPIO OUTPUT 2	Illuminated on GPIO Output 2 activity.	Green
GPIO OUTPUT 3	Illuminated on GPIO Output 3 activity.	Green
GPIO INPUT 1	Illuminated on GPIO Input 1 activity.	Green
GPIO INPUT 2	Illuminated on GPIO Input 2 activity.	Green
GPIO INPUT 3	Illuminated on GPIO Input 3 activity.	Green

4.13 Displaying POST Results

A power-on self-test (POST) is a series of several dozen tests that the radio quickly runs on itself each time it boots up to determine whether it has any problems or is missing any critical information.

Entering the post command multiple times does not rerun the tests. The post command only reports the results of the most recent POST.

Possible POST results are: PASS, FAIL, or NOT RUN.

To display the POST results:

1. Connect to the radio.
2. On the command line, enter: post
3. View the POST results list. (For information about using the post command see the ITCRNG CLI Reference for Administration and Service.)

4.14 Initializing UTC Time Correction Data

Following initial connection of the GNSS antenna, it may take up to 12.5 minutes (assuming nominal conditions) for the radio to obtain UTC time correction data from the GNSS satellite constellation. Prior to receiving the UTC time correction data, the GNSS receiver outputs a time value that is an integral number of seconds ahead of the correct time. The radio detects this condition and inhibits time-synchronized ITCnet transmissions in order to avoid causing network interference. Upon receipt of the UTC time correction data, the GNSS receiver reports the correct time and the radio stores the UTC time correction data in nonvolatile memory for future use in aiding the GNSS receiver.

Note: A radio that is put in storage after this initialization may hold stale UTC time correction data, and may require reinitialization when placed into service.

Command Security

User authentication identifies you as someone who is allowed to change the radio's configuration settings. User authentication tasks consist of:

- Logging on to a radio
- Logging off from a radio
- Managing your SSH authentication keys

The following sections describe each task in detail.

5.1 Logging On to a Radio

To log on to a radio, you must configure a computer to communicate with the radio. Your computer and terminal emulator application must satisfy the following prerequisites:

- The computer is connected to the radio's maintenance (MAINT) port.
- The Ethernet interface is configured to communicate with Transmission Control Protocol (TCP) port 22 on the radio.
- The firewall rules are configured to allow Secure Shell Protocol (SSH) access.
- The computer has native support for an SSH client or has an SSH client installed.
- The radio's SSH private key for the user account or the admin account is available to the computer's SSH client. The predefined identity files containing the private keys are in Privacy Enhancement Mail (PEM) format and may need to be converted to a different format if your SSH client does not support PEM files.

Additional prerequisites for logging on to a radio are:

- The radio has been powered.
- You have permission to enter commands that can change configuration settings.

You may log on to a radio using SSH through an account named "user" or "admin"; these account names are case sensitive. The admin account has permission to run more commands than the user account. These accounts do not have passwords, but they are authenticated through SSH using private keys provided to your SSH client.

Notes:

- You can make an unlimited number of log-on attempts without being locked out of the radio.
- More than one SSH authentication key can be associated with an account.

To log on to the radio:

1. On your computer, use your SSH client to log on to the account that you wish to use with the account's identity file. The radio uses the default SSH port, TCP port 22.
2. When you have successfully logged on to the radio, you will see the command prompt of a Linux interactive login shell.

5.2 Logging Off from a Radio

After you log on to a radio, you can log off at any time by ending the SSH session. If you have opened more than one session with the radio, ending one session will not affect the other sessions.

To log off from a radio:

1. On your computer, access your SSH client that is handling the session that you wish to end.
2. At the command prompt type:

exit

Alternatively, enter Ctrl+D.

Note: You may have to do this more than once if you have opened sub-shells.

The final command logs off the login shell and closes the SSH session.

5.3 Managing SSH Authentication Keys

Changing your SSH authentication key from the predefined key or a key you have been using for a while to a new authentication key improves radio security. If you are not sure when to change your authentication key, ask an administrator to check with your company's established procedures for guidance.

The userkey command can be used by the admin account to list keys. See the section "Creating New SSH Keys" in the ITCR NG

Getting Started Guide for information about how to create a new key and create a kit containing the new key. Then, if you are using MobaXterm, see the section "Kit Management" in that document for information about how to add and remove kits containing keys for the admin and user accounts. To manage kits using the command line see "Managing User Access" in the ITCR NG Radio Management Guide and the kit command in the ITCR NG Command Line Reference for Administration and Service.

The predefined keys for each user account can only be replaced by installing a kit with new SSH auth keys for the same user account.

Troubleshooting

This section describes common radio problems, their probable causes, and likely solutions. Problems covered in this section are those related to:

- Power
- Antenna
- Transmitter
- Receiver
- Ethernet connectivity
- RF link
- Time and location

In the following sections, solutions to a given problem are listed in the order you should try them.

6.1 Guidelines for Troubleshooting Common Problems

Always check these items first when a radio problem occurs:

1. Check physical radio connections

Make sure that all physical connections to the radio are secure. This includes: power, Ethernet, antenna(s), and GNSS .

2. Check the LEDs

Use the LEDs to determine the state of the system and whether there is a fault condition. See “Front panel LEDs” on the next page for more information.

3. Determine the software version each radio is running

Check the result of the apps command to determine what revision of radio software is running.

4. Check the state of the radio

Use the radiostate command to view the state of the radio.

5. Check the POST results

Check the output of the post command on the radio to ensure that no tests failed during the most recent post. See “View the results of the most recent POST” on page 37 for more information.

6. Check that the radio configuration is up-to-date Use the config command to query the configuration components of interest (see the ITCRNG CLI Reference). For more information on radio configuration, see the ITCR Radio Configuration Guide.

6.1.1 Commonly used diagnostic commands

A number of CLI commands are available to provide information about the state of the radio, including current RF connections and software version information. You can use them to collect information that may be useful in determining why a radio connection is not performing as expected. The radiostate command is described below. For the full list of CLI commands, see “Commands Grouped by Function” in the ITCRNG Command Line Reference, paying particular attention to the Status and Diagnostic groups.

6.1.2 Front panel LEDs

On power-on, the front panel LEDs indicate the progress through the boot sequence.

The front panel LEDs show the general operational status of the radio after the radio conducts a POST, which it does each time the radio boots up. Table 4-4 includes a description of the function of each LED as well as the color of each LED when the radio is functioning properly.

6.1.3 Check the state of the radio with the radiostate command

The radiostate command queries the radio’s operational states, composed of the asset state and the POST state. It displays the LED status and the detailed reason why the LED is in its current state.

As shown in Table 6-1, the radiostate command returns an asset state value indicating the radio’s current state, including the Radio LED color, and a table listing the status of each of the radio’s subcomponents.

Table 6-1: radiostate command response

Asset state: Fully Operational (Radio LED: Green)

Subcomponent	Status	Reason
	_____	_____
Configuration	Good	Valid
HRX connection	Good	Connected to host
Calibration	Good	Calibration locked
Mode	Good	itcnet operational
Tx state	Good	Enabled
VSWR	Good	In range
Timesync	Good	Precise
Temperature	Good	In range
Voltage	Good	In range
Software	Good	All services active
Hardware	Good	No failures
POST	Pass	All post tests pass

The asset state portion of the response is a summary based on a set of criteria. Each criterion is included in the table and reported as “Good” or “Bad”, depending on the criterion’s value compared to a fully operational radio. Only when all criteria are designated as “Good” is the asset state shown as “Fully Operational”.

The POST item in the response is a summary of the results of the power-on self-test, which is actually many discrete tests. See the post command for additional information regarding the results of individual tests.

The value returned for Radio LED is one of the following: Off, Red, Green, or Amber.

To view the radiostate command output:

1. Connect the computer to the radio MAINT port.
2. On the command line, enter the radiostate command with no arguments:

6.1.4 View the results of the most recent POST

A POST (power-on self-test) is a series of several dozen tests that the radio quickly runs on itself each time it boots up to determine whether it has any problems or is missing any critical information. Entering the post command multiple times does not rerun the tests. The post command only reports the condition of the radio at the time it was last powered up.

Possible POST results are PASS, FAIL, and NOT RUN.

To display the POST results:

1. Connect to the radio.
2. On the command line, enter the post command with no arguments: post
3. View the POST results list. For details about each test, see the post command in the ITCR NG Command Line Reference.)

6.1.5 Boot a radio

A radio boots up when it is powered on, when the sysreboot command is sent to it, or the software stops responding.

To boot a radio:

1. Power on the radio by connecting it to a power supply that meets the “DC input voltage range” specified (see “Specifications for ITC Model Wayside Radio 65010” on page 2) or send the sysreboot command to the radio.
2. Connect the computer to the radio MAINT port.
3. On the command line, enter the sysreboot command with no arguments. sysreboot If you solved the radio problem, the front panel LED that indicated a problem should now indicate normal operation. If it still indicates a problem, continue troubleshooting.

6.2 Radio Power Problems

Problem indicators:

- There is no power to the radio.
- The POWER LED is off.
- The radio does not transmit.
- The Fault LED is on.
- The POST results show that the internal voltages are out of range.

To troubleshoot radio power issues:

1. Make sure the power-cable connectors are securely connected to the power supply and to the radio.
2. Make sure the power-cable polarity is correct.
3. Make sure the power supply is turned on.
4. Measure the voltage at the power-cable connector to the radio. Adjust the power supply to within the rated operating voltage.
5. Verify that current limiting on the supply is not less than the maximum current draw.
6. Replace the power cable.
7. Replace the radio. See “Replacing a Radio” on page 44.

6.3 Antenna Problems

Problem indicators:

- Transmissions from or to the radio are poor or absent.
- The radio’s RF ANT LED is on.

To troubleshoot antenna issues:

1. Make sure the antenna-cable connector is securely connected to the antenna and to the radio.
2. Check the antenna for any defects or breaks.
3. Check the cable connector and radio connector for corrosion.
4. Check the lightning suppression device for shorts, faults, etc.
5. Use the commands txtest, canmsg, and vswr to verify that there are no electrically detectable defects in the above components (see the ITCR NG Command Line Reference).
6. Replace the cable or connector if necessary.
7. Replace the antenna if necessary.
8. Replace the lightning suppression device if necessary.

9. Check the radio output power with a nonreactive load connected.

10. If the RF ANT LED is lit, use the vswr command to determine why. On the command line enter:

vswr

Following are examples of the response to the vswr command that show good and bad status.

A good status looks like this:

Status:	good
Age:	1 min
VSWR:	1.2:1
Forward power:	43.90dBm
Reflected power:	23.07dBm
PA temperature:	32.0C
PA current:	5.97A
PA driver current:	0.00A
Battery voltage:	13.70V

A bad status looks like this:

Status:	bad
Age	1 min
VSWR:	4.5:1
Forward power:	39.96dBm
Reflected power:	36.03dBm
PA temperature:	33.0C
PA current:	5.93A
PA driver current:	0.00A
Battery voltage:	13.70Vc

11. Replace the radio. See “Replacing a Radio” on page 44.

6.3.1 GNSS Antenna

Check your GNSS antenna. It is recommended that your GNSS antenna supports L1, L2, and L5.

6.4 Transmission Problems

Problem indicators:

- Transmissions from the radio are weak or intermittent.
- Another radio in the network stops receiving expected communications from the radio.
- The TX LED never comes on.
- The RADIO LED is on.

To troubleshoot transmission issues:

- Make sure the radio is turned on and the green PWR LED is on.
- Use the `vswr` command to confirm the power output of the last transmission and VSWR.
- Check the cable connector and the radio connector for corrosion. If there is evidence of corrosion, replace the connector.
- If the STBY LED is on, use the `txstate` command to verify that the transmitter is enabled.
- Use the `radiostate` command to check subcomponents of the radio to ensure it is in proper working condition.
- Make sure the antenna-cable connectors are securely connected to the antenna, to the lightning protector, and to the radio.
- Adjust the RF power output higher and lower to verify that the transmitter output is controllable.
- Monitor the current supplied by the power supply to confirm that the typical transmit current is drawn and the radio is not current-limited.
- Check the antenna for any defects or breaks.
- Check the power supply voltage. If the power-supply voltage is too low, the radio might stop transmitting.
- Replace the cable or connector.
- Replace the radio (see “Replacing a Radio” on page 44).

6.5 Receiver Problems

Problem indicators:

- Another radio in the network stops receiving communications from this radio.
- The RX LED never comes on. If there is a base attempting to communicate with the Wayside radio the RX LED should be illuminated occasionally.

To troubleshoot receiver issues:

1. Make sure the radio is turned on and the green POWER LED is on.
2. Verify that the transmit frequency of this radio is within limits. See “Introduction” on page 1.
3. Make sure the antenna-cable connectors are securely connected to the antenna and to the radio.
4. Check the cable connector and radio connector for corrosion. If there is evidence of corrosion, replace the connector.
5. Make sure the base has a local channel configured for transmit. See the section on channel assignments for bases in the ITCR NG Radio Configuration Guide for more information.
6. Check the antenna for any defects or breaks.
7. Replace the radio. See “Replacing a Radio” on page 44.

6.6 Ethernet Connectivity Problems

Problem indicators:

- The radio is disconnected from the network.
- The MSG LED is off.
- The link and activity indicators are off.

To troubleshoot network connectivity issues:

1. Check network activity. If the network is down, then the problem probably is not in the radio.
2. Make sure the Ethernet cable is securely connected to the radio's LAN port.
 - a. Physically inspect the cable and connectors for damage and missing pins.
 - b. Inspect the Ethernet socket on the laptop and the radio for damage or "crossed fingers".
3. Verify that external network equipment is functioning properly.
4. Connect your computer to one of the radio's LAN ports, send commands to the radio, and then see if the radio responds.

Note: To connect the computer to the LAN port, you must configure the computer's Ethernet interfaces to communicate with the radio, and you must know the LAN port's IP address. If you do not know the IP address, contact your system administrator.

5. Replace the cable.
6. Replace the radio. See "Replacing a Radio" on page 44.

6.7 RF Link Problems

When the RF Link LED is on, it means that the Wayside radio has selected and connected to a base. When the LED is off, it means the Wayside radio is not connected to a base.

Problem indicators:

- The RF Link LED never comes on.

To troubleshoot RF link issues:

- Make sure the radio is turned on and the green PWR LED is on.
- Make sure the antenna-cable connectors are securely connected to the antenna and to the radio.
- Check the antenna for any defects or breaks.
- Use the radiostate comand to make sure there is a valid configuration loaded.
- Verify that the base is transmitting. Use a signal source and perform a direct receiver test if necessary to isolate the problem.
- Replace the radio. See "Replacing a Radio" on page 44.

6.8 Time and Location Problems

The ITCR NG Wayside radio's CLI commands, configuration items, and logging provide enough information to support the radio's operation within the ITCNet protocol. In particular, the CLI command itctime can be used to display time of day, timesync state, and day length, while the pntinfo command displays location along with hardware, firmware and software version numbers and other data (see the ITCR NG Command Line Reference for Administration and Service for more information).

Enabling log TS-1312 provides human-readable printout of NMEA sentences to the monitor (see the ITCR NG Logging User Guide and Reference for more information). These data are handled by Metercomm's time synchronization service as a client application of gpsd, an open source service that interfaces with the GNSS module.

Further useful information is available through cgps, a client-side utility of gpsd that also displays NMEA sentences in real time from the GNSS module. Most of the information displayed by cgps is available in the radio's timesync-related log messages, but some users may wish to use cgps rather than the radio's time synchronization service for debugging GNSS issues. Along with NMEA sentence monitoring, the cgps output also contains a table displaying data about all the satellites the GNSS module detects, as shown in Figure 6-1, and would immediately give evidence of problems such as a broken antenna.

Figure 6-1: Partial cgps output

Figure 6-1: Partial cgps output

				Seen 15/Used 10				
Time:	2021-07-07T21:07:49.000Z			PRN	Elev	Azim	SNR	Use
Latitude:	47.47301250 N			GP	5	47.0	59.0	29.0 Y
Longitude:	122.23358633 W			GP	13	20.0	93.0	39.0 Y
Alt (HAE, MSL):	-24.606, 37.402 ft			GP	15	25.0	128.0	26.0 Y
Speed:	0.04 mph			GP	16	23.0	316.0	22.0 Y
Track (true, var):	n/a deg			GP	18	62.0	278.0	34.0 Y
Climb:	-19.69 ft/min			GP	20	23.0	51.0	44.0 Y
Status:	3D DGPS FIX (1 secs)			GP	23	31.0	205.0	47.0 Y
Long Err (XDOP, EPX):	0.54, +/- 6.6 ft			GP	26	36.0	284.0	35.0 Y
Lat Err (YDOP, EPY):	0.63, +/- 7.8 ft			GP	29	67.0	128.0	43.0 Y
Alt Err (VDOP, EPV):	1.67, +/- 31.5 ft			SB	46	35.0	189.0	36.0 Y
2D Err (HDOP, CEP):	0.83, +/- 12.9 ft			GP	10	2.0	213.0	0.0 N
3D Err (PDOP, SEP):	1.86, +/- 29.0 ft			GP	25	10.0	186.0	13.0 N
Time Err (TDOP):	1.02			SB	48	35.0	184.0	32.0 N
Geo Err (GDOP):	2.12			SB	51	33.0	160.0	0.0 N
ECEF X, VX:	n/a n/a /s			QZ	194	18.0	301.0	14.0 N
ECEF Y, VY:	n/a n/a /s							
ECEF Z, VZ:	n/a n/a /s							
Speed Err (EPS):	+/- 10.6 mph							
Track Err (EPD):	n/a							
Time offset:	0.082 sec							
Grid Square:	CN87v1							

Review the cgps output:

1. Verify that Time is correct for UTC Time
2. Verify latitude, longitude, and altitude are correct for this location.
 - a. If they match your measurements, there are no issues
 - b. If they do not match your measurements, there may be a problem with the configuration loaded into the radio, if extant.
3. Check the Status field. Acceptable statuses are 2D Fix, 3D Fix, 3D DGPS Fix, and 3D RTK Fix.
4. Verify that you are seeing multiple satellites with SNRs that are greater than 30.
 - a. Some satellites may have SNRs less than 30, but this would mean that those satellites are screened by vegetation, clutter, or terrain.
 - b. To simplify this scenario, select a satellite with an elevation above 60 degrees, and the SNR should be in the mid 30s or higher.
 - c. Consistently poor SNRs indicate a GNSS antenna location issue, or a hardware fault in the GNSS transmission system (GNSS antenna, lightning suppressor, coaxial cable segments).
 - d. Satellites with a zero SNR (or no SNR at all) indicate that some satellites are completely blocked by vegetation, clutter, or terrain.
5. Verify that most of the satellites are marked as 'Y'. a. If most or all satellites are marked 'N', this indicates a probable issue with the configuration loaded into the radio.

For more information see the following:

1. gpsd – <https://gpsd.gitlab.io/gpsd/>
2. cgps – <https://gpsd.gitlab.io/gpsd/cgps.html>

6.9 Replacing a Radio

When replacing a radio in the field, follow the safety information in “Safety” on page 6. Inspect the installation of the radio to determine if an installation problem caused the radio to fail.

To uninstall the existing radio:

1. Power down the radio.
2. Disconnect the power cable.
3. Disconnect the antennas.
4. Disconnect the Ethernet cable(s).
5. Disconnect the GPIO connectors.
6. Disconnect the GNSS antenna.
7. Remove the ground connection from the radio.

After uninstalling the radio, follow the instructions in “Installation” on page 12 to install the replacement radio.

For radios with manually obtained GNSS coordinates, reobtain the GNSS coordinates. If you do not know how the GNSS coordinates were determined, contact your network administrator.

Real-Time Log (a.k.a “Trace”) Monitoring

The ITCRNG radio has combined tracing and logging into one function. See the ITCR NG Logging User Guide and Reference for log definitions and the ITCR NG Radio Configuration Guide for configuration instructions.

To provide a live view of log messages as they occur you can use `journalctl`. The `journalctl` utility is a standard Linux tool used to interact with logs captured by `systemd`. Using `journalctl` you can read, filter, and monitor logs in real time. The following briefly describes how to use `journalctl` to monitor logs in real time, but please see the `journalctl` man pages for complete details on all the uses of the utility.

In monitoring logs with `journalctl`, the most important switch is `–follow` (or `-f`), which continually prints log messages to the screen as they are produced. The following command displays all new log messages as they arrive.

`journalctl –follow`

Managing Software Application Images

From time to time, new functionality becomes available from the radio manufacturer in the form of a new software application image (also simply called an “image”). This new functionality is provided to the radio by updating the radio software.

All image management operations may be accomplished using operator commands. However, the radios also support performing some image management operations using ITC Systems Management (ITCSM) features through network connection from an application gateway. See the ITCR NG Radio Configuration Guide for information about how to configure a radio for ITCSM connectivity.

Using ITCSM features involves creating a radio software kit, as well as sending the appropriate messages to the radio in order to perform the management operations. Consult with your Back Office support team or engineers for more information about ITCSM support of your radios. This section offers instructions for:

- Determining software image status.
- Updating radio software application images.
- Performing a manual software rollback.
- Determining whether automatic rollback has occurred.
- Maintaining multiple software application images in the radio.

8.1 Determining Software Images Status

The radio is partitioned into three areas: A, B, and F. Partitions A and B are the alternate active and backup (or rollback) partitions, and F is the Failsafe partition used to recover the radio.

The apps command lists the current active and rollback software images loaded into the radio, as shown in the example output below.

Slot	Status	Version	SHA	Rem	Installed
----	-----	-----	---	---	-----
linuxA	Booted	0.1.72.06-f2-36-g475fd7c	820ab1	3	2023-04-07T15:40:42Z
mccfsA	Booted	0.1.117.01-f2-0-g1e045e19b	e9be89	3	2023-04-07T15:40:13Z
linuxB				3	
mccfsB				3	
linuxF		0.1.72.06-f2-36-g475fd7c	11c8d5	3	2022-01-06T03:33:30Z
boot		0.1.72.06-f2-36-g475fd7c	8a6c68		2023-04-07T15:40:03Z

8.2 Updating Software Application Images

The ITCRNG radio does not directly ingest images, but rather kits containing images that are signed for security purposes. Kits are created off the radio.

Updating the software means installing the software application kit, selecting it to be active, and then running it. This procedure can be done using the command line as shown below, or using MobaXterm as described in the “Kit Management” section of the ITCR NG Getting Started Guide. To roll back an image, see “Rolling Back an Image” on the next page. For information about uninstalling and removing images, see the ITCR NG Radio Management Guide.

To update the radio’s software application image using CLI commands:

Use the following procedure to transfer and add a software kit to the radio and install the updated software image contained in the kit.

Note: You cannot schedule a software update with the command line. This can be done using ITCSM (see “Updating radio software through ITCSM” in the ITCR NG

Radio Management Guide.

1. Transfer the software kit to the radio using the kit command with the `--add` operation. `kit --add=/dev/sda/usb-drive/myKit.kit` This command also adds the kit to the kit directory.
2. You can use the kit command with `--list` operation to verify that the kit is now in the kit directory. `kit --list` This command displays all the kit files in the kit directory, as well as whether or not each is installed, active, available to be installed, and in the rollback position.

Kit name	Kit ID	Available	Installed	Active	Rollback
-----	-----	-----	-----	-----	-----
abc.kit	2	Yes	Yes	No	No
xyz.kit	4	Yes	Yes	Yes	Yes
34.kit	7	Yes	Yes	Yes	Yes
c_luffman3.kit	3	Yes	Yes	No	No
mykit.kit	Not installed	Yes	No	No	No

3. Install the kit using the kit command with the `--install` operation. The following command dispatches elements from the specified kit file to the installers.
`kit --install=myKit.kit`
4. Verify the contents of the installed kit. The following command queries the contents of an available kit file. `kit --query=myKit.kit` The above command receives a response indicating that the kit contains a manifest file and two RAUC bundles.

KitFileID :myKit

Description :Manifest file used for manual testing

Size of kit file :59888040 bytes

Elements: boot.raucb rootfs.raucb

5. Restart the radio.
6. Confirm the software update using the apps command.

8.3 Rolling Back an Image

You can manually rollback software when there are multiple images installed in the radio.

To manually roll back an image:

1. Run the apps command and view the list of images in the output table, noting whether the Status column for each image reports “Booted” or “Bad” or is blank.
2. Select the image listed as blank to roll back to using the apps CLI command with the -select option. apps – select=b
3. Reboot the radio using the sysreboot CLI command.

8.3.1 How automatic rollback occurs

If for some reason the active image cannot boot, the backup image becomes active and is booted. If there is no backup image or it also fails, the failsafe image is run. The radio will not be fully operational running in failsafe partition.

Routine Maintenance

The following are maintenance items that you should perform routinely:

- Remove dust and obstructions from heatsink fins.
- Ensure that the radio is free of excessive condensation and moisture.
- Ensure that the radio is not subjected to excessive heat from adjacent equipment.
- Make sure that the radio is securely mounted and supported.
- Make sure that the cables do not bend with less than the minimum bend radius.
- Restrain cables to prevent stress on connectors.
- Keep the LED panel dust-free and viewable.
- Remove cables during a powered-off maintenance cycle and make sure the pins do not have corrosion nor signs of thermal stress:
 - o Discoloration and flaky or granular material
 - o Darkened color, signs of oxidation, pitting, or plasma flashover
- Verify that cable insulation is not sliced, worn, or cracked.
- Verify that all unused connectors are covered with the appropriate dust cover.

Appendix A: Configure Computer Ethernet Interfaces

It is recommended that you use a computer with two Ethernet interfaces, Ethernet 1 and Ethernet 2, so that your computer can communicate with a radio's maintenance (MAINT) and LAN Ethernet ports at the same time. You must have a terminal emulator such as MobaXTERM or PuTTY installed on the computer and have administrative rights to configure the Ethernet interfaces.

Notes:

- The following configuration example is for directly connecting to the radio and bypassing any network infrastructure. If you cannot get direct access to the radio, contact your network administrator for instructions.
- If you are using the factory defaults, use the following example. If you are not using the factory defaults, contact your network administrator for the appropriate IP settings.
- The following procedures are intended for use with Windows 10. Consult with your network administrator if you are using a different version of Windows.

To configure the computer Ethernet interface for connecting to the radio's MAINT port:

1. On the computer, click Start, then click Control Panel.
2. Click Network and Internet, then click Network and Sharing Center.
3. Click Change adapter settings.
4. Click Local Area Connection, then click Properties.
5. On the Networking tab, select the Internet Protocol (TCP/IPv4) check box, and then click Properties.
6. Click Obtain an IP address automatically.
7. Click OK.

To configure the computer Ethernet interface for connecting to the radio's LAN1 port:

1. On the computer, click Start, then click Control Panel.
2. Click Network and Internet, then click Network and Sharing Center.
3. Click Change adapter settings.
4. Click Local Area Connection, then click Properties.
5. On the Networking tab, select the Internet Protocol (TCP/IPv4) check box, and then click Properties.
6. Click Use the following IP address.
7. In the IP address field, type 10.255.255.200.
8. In the Subnet mask field, type 255.255.255.0.
9. Click OK.

Appendix B: Parts List

The following part numbers are for reference only and are subject to change without notice.

Table B-1: Wayside radio parts and part numbers

Part Number	Part Name	Qty	DIM	BOM Notes
000-046-0024 revA	Adhesive, Loctite Permanent Thread	0	AS_FtEQ	For ground stud only
000-046-0026 rev 1	Adhesive, Loctite 242 Threadlocker	0	AS REQ –	For all other screws
005-002-0004 revA	SCREW,MACH,4-40X1/4, PN HD,PHILSST	38	EA	
005-002-0008 revA	SCREW,MACH,4-40X1/2, PN HD,PHILSST	5	EA	
005-004-0106 revA	SCREW,MACH,8-32X3/8, FL HD,100 DEG,PHILSST	9	EA	
005-007-0903 revA	NUT,HEK1/4-20,SST	1	EA	
005-008-0902 revA	WASHER, EXT LOCK 1/4in, SST	1	EA	
005-030-0050 rev 1	Grommet 0.25" ID, 0.501" OD, 0.094" Groove, Silicon, Black	2	EA	
005-040-0066 revA	STUD,Threaded Satinless Steel	1	EA	
005-051-0001 rev 1	Coding Key for Terminal Block Headers	2	EA	
005-051-0002 rev 1	Coding Key for Pluggable Terminal Block	2	EA	
005-051-0802 rev 1	Pluggable Terminal Block 5.08 mm, 8 Pos. 24AWG to 12AWG 2.5 mm2, Push In, 12 A	2	EA	External GPIO Connectors
005-090-0013 revA	COMPOUND,THERM,WHITE,SIL GREASE	„ 0	AS REQ	
005-103-0001 rev 1	Spacer, #4, 3/16" Dia, 3/16" Lg, Aluminum	1	EA	
005-130-0060 rev A	TIE, CABLE 4.52in LENGTH X 0.1 WIDTH tin MAXIMUM DIA BUNDLE	n 1	EA	
005-130-0068 rev 1	Holder, Cable Tie, #4, Natural	1	EA	
010-084-0043 revA	CONN,RF,N,Panel Receptacle	1	EA	


Pat Number	Pad Name	OW	UotM	BOM Notes
	Jack			

010-220-0002 rev 1	Dust Cover, USB A Black	1	EA	
030-071-0061 rev 2	RF Amplifier, 30VV, MOSFET , RA30H2127M1	1		
040-010-0006 rev A	UTE PIPE, CLEAR PNL MTG ,PFtESS-FIT	14		
14001672-01 rev 3	Cable, Internal Power, 4 Pin, MTA-100,1DC, 22AWG	1	I	
14001674-01 rev 2	Cable, MO(MCC, RG-316, 1 26", PRI	1		
14001674-02 rev 2	Cable, MCX_MCX, RG-316, 9A", LO	1	EA	
14001691-01 rev 1	Cable, GNSS Antenna, INC_ MO RG-316	1	EA	
14001689-01 rev 1	Cable, RF VO, 30 Pin, Ribbo n	1	EA	
63010507-01 rev A	GASKET, 0-RING	1	EA	
63010517-01 rev B	STRAP, WAGO CONNECTO R	1	EA	
63010518-01 rev B	SHIELD, WAGO DUST	1	EA	
63010522-01 rev B	GASKET, R145, ONE PIECE	3	EA	
65010001-02_ EX PLODED VIEW re % 2	Assembly Drawing, Wayside Radio, NGR – Exploded View	0	EA	
65010304-01 rev 1	PCBA, RF BOARD, ANAREN DIR CPLR, WAYSIDE, NGR	1	EA	
65010303-01 rev 15	PCBA, Main Board, Wayside, NGR	1	EA	
65010501-02 rev 1	Housing, Machined, Wayside , NGR	1	EA	
65010502-01 rev 1	Gacket, USB, Wayside, NGR	1	EA	
65010503-01 rev 1	Gacket, GPIO, Wayside, NG R	1	EA	
65010504-01 rev 5	Label, GPIO, Wayside, NGR	1	EA	
65010505-01 rev 2	Label, Antenna, Wayside, NG R	1	EA	

65010506-01 rev 5	Label, LEDs and Legends Wayside, NGR	1	EA	
65010507-01 rev 3	Label, Serial Number, Wayside,	1	EA	

Part Number	Part Name	Qty	UofM	BOM Notes
65010510-01 rev 1	NGR	1	EA	
65010511-01 rev 1	Gap Pad, 1.00" SQ, 0.08" THK, Master Board, NGR	1	EA	
65010512-01 rev 1	Gap Pad, 0.64" x 2.60", 0.08" THK, Master Board, NGR	1	EA	
65010514-01 rev 2	Gap Pad, 0.46" SQ, 0.08" THK, Master Board, NGR	1	EA	
65010515-01 rev 1	Gap Pad, 0.66" x 0.82", 0.08" THK Master Board, NGR	1	EA	
65010516-01 rev 1	Gap Pad, 0.34" x 1.15", Wayside, NGR	3	EA	
65010517-01 rev 2	Gap Pad, 0.20 SQ, 0.08 THK, Master Board, NGR	1	EA	
010-031-0306 rev A	Cover, Wayside, NGR	1	EA	External power connector
65010306-02 rev 1	Connector, Female, 3-Pole, 7.5mm	1	EA	
65010518-01 rev 1	Gasket, Reset Switch, Wayside, NGR	1	EA	

Appendix C: Block Diagram

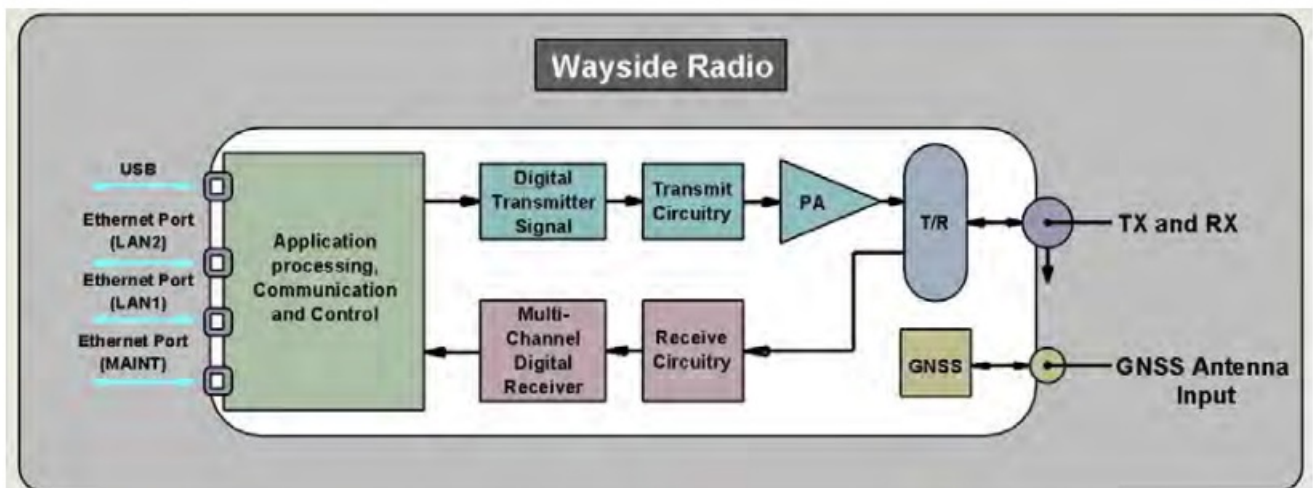

Appendix D: Sample Post Results

Following is an example of the output from the post command for a Wayside radio.

Result	Test	Notes
-----	-----	-----
PASS	MAC EEPROMS	CRC of all MACs matched
PASS	DISK LIFETIME	0%-10% device life time used
PASS	DISK FSCK	FSCK passed for all disks
PASS	GNSS_STATUS	No GNSS receiver errors, RxState
= ACTIVEANTENNA		
PASS	GNSS_RUNNING	GNSS running 20 seconds
PASS	CALIBRATION LOCKED	Calibration is locked
PASS	MAGIC TOKEN	Magic token is initialized
PASS	CALIBRATION CRC	Valid CRC
PASS	MAINBOARD SERIAL NUMBER	Serial Number: F2_GAN
PASS	I2C IO EXPANDER	IO Expander accessible on I2C
bus		
PASS	I2C MUX	Mux device accessible on I2C bus
PASS	TPM SELFTEST	001fe18b00000000096b0
PASS	Main_Board_Input_Voltage	11.081V is in range
PASS	SYSMON0_PS_Temp	28.8C is in range
PASS	SYSMON0_PL_Temp	28.6C is in range
PASS	SYSMON0_VCC_PSPLL0	1.194V is in range
PASS	SYSMON0_VCC_PSBATT	1.488V is in range
PASS	SYSMON0_VCC_INT_AMS	0.832V is in range
PASS	SYSMON0_VCC_BRAM_AMS	0.835V is in range
PASS	SYSMON0_VCC_AUX_AMS	1.794V is in range
PASS	SYSMON0_VCC_PSDDR_PLL	1.786V is in range
PASS	SYSMON0_VCC_PSINTFP_DDR	0.829V is in range
PASS	SYSMON0_VCC_PSINTLP	0.825V is in range
PASS	SYSMON0_VCC_PSINTFP	0.826V is in range
PASS	SYSMON0_VCC_PSAUX	1.794V is in range
PASS	SYSMON0_VCC_PSDDR	1.197V is in range
PASS	SYSMON0_VCC_PSIO3	1.783V is in range
PASS	SYSMON0_VCC_PSIO0	1.781V is in range
PASS	SYSMON0_VCC_PSIO1	1.784V is in range
PASS	SYSMON0_VCC_PSIO2	1.783V is in range
PASS	SYSMON0_VCC_PSMGTR_AVCC	0.846V is in range
PASS	SYSMON0_VCC_PSMGTR_AVTT	1.807V is in range
PASS	SYSMON0_VCC_AMS_PS	1.786V is in range
PASS	SYSMON0_VCC_INT_PL	0.833V is in range
PASS	SYSMON0_VCC_AUX_PL	1.795V is in range
PASS	SYSMON0_VCC_BRAM_PL	0.835V is in range
PASS	SYSMON0_VCC_PLINTLP	0.832V is in range
PASS	SYSMON0_VCC_PLINTFP	0.829V is in range
PASS	SYSMON0_VCC_PLAUX	1.798V is in range

Tier 2: Proprietary and Confidential – Do not distribute

```

PASS      SYSMON0_VCC_AMS_PL          1.790V is in range
PASS      SYSMON1_Monitor_Temp        26.4C is in range
PASS      SYSMON1_5V_SYS              5.139V is in range
PASS      SYSMON1_MB_TEMP             21.0C is in range
PASS      SYSMON2_Monitor_Temp        27.3C is in range
PASS      SYSMON2_5V_UTIL             5.137V is in range
PASS      SYSMON2_12V_MON             11.068V is in range
PASS      SYSMON2_1V8_UTIL            1.818V is in range
PASS      SYSMON2_3V3_UTIL            3.300V is in range
PASS      SYSMON2_USB_VBUS            5.378V is in range
PASS      SYSMON2_VTT0V6_DDR4         0.595V is in range
PASS      SYSMON2_3V3_RF              3.319V is in range
PASS      SYSMON2_5V_RF               5.006V is in range
PASS      PMU1_VCC_INT0V85            0.867V is in range
PASS      PMU1_VCC_1V8               1.789V is in range
PASS      PMU1_VCC_1V2               1.199V is in range
PASS      PMU1_VCC_MGT1V8            1.796V is in range
PASS      PMU1_VCC_INT0V85_TEMP       29.0C is in range
PASS      PMU1_VCC_1V8_TEMP          29.0C is in range
PASS      PMU1_VCC_1V2_TEMP          29.0C is in range
PASS      PMU1_VCC_MGT1V8_TEMP       29.0C is in range
PASS      PMU2_VTT0V6_DDR4           0.597V is in range
PASS      PMU2_MGT_1V2               1.199V is in range
PASS      PMU2_VCC_3V3_PS_HDIO        3.304V is in range
PASS      PMU2_VCC_2V5_DDR            2.503V is in range
PASS      PMU2_MGTRA_VCC_0V85        0.835V is in range
PASS      PMU2_VTT0V6_DDR4_TEMP       25.0C is in range
PASS      PMU2_MGT_1V2_TEMP          25.0C is in range
PASS      PMU2_VCC_3V3_PS_HDIO_TEMP  26.0C is in range
PASS      PMU2_VCC_2V5_DDR_TEMP       25.0C is in range
PASS      PMU2_MGTRA_VCC_0V85_TEMP    25.0C is in range
PASS      FIRMWARE_STATUS_RX         All tests pass
PASS      FIRMWARE_STATUS_TX         All tests pass
PASS      RFBOARD_EEPROM_READ        RF board EEPROM read success

```

Appendix E: Acronyms

The following table defines initialisms and acronyms used in this document.

Table E-1: Initialisms and acronyms

Usage	Meaning or description
A	amp
AWG	American wire gauge, a unit of wire diameter
cm	centimeter
CM	Connection Manager
dB	decibel
dB _i	decibel, isotropic
dB _m	decibel referenced to one milliwatt
DC	direct current
DOP	dilution of precision



DQPSK	differential quadrature phase-shift keying
DSP	digital signal processor
EIRP	effective isotropic radiated power
ERP	effective radiated power
EVM	error vector magnitude
FCC	Federal Communications Commission
GEO	geostationary orbit
GNSS	global navigation satellite system
IC	Industry Canada
ITC	Interoperable Train Control
ITCM	ITC Messaging
ITCR	ITC Radio
LAN	local area network
LNA	low noise amplifier
m	meter
MCC	Meteorcomm LLC
MEO	medium Earth orbit
MHz	megahertz, a unit of frequency measurement
MPE	maximum permitted exposure
mW	milliwatt
PEP	peak envelope power
POST	power-on self-test
PPM	parts per million
PTC	Positive Train Control
RF	radio frequency
RU	rack unit, defined as a height of 44.5 mm
SAR	specific absorption rate
SMA	subminiature, version A, a type of connector
SWR	standing wave ratio
TCP/IP	transmission control protocol/Internet protocol
TNC	Threaded Neill-Concelman, a type of connector
VDC	voltage, direct current
VSWR	voltage standing wave ratio

W	watt
---	------



© 2023 Meteorcomm LLC. All Rights Reserved.

Documents / Resources

 <p>ETC® 10 Wayside Radio Installation and Field Service Guide</p> <p>12/15/2023</p> <p>10/15/2023</p> <p>10/15/2023</p>	<p>METEORCOMM BIB65010 Wayside Packet Data Transceiver [pdf] User Guide</p> <p>BIB65010 Wayside Packet Data Transceiver, BIB65010, Wayside Packet Data Transceiver, Packet Data Transceiver, Data Transceiver, Transceiver</p>
 <p>RF Energy Exposure Guide for Meteorcomm PTC Radios Installed in Vehicles or at Fixed Sites</p> <p>12/15/2023</p> <p>10/15/2023</p> <p>10/15/2023</p>	<p>METEORCOMM BIB65010 Wayside Packet Data Transceiver [pdf] User Guide</p> <p>BIB65010 Wayside Packet Data Transceiver, BIB65010, Wayside Packet Data Transceiver, Packet Data Transceiver, Data Transceiver, Transceiver</p>

References

- 
[Meteorcomm | Rail Wireless Communications & Train Control Solutions](#)
- 
[Meteorcomm | Rail Wireless Communications & Train Control Solutions](#)
- 
[GPSd — Put your GPS on the net!](#)
- 
[cgps\(1\)](#)
- [User Manual](#)