



## Meyer Cross FL1570 Floor Lamp Instructions

[Home](#) » [MEYER CROSS](#) » Meyer Cross FL1570 Floor Lamp Instructions 

# Meyer

FLOOR LAMP

Save these instructions



## Contents

### 1 IMPORTANT SAFETY

#### INSTRUCTIONS:

### 2 CARE INSTRUCTIONS:

### 3 PRE-ASSEMBLY:

### 4 Documents / Resources

## IMPORTANT SAFETY INSTRUCTIONS:

- These instructions are provided for your safety.

Please read carefully and completely before beginning the assembly and installation of this lighting fixture.

- This lighting fixture is intended for indoor use only.
- Always place lighting fixture on a solid, level surface.
- For use with E26 (medium) base light bulbs only.



- To avoid the risk of fire, do not exceed the maximum wattage of 100W incandescent bulb , or 9W LED



bulb , or 23W fluorescent (CFL) bulb



,

or 9W self-ballasted LED bulb



. (Bulbs not included)

- This lighting fixture has a polarized plug (one prong is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not alter the plug. Do not attempt to bypass this safety feature.

## WARNINGS:

- To reduce the risk of fire, electrical shock, or personal injury: always turn off and unplug this lighting fixture and allow it to cool before attempting to replace the light bulb.
- Do not touch light bulb while fixture is turned on.
- Keep flammable materials away from this lighting fixture.
- Never look directly at a lit bulb.

## CARE INSTRUCTIONS:

- Unplug lamp before cleaning.
- Wipe clean with a soft, dry cloth or static duster.
- Always avoid the use of harsh chemicals or abrasive cleaners as they may cause damage to the fixture's finish


## PRE-ASSEMBLY:

Carefully remove all parts and hardware from carton, along with any protective plastic packaging. The lampshade may be covered with a plastic film that should be removed before use.

Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.

\* Part A (Finial) may come pre-installed to Part C (Harp).

Unscrew Part A before installing Part B (Lampshade), then reinstall Part A to secure.

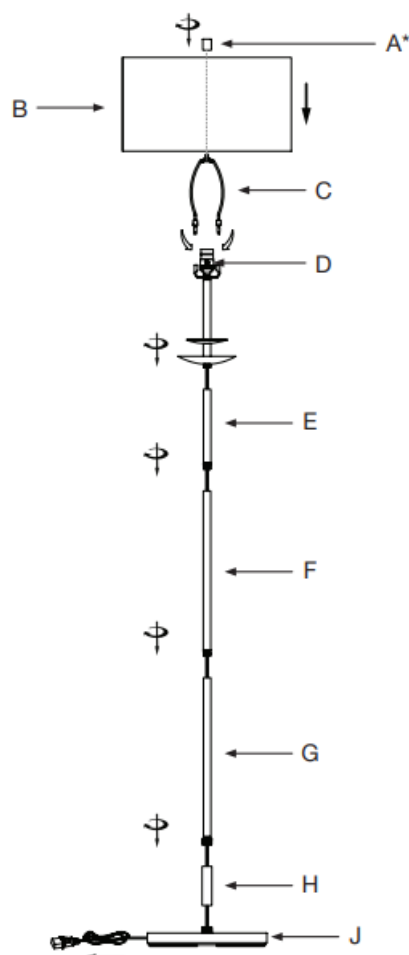

Carefully pull the power cord out from the Base (J) to remove slack.

#### **PARTS INCLUDED:**

- (A\*) Finial
- (B) Lampshade
- (C) Harp
- (D) On/Off Switch
- (E) Top Post
- (F) Middle Post
- (G) Bottom Post
- (H) Base Collar
- (J) Base

For use with light bulbs with a E26 (medium) base.  
DO NOT EXCEED THE SPECIFIED WATTAGE.



BEGIN ASSEMBLY AT THE TOP AND WORK DOWN.  
BE CAREFUL NOT TO STRIP THREADS.  
INSTALL LAMPSHADE LAST.

#### **Documents / Resources**

