



MGC ALC-480 Dual Loop Adder Instruction Manual

[Home](#) » [MGC](#) » MGC ALC-480 Dual Loop Adder Instruction Manual 

Contents

- [1 MGC ALC-480 Dual Loop Adder](#)
- [2 ALC-480 Dual Loop Adder Installation Instructions](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)
- [4 Related Posts](#)





MGC ALC-480 Dual Loop Adder



ALC-480 Dual Loop Adder Installation Instructions


The ALC-480 Dual Loop Adder module is mounted as shown below. For more information refer to the FX-401 manual LT-6670.

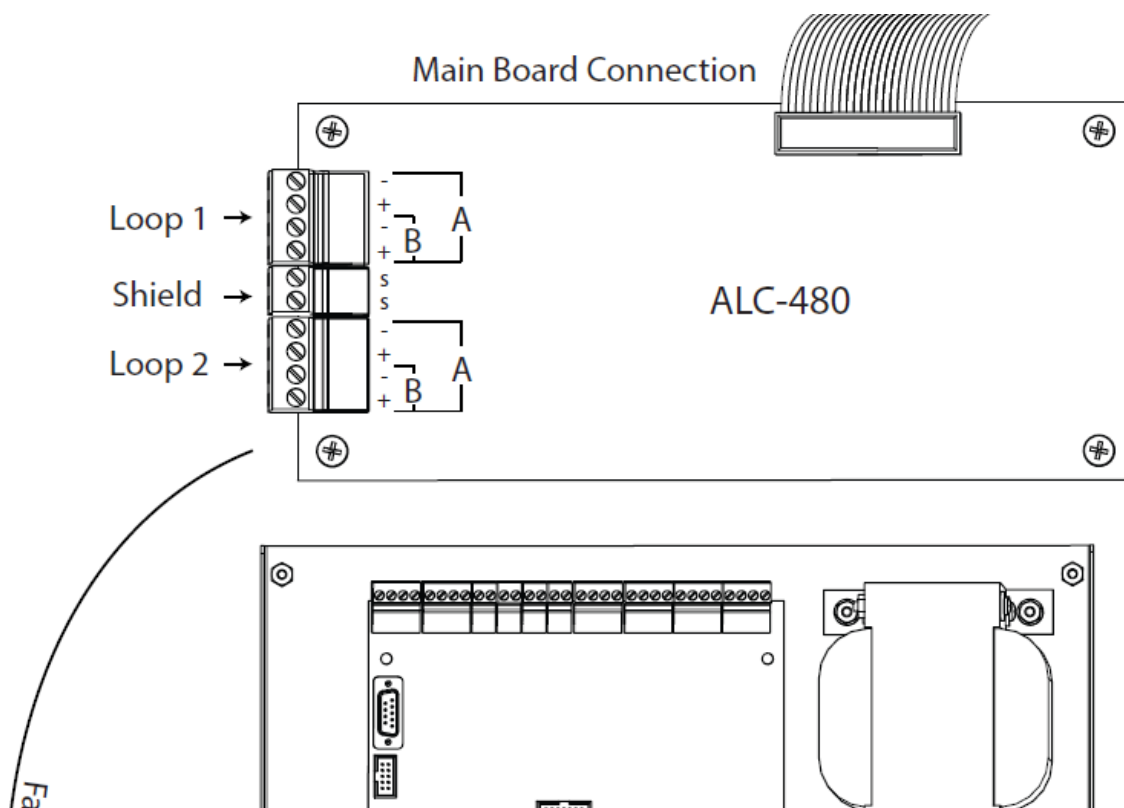

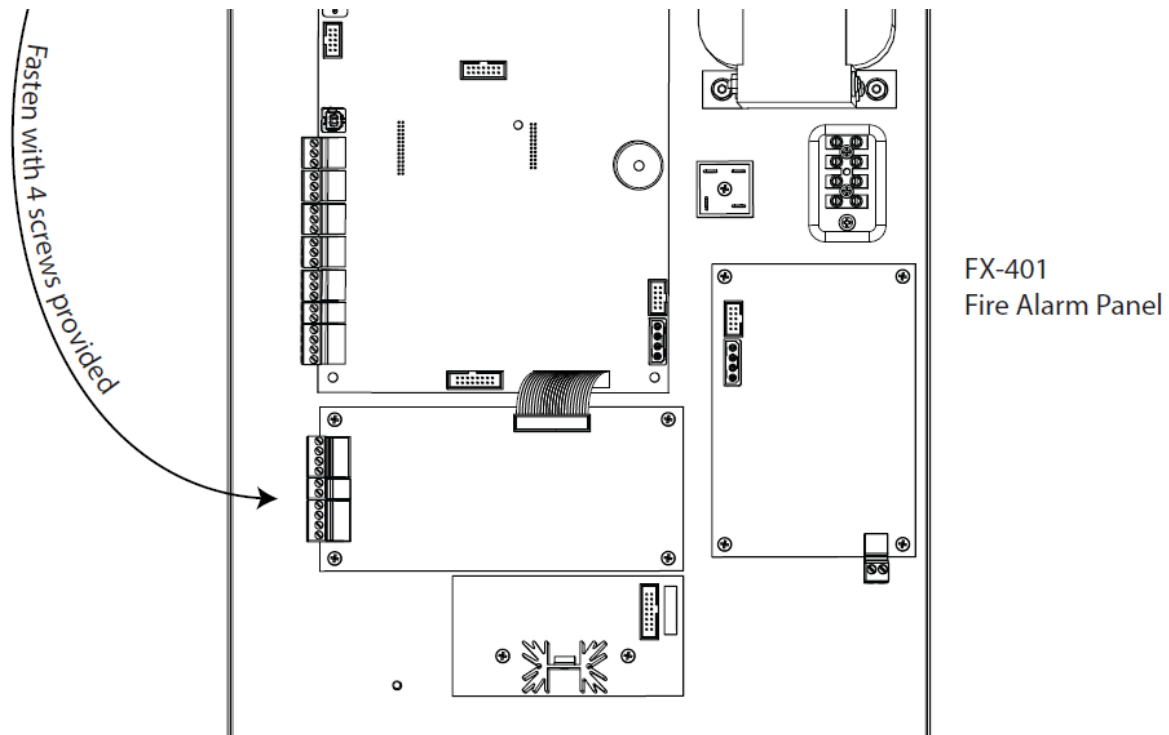

firealarmresources.com

Documents / Resources

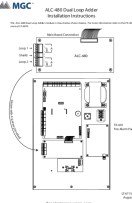	MGC ALC-480 Dual Loop Adder [pdf] Instruction Manual ALC-480 Dual Loop Adder, ALC-480, Dual Loop Adder, Loop Adder, Adder
---	--

References

- [Fire Alarm Resources | Download fire alarm documents](#)