



## MGC SPP-204-WP Series Weather Protected Speaker/Strobes User Manual

[Home](#) » [MGC](#) » MGC SPP-204-WP Series Weather Protected Speaker/Strobes User Manual 

MGC SPP-204-WP Series Weather Protected Speaker/Strobes User Manual



## Contents

- 1 About this Manual
- 2 Description
  - 2.1 Dimensions
- 3 Specifications
- 4 Setting the DIP Switches
- 5 Wiring
- 6 Weather Protected Enclosure
- 7 Removing the Speaker Cover from the Mounting Plate
- 8 Audible Ratings
- 9 Strobe Ratings
- 10 Warranty
- 11 Documents / Resources
  - 11.1 References
- 12 Related Posts

## About this Manual

This manual is included as a quick reference for installation. For further information on the use of this device with an FACU, please refer to the panel's manual.

**Note:** This manual should be left with the owner/operator of this equipment.

This manual covers the following models:

**SPPS-204-25R-WP** Weather protected wall mounted speaker/ strobe 25V, red

**SPPS-204-70R-WP** Weather protected wall mounted speaker/ strobe 70V, red

**SPP-204-25R-WP** Weather protected wall/ceiling mounted speaker 25V, red

**SPP-204-70R-WP** Weather protected wall/ceiling mounted speaker 70V, red

**Accessory:** MP-300 End of line resistor 3.9 kΩ

### Notes

- DO NOT PAINT OR ALTER FACTORY APPLIED FINISH IN ANY WAY.
- Wiring must be in accordance with CSA C22.1 Section 32, NFPA 70, and NFPA 72.

## Description

The SPP-204 series weather protected speaker and SPPS-204 weather protected speaker/strobe provide a wide range of audible and visual settings in a single compact device. The candela settings on the speaker/strobe can be field-configured for 15, 30, 75, 110, 185, and 15/75 cd.

### Dimensions

8 5/8" (219 mm) W

7 7/16" (189 mm) H

4 7/16" (112 mm) D

## Specifications

Operating temperature:	-40 °C to +66 °C(-40 F to 151 F)
Humidity range:	95% relative humidity at 60 °C(140 F)
Strobe flash rate	1 Hz (1 flash per sec.)*
Nominal strobe voltage:	Regulated 24 VDC / 24 VFWR
Operating strobe voltage range:	16-33 VDC/VFWR
Nominal speaker voltage:	25V or 70.7Vrms
Speaker size	4"
Terminal wire gauge	12-22 AWG
Installation environment:	Outdoor environment wet location

**\*Note:** For FWR signaling use a Mircom or Secutron panel.

#### **Setting the Candela (SPPS-204 models)**


The candela can be set to 15, 30, 75, 110, 185, 15/75.

**Note:** 185 cd setting is for General Signaling only.

The factory default setting is 15.


1. Pull out the candela selector from the device.
2. Re-insert the selector tab into the notch so that the desired candela setting is in the middle and shows through the window when the cover is in place.  
(When removing or inserting the candela selector, ensure to keep it straight).

**Note:** Select the candela setting before installing the device in the mounting plate.

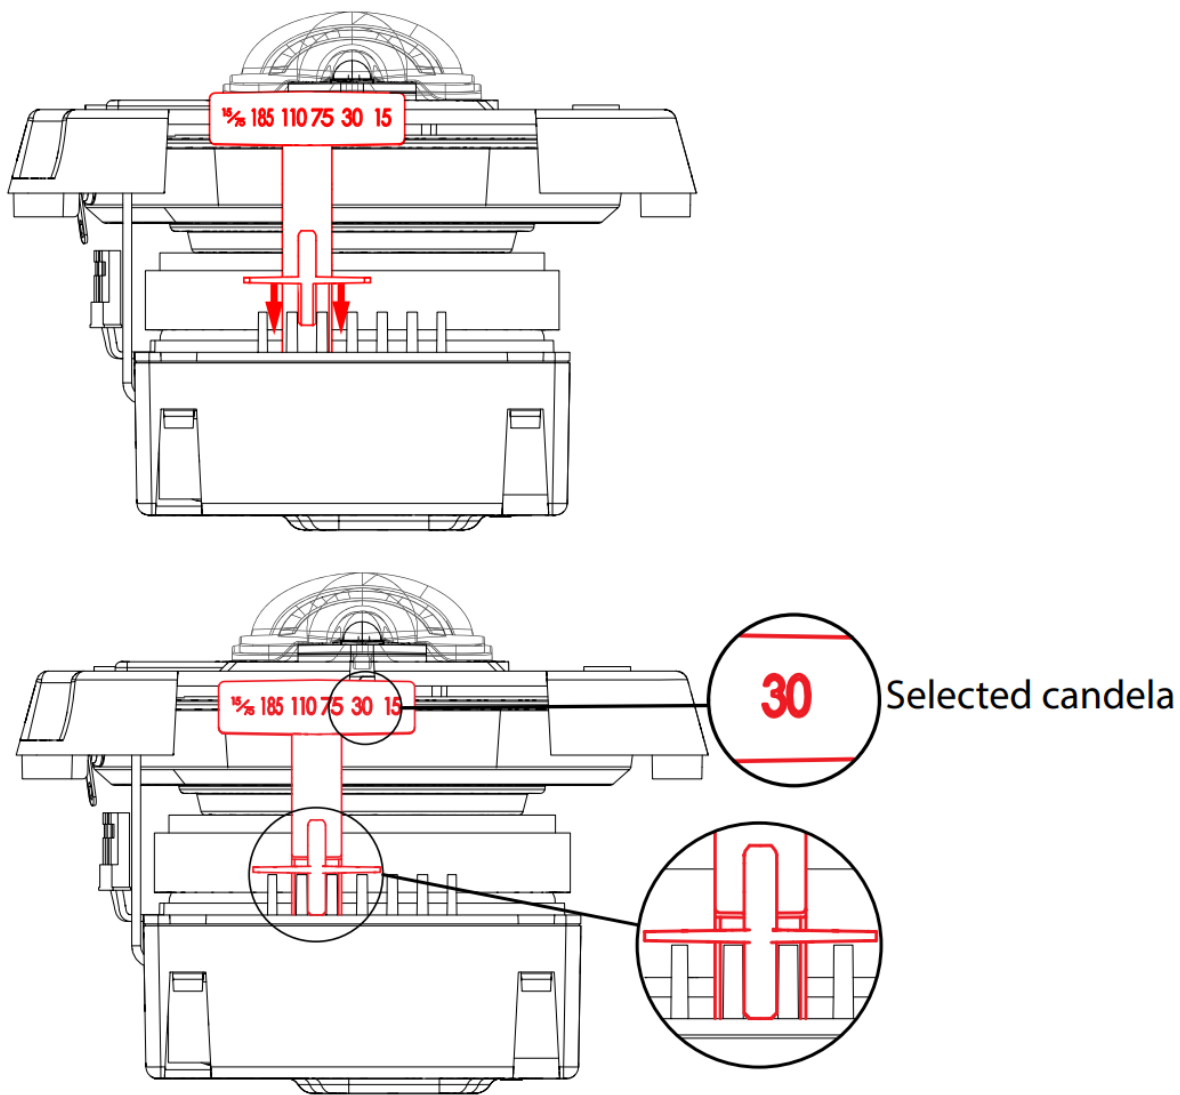

**Figure 1:** Inserting candela selector

## Setting the DIP Switches

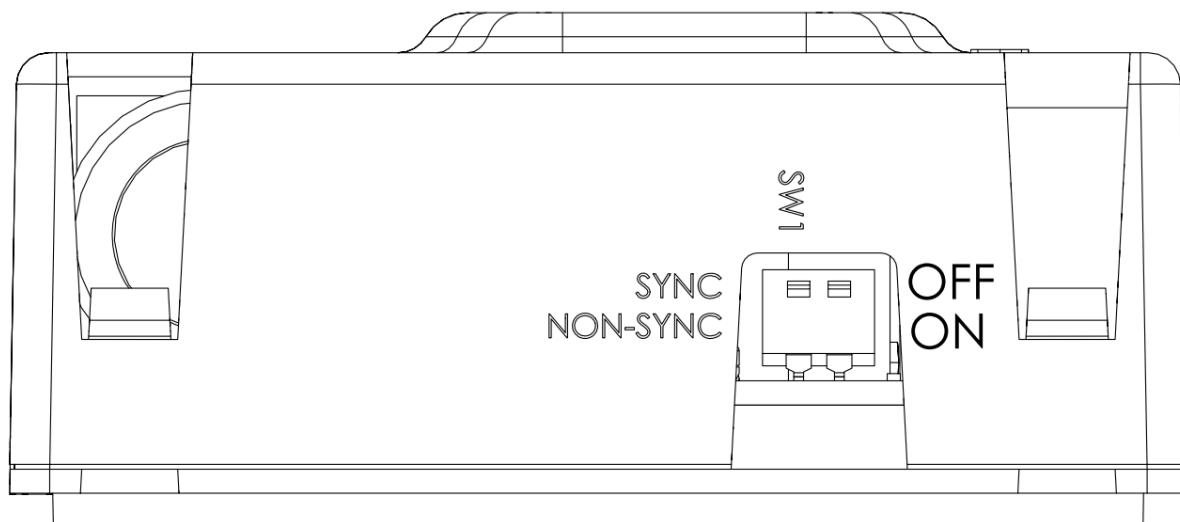

**Figure 2:** DIP switch

Input*	DIP Switch 1
Regulated 24 VDC/FWR (Non-synchronized)	ON
Synchronized	OFF (default)


**\*Note:** Use “SYNC” when flash synchronization is required, either through an external synchronization module or compatible FACU or PSU supporting MGC sync protocol.

Use “NON-SYNC” when the appliances do not need to be synchronized.

**Note:** DIP switch 1 default setting is OFF, synchronized.

**Note:** DIP switch 2 is not used. By default it is OFF.

## Wiring

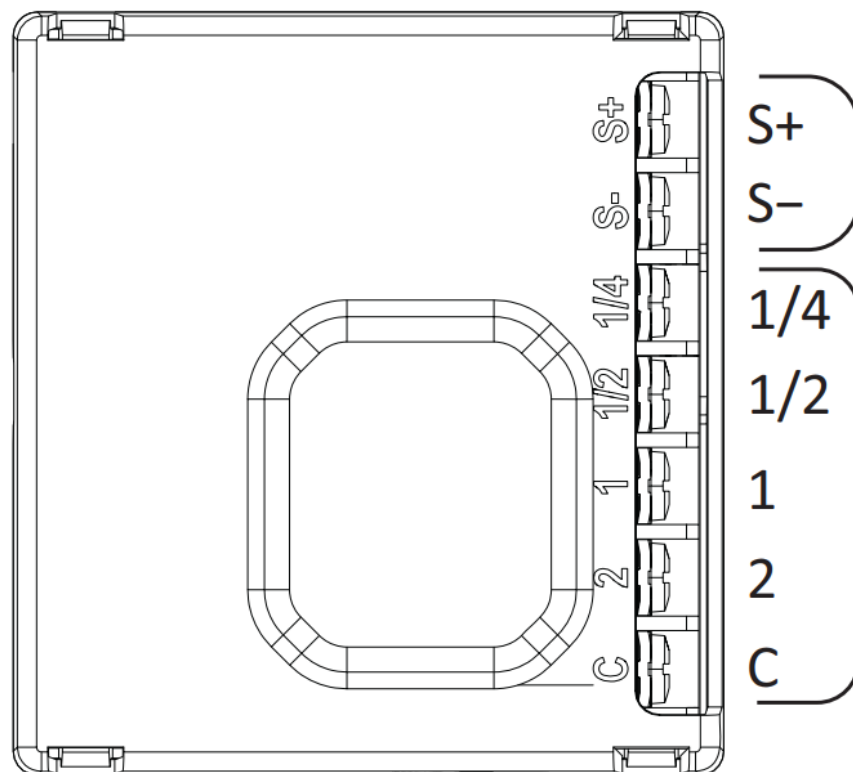


S+ FOR MODELS WITH STROBE FEATURE,  
S- STROBE INPUT POWER (NAC)

SELECTABLE SPEAKER POWER (WATTS)

**Note:** Connect speaker line between C

**Figure 3:** Wiring taps

**Note:** This device should be installed as per applicable local codes and standards and per the requirements of the authorities having jurisdiction. Use the information in this document to determine the total power or current of the devices. The total power or current of the devices must not exceed the output rating of the power source. Refer to the FACU installation guide for the wire size required according to the loop length and device's power usage. For maximum strobe operating current, please refer to Table 3.

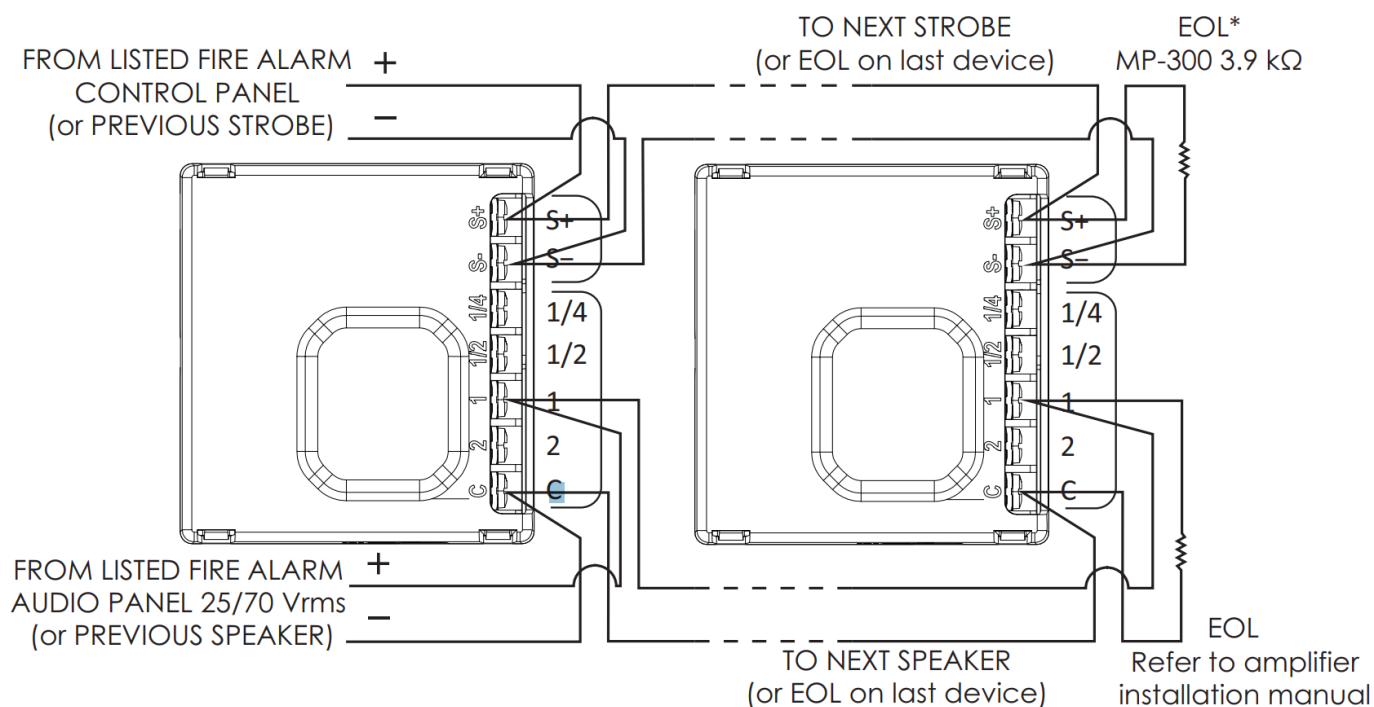


**Figure 4:** Device connection

**\*Note:** When using with Mircom or Secutron panel or sync module, use MP-300 (3.9 kΩ).

**Note:** Wiring must be in accordance with CSA C22.1, Canadian Electrical Code, Part I, Safety Standard for Electrical Installations section 32 and NFPA 70.

### CAUTION

FOR SYSTEM MONITORING – FOR ALL TERMINALS, DO NOT USE LOOPED WIRE UNDER TERMINALS. BREAK WIRE RUN TO PROVIDE SUPERVISION OF CONNECTIONS.

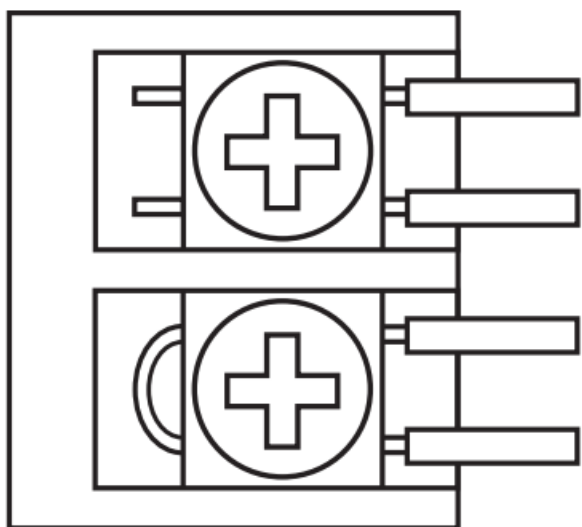


**Correct:** Wire run is broken

**Wrong:** Wire is looped around terminal


### Weather Protected Enclosure

The enclosure is rated for Outdoor Environment Wet Location.


-40 °C to +66 °C (-40 F to 151 F)

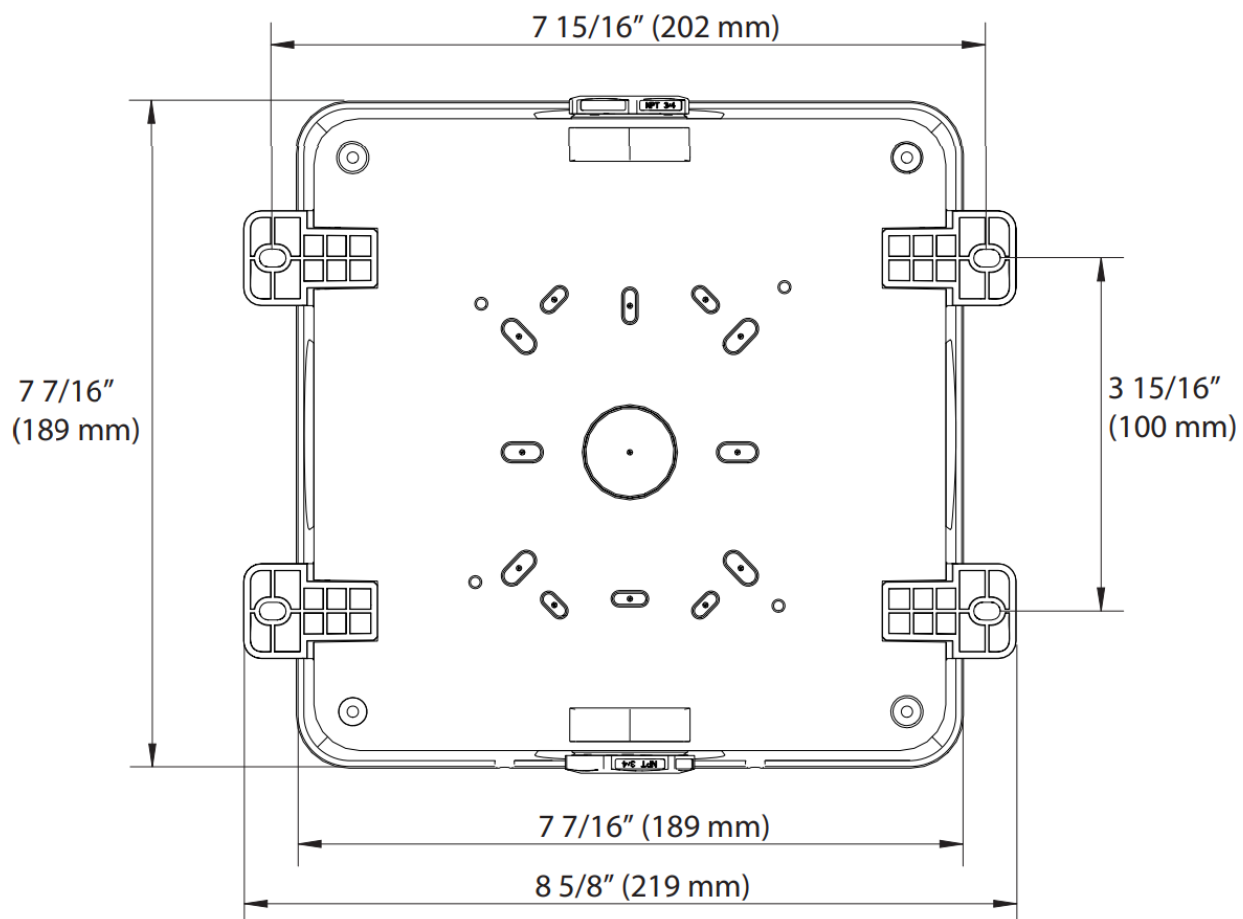

**Figure 5: Enclosure bottom view**

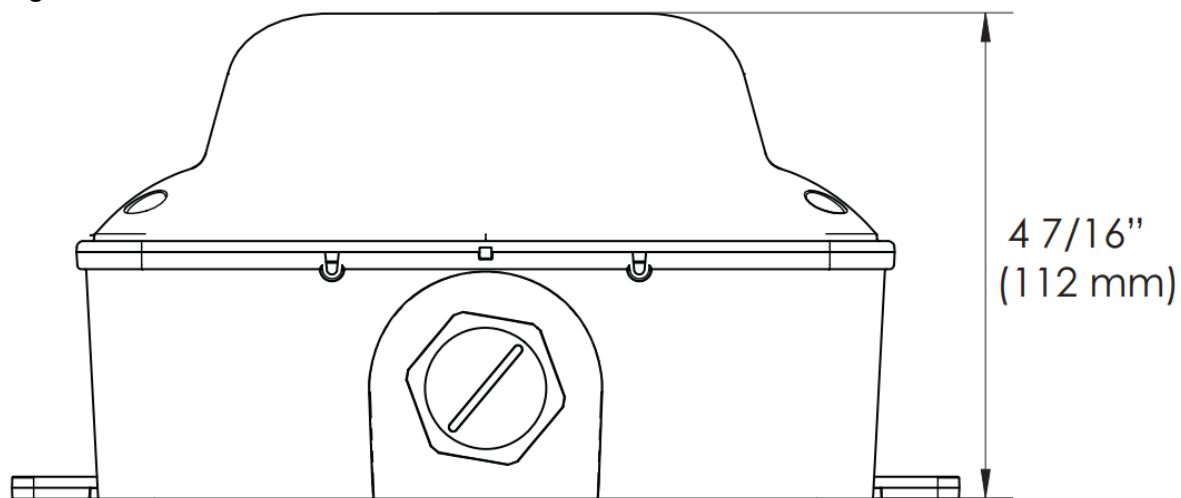

**Figure 6: Enclosure side view**

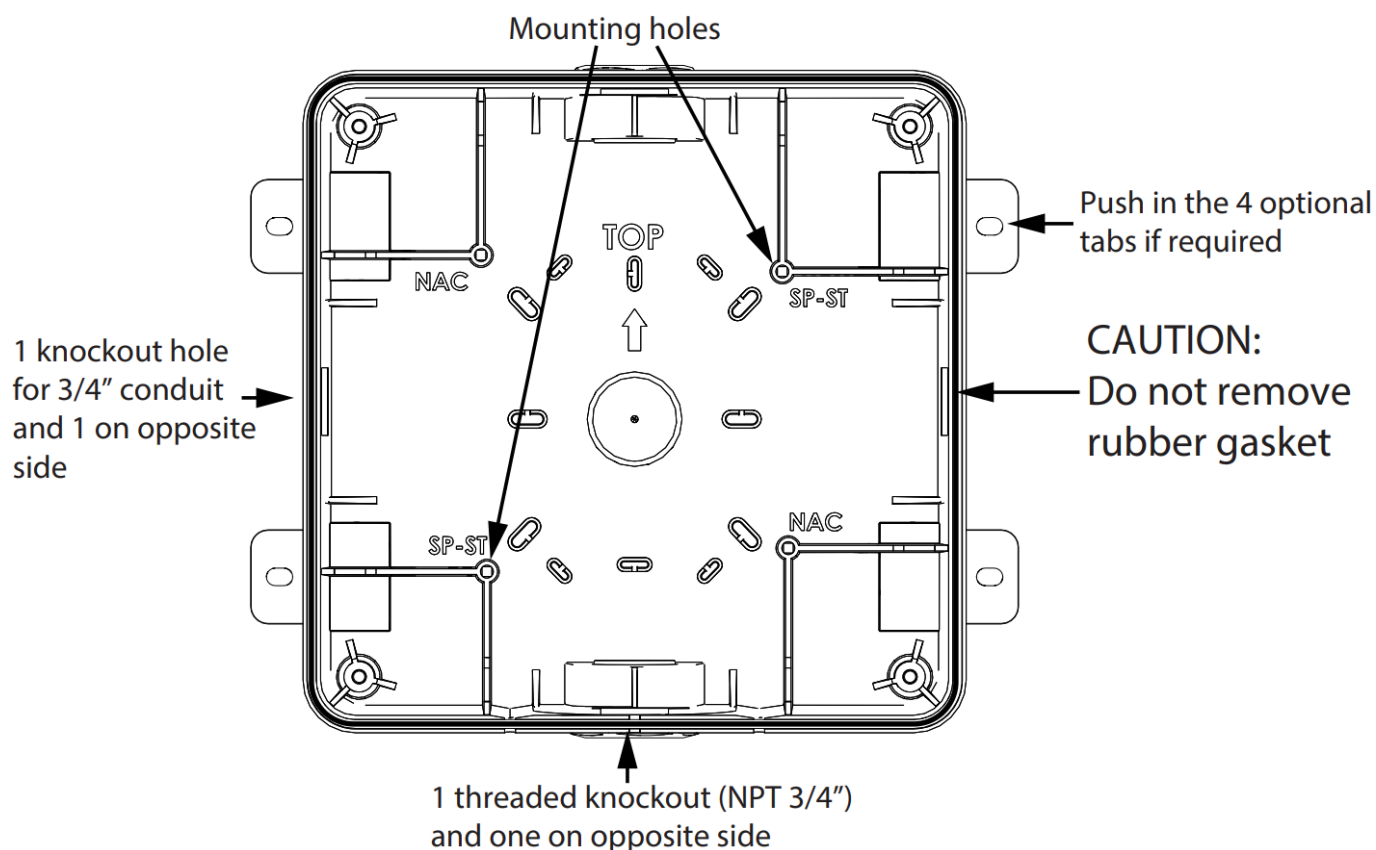

**Figure 7: Top view without cover**

### Mounting to the Wall or Ceiling


MGC recommends spacing speaker/strobe appliances in compliance with CAN/ULC S524 and NFPA72.

**Note:** Select the candela setting prior to installing the device in the mounting plate.

Mount the unit to the wall or ceiling depending on the model.

When mounting on the wall, mount the enclosure with the word TOP at the top, and mount the device with the MGC nameplate at the bottom.


1. Before mounting, disassemble the unit as shown in figure 8.
2. Secure the enclosure directly to the wall or ceiling.
3. Attach the mounting plate to the 2 holes marked SP-ST on the enclosure with the 2 included mounting screws.
4. Attach the speaker or speaker/strobe to the mounting plate with the 2 included screws.
5. Attach the top cover with the included securing screw and snap the nameplate over the securing screw.
6. Secure the transparent cover over the assembly with the 4 included screws.

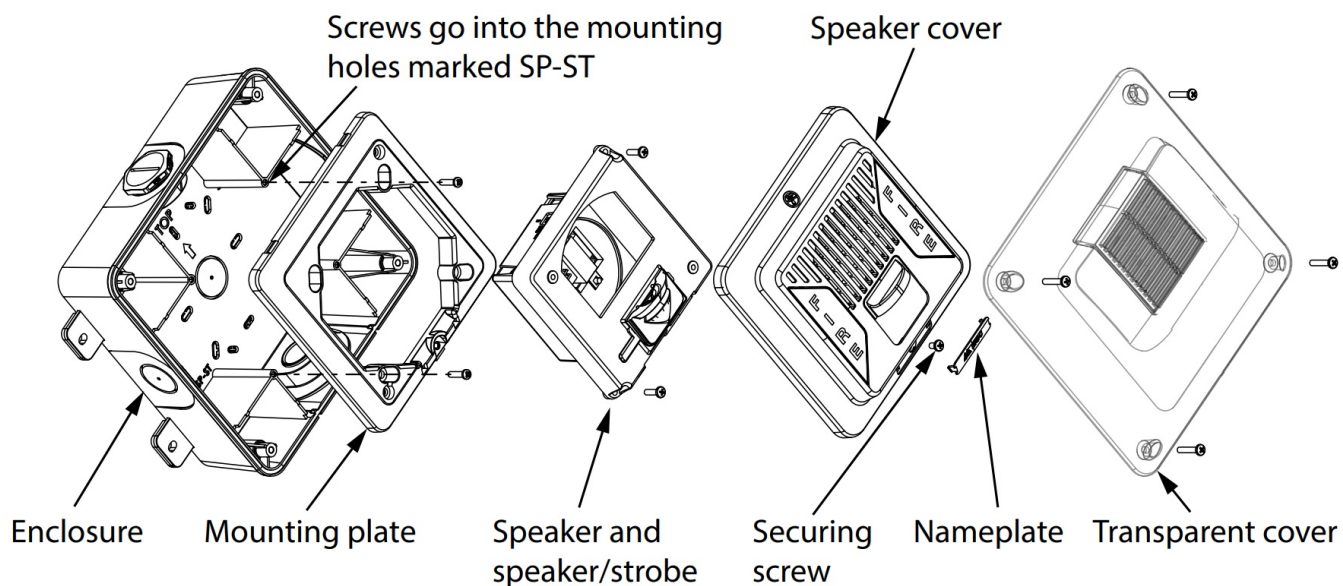

**Figure 8** Mount the speaker and speaker/strobe in enclosure

### Removing the Speaker Cover from the Mounting Plate

To remove the device from the mounting plate, remove the nameplate and the securing screw, then insert a flathead screwdriver into the slot between the device and the mounting plate, and rotate the screwdriver.

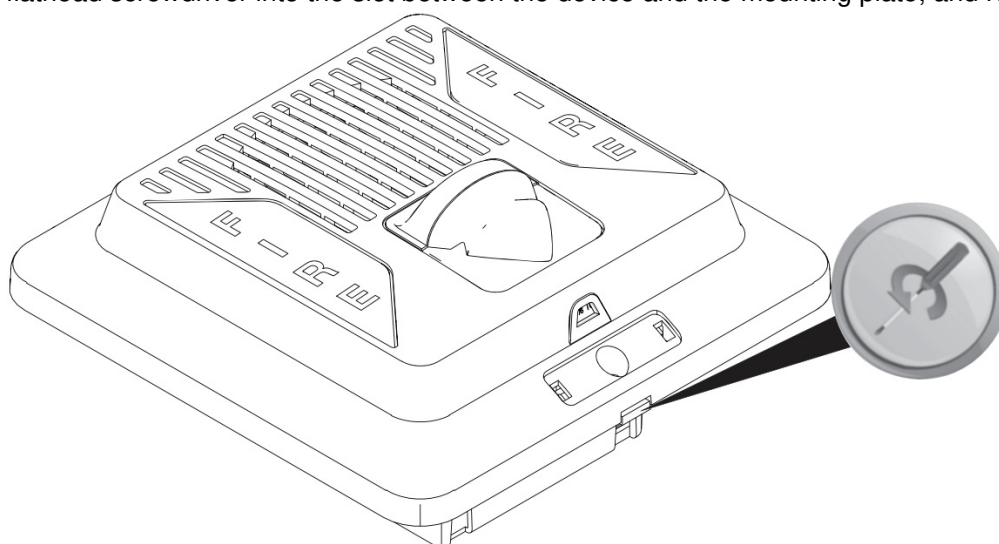

### Audible Ratings

**Table 1:** Overall Sound Pressure Level (Reverberant)

Power Tap (W)	Reverberant OSPL 10 ft (dBA)
2	84.9
1	83.5
1/2	80.9
1/4	78

Representative of speaker/strobe and speaker only, both 25 and 70.7V input

**Table 2:** Directional Sound Characteristics

Horizontal Axis	
Angle	OSPL (dBA)
+53°	-3
±90°	-5.3
Vertical Axis	
Angle	OSPL (dBA)
±52°	-3
±90°	-5.3

## Strobe Ratings

**Table 3:** Strobe Operating RMS Currents (mA)

Candela	Regulated 24 VDC	Regulated 24 VFWR
15	33	27
30	55	58
75	98	110
110	193	212
185*	276	269
15/75	102	108

**Table 4:** Light Output

Degrees	% of Candela Rating	
	Horizontal Dispersion	Vertical Dispersion, Wall to Floor
± 0	146	151
± 5	143	163
± 10	141	156
± 15	135	145
± 20	131	144
± 25	127	135
± 30	123	134
± 35	115	100
± 40	103	85
± 45	100	71
± 50	92	64
± 55	83	60
± 60	85	57
± 65	96	46
± 70	45	48
± 75	49	39
± 80	45	33
± 85	52	29
± 90	36	24
Compound ±45	32	—

**Note:** The values in Table 4 are shown as percentages of the rated light output at any candela setting.

## Warranty

**Purchase of all MGC products is governed by:**

<https://www.mircom.com/product-warranty>

<https://www.mircom.com/purchase-terms-and-conditions>

<https://www.mircom.com/software-license-terms-and-conditions>

### Canada

25 Interchange Way  
Vaughan, ON L4K 5W3

**Tel:** (905) 660-4655

(888) 660-4655

U.S.A

4575 Witmer Industrial Estates


Niagara Falls, NY 14305

**Tel:** (905) 660-4655

(888) 660-4655



## Documents / Resources

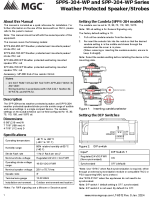	<p><a href="#">MGC SPP-204-WP Series Weather Protected Speaker/Strobes</a> [pdf] User Manual SPP-204-WP Series Weather Protected Speaker Strobes, SPP-204-WP Series, Weather Protected Speaker Strobes, Protected Speaker Strobes, Speaker Strobes, Strobes</p>
---	---

## References

- [Mircom - Smart Buildings. Smarter Solutions.](#)
- [Product Warranty - Mircom](#)
- [TERMS AND CONDITIONS OF PURCHASE - Mircom](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.