



# Mi-Light 4-Zone RGB+CCT Remote Controller FUT092 Instruction Manual

[Home](#) » [Mi-Light](#) » **Mi-Light 4-Zone RGB+CCT Remote Controller FUT092 Instruction Manual** 

## Mi • Light<sup>®</sup> 4-Zone RGB+CCT Remote Controller ( FUT092 ) User Instruction

### Contents

- [1 Features](#)
- [2 Parameters](#)
- [3 Instruction](#)
- [4 Linking Instructions](#)
- [5 Unlinking Instructions](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

### Features

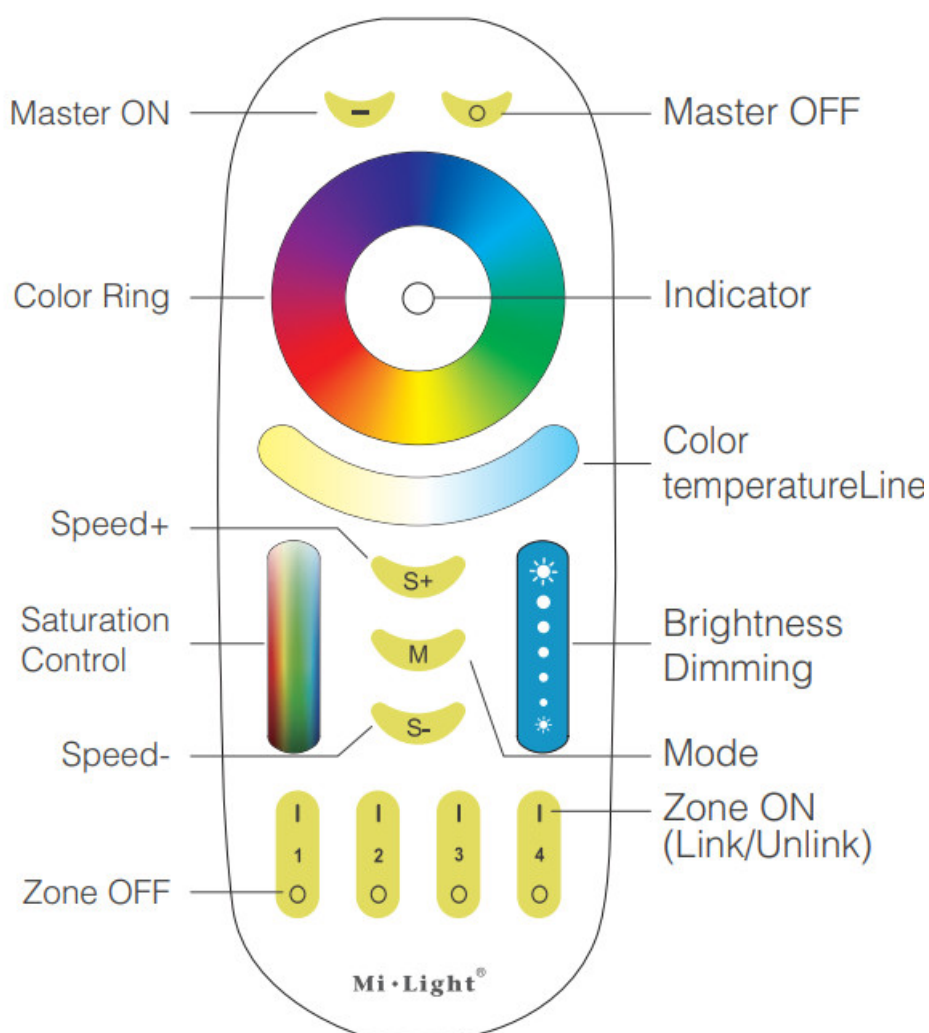 
This product adopts a worldwide used 2.4GHz frequency, GFSK control method, with the features of low power consumption, long distance transmitting, strong anti-interference, and fast communication rate; can control specified Mi-Light smart light with color, color temperature, saturation, and brightness changes.

### Parameters

|                                 |                                |
|---------------------------------|--------------------------------|
| Model No.: FUT092               | Transmission Frequency: 2.4GHz |
| Voltage: 3V(2*AAA battery)      | Modulation Method: GFSK        |
| Power Consumption: 6dBm         | Control Distance: 30m          |
| Standby Power Consumption: 20uA | Size: 138mm*56mm*20mm          |

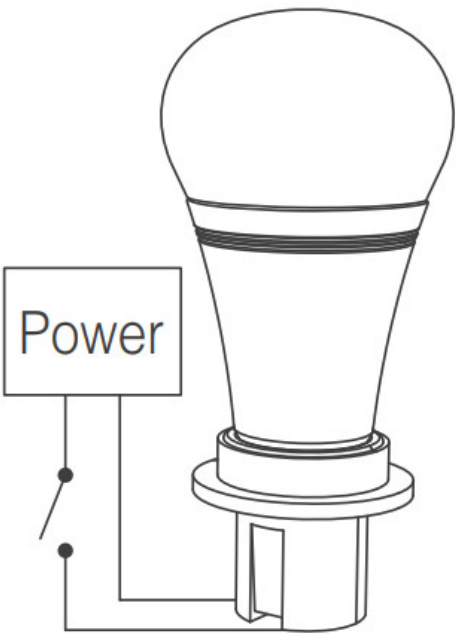
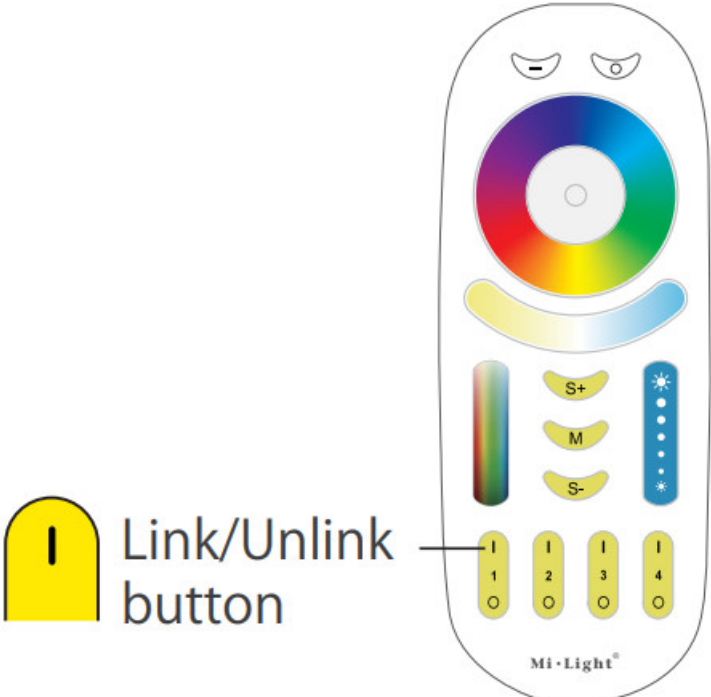

## Instruction

1. Long press **“Master OFF”** or **“Zone OFF”** to night light mode.
2. Touch **“Color temperature line”** to white light mode and adjust color temperature.
3. Touch **“Color Ring”** to change the colors.
4. Press **“Speed+”** to accelerate the dynamic mode speed continuously until to the fastest speed.
5. Press **“Speed-”** to lower the dynamic mode speed continuously until to the lowest speed.



The light can be working after linking with the remote controller.

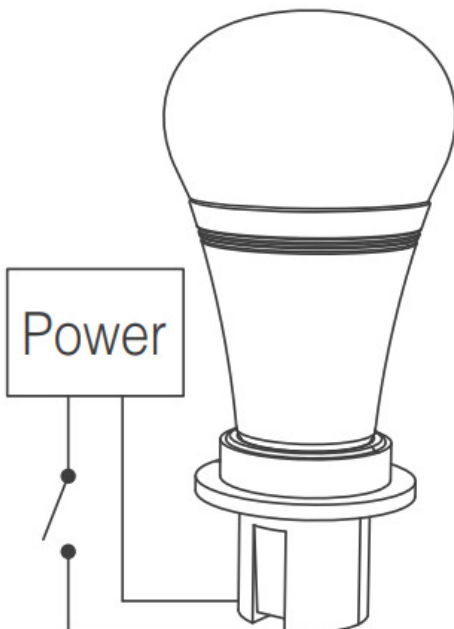
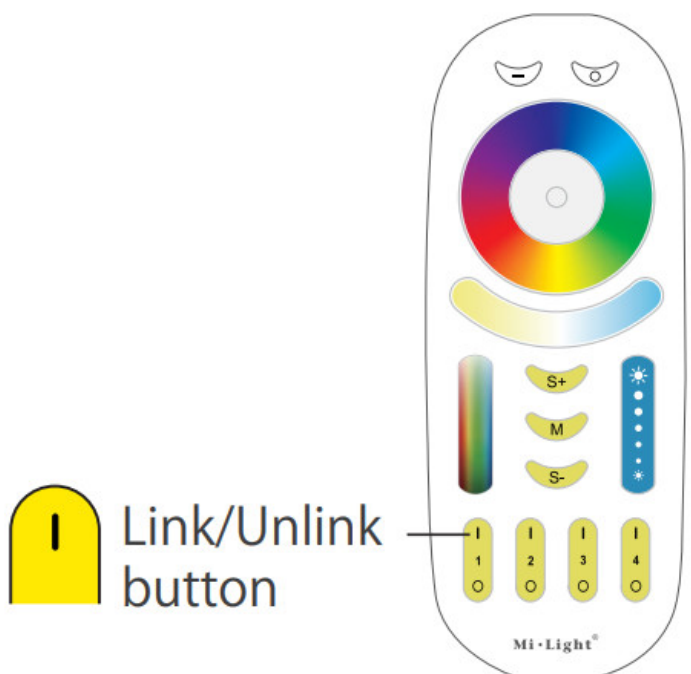

## Linking Instructions

|   |  |
|---|--|
|  |    |
| <p>1. Switch off the light, after 10 seconds switch on again</p>                  | <p>2. When the light on, short press any zone of “” <b>3 times</b> within 3 seconds</p> |



If the light does not blink slowly, the linking failed, Pls switch off the light again, and follow the above steps again.

### Unlinking Instructions

|   |  |                |
|---|--|----------------|
|  |   |                |
| <p>1. Switch off the light, after 10 seconds switch on again</p>                  | <p>2. When the light is on, short press "  " <b>5 times</b> within 3 seconds.<br/><b>Unlinking must be the same zone with the Linking</b></p> | <p>3<br/>c</p> |



If the light does not blink quickly, the unlink failed, pls switch off the light again, and follow the above steps to unlink again.


#### Caution

1. Remote controller only controls specified Mi-Light products; not all Mi-Light series can work on this remote controller.
2. In the use of the remote, if the indicated lamp blinking quickly, pls change the battery in time.  
Pls, don't use poor-quality batteries to avoid the leaking of battery liquid to damage the remote controller.
3. Pls don't use the remote controller on the wide-range metal or strong electromagnetic wave area, otherwise, it will badly affect the controlling distance.



Made in China

#### Documents / Resources



**Mi-Light®**  
4-Zone RGB+CCT Remote Controller ( FUT092 )  
User Instruction


**Features**  
The remote controller is widely used 2.4GHz frequency. 24-bit control method with 4-zone color and 4-zone CCT color. The remote controller is widely used in the home and office. It can control the light color and brightness of the light bulb. It can also control the light color and brightness of the light bulb. It can also control the light color and brightness of the light bulb.

**Parameters**  
Model: FUT092  
Frequency: 2.4GHz  
Power consumption: 10mA  
Remote control range: 100m

**Instruction**  
1. Press the power button to turn on the remote controller.  
2. Press the power button to turn on the remote controller.  
3. Press the power button to turn on the remote controller.

# Mi-Light 4-Zone RGB+CCT Remote Controller FUT092 [pdf] Instruction Manual


## Mi-Light, 4-Zone, RGB CCT, Remote Controller, UT092



**Color wheel diagram**  
The color wheel diagram shows the color range of the remote controller. It includes RGB and CCT color ranges. The RGB color range is from 0 to 255 for each color. The CCT color range is from 2700K to 6500K.

**Caution**

- 1. Please do not use the remote controller in the rain or in the snow.
- 2. Please do not use the remote controller in the rain or in the snow.
- 3. Please do not use the remote controller in the rain or in the snow.
- 4. Please do not use the remote controller in the rain or in the snow.
- 5. Please do not use the remote controller in the rain or in the snow.
- 6. Please do not use the remote controller in the rain or in the snow.
- 7. Please do not use the remote controller in the rain or in the snow.
- 8. Please do not use the remote controller in the rain or in the snow.
- 9. Please do not use the remote controller in the rain or in the snow.
- 10. Please do not use the remote controller in the rain or in the snow.



**Mi-Light**  
4-Zone RGB+CCT Remote Controller ( FUT092 )  
User Instruction

CE RoHS FCC ENEC