

Mi·Light T4 Smart Panel Remote Controller



Mi-Light T4 Smart Panel Remote Controller User Guide

[Home](#) » [Mi-Light](#) » Mi-Light T4 Smart Panel Remote Controller User Guide 

Contents

- [1 Mi-Light T4 Smart Panel Remote Controller User Guide](#)
- [2 Product Features](#)
- [3 Technical Parameters](#)
- [4 T Series: Powered by AC90-110V or AC180-240V](#)
- [5 Installation/ Dismantlement](#)
- [6 B2 & T2](#)
- [7 B3 & T3](#)
- [8 B4 & T4](#)
- [9 References](#)

Mi·Light

Mi-Light T4 Smart Panel Remote Controller User Guide



 
Product Features

Smart Panel Remote Controller is a newly developed remote controller. This Panel remote controller is designed with a delicate and fashionable tempered glass panel, And we adopt a high-precision Capacitive touch screen IC. Touch Screen is very stable; 2.4GHz high RF wireless control with long-distance controlling, low power consumption, and high speed transmitting rate.

This product has a T series and a B series, and the difference is the method of power supply. Both series have 4 kinds: T1/B1 4-zone dimmable panel remote controller; T2/B2 CCT 4-zone panel remote controller; T3/B3 4-zone RGB/RGBW panel remote controller; T4/B4 4-zone RGB+CCT panel remote controller. This product widely works on our smart LED Lighting, LED Controller, Smart panel controllers, etc.


Panel Remote Controller Name	Compatible Remote Model	Compatible products
4-Zone Brightness Dimming Panel Remote Controller	FUT091	Brightness dimming series
4-Zone CCT Adjust Panel Remote Controller	FUT091	CCT adjust series
4-Zone RGB/RGBW Panel Remote Controller	FUT095/FUT096	RGB / RGBW series
4-Zone RGB+CCT Panel Remote Controller	FUT092	RGB / RGBW RGB+CCT series

Technical Parameters

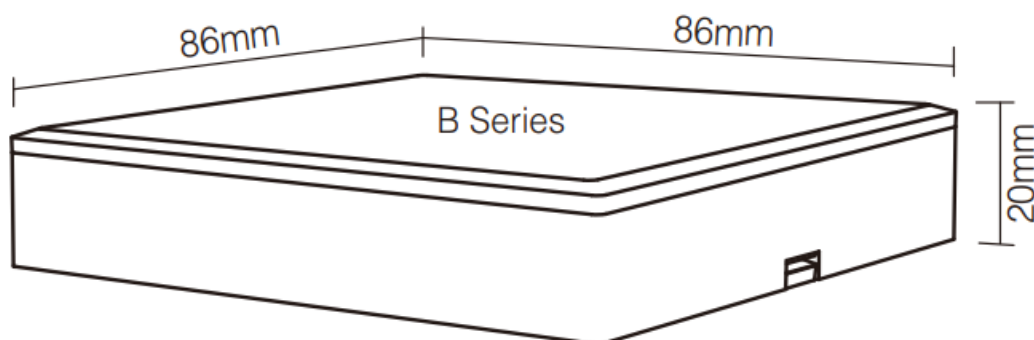

B Series: Powered by 3V(2*AAA Battery)

- Working Temperature: -20-60°C
- Input Voltage: 3V(2*AAA Battery)
- Radio Frequency: 2400-2483.5MHz
- Modulation Method: GFSK
- Transmitting Power: 6dBm
- Control Distance: 30m
- Standby Power: 20uA
- Size: L86mm*W86mm


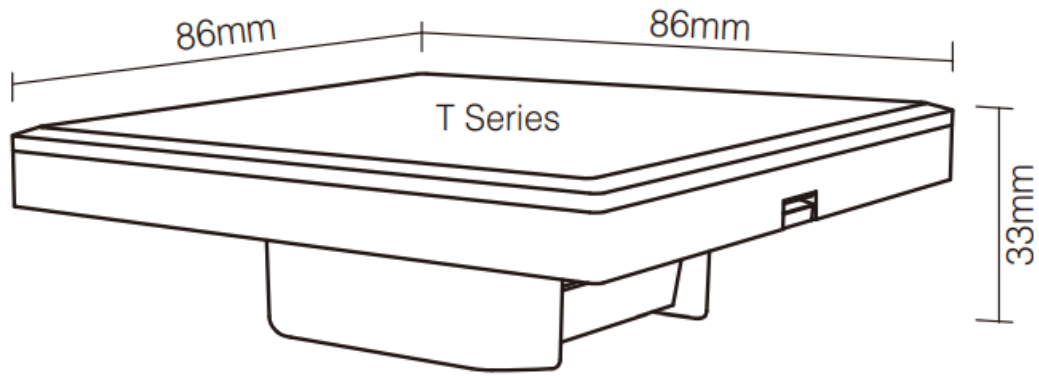


T Series: Powered by AC90-110V or AC180-240V



- Working Temperature: -20-60°C
- Input Voltage: AC90-110V or AC180-240V
- Radio Frequency: 2400-2483.5MHz
- Modulation Method: GFSK
- Transmitting Power: 6dBm
- Control Distance: 30m
- Size: L86mm*W86mm

Installation/ Dismantlement

T series Installation/ Dismantlement

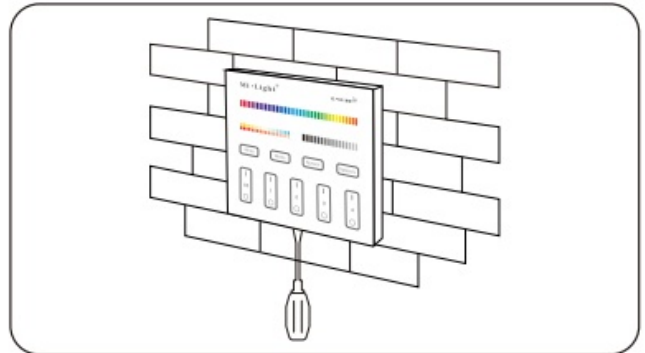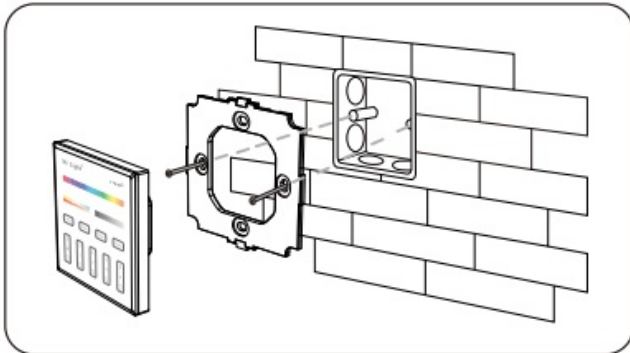


B series Installation/ Dismantlement

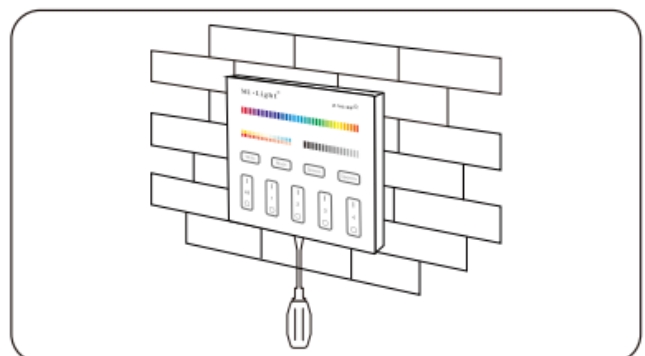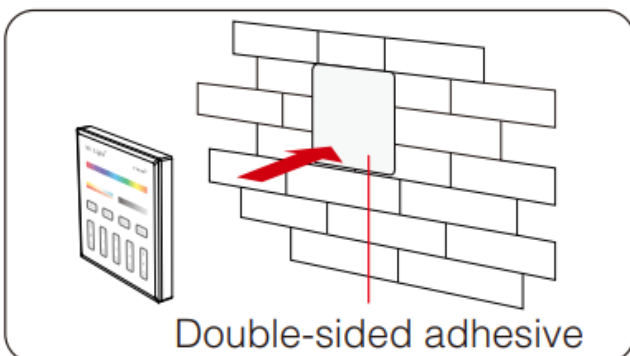







Attention

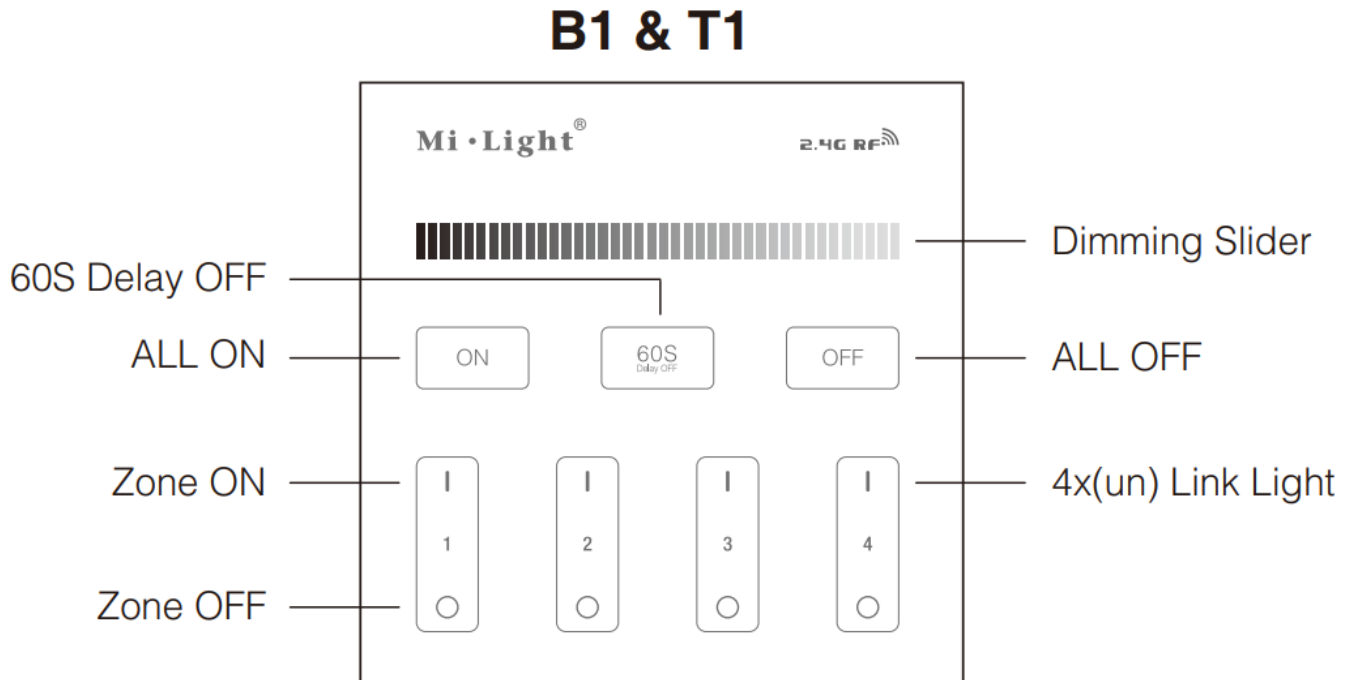1. Please check the cable, and make sure the circuit is correct before power on.
2. When installing, pls handle it with care to avoid breaking the glass panel.

Function of keys

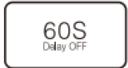

Remark: When touching the button, the LED indicating lamp will flash once with a different sound (Touch slider with no sound).


-  Touch the Dimming Slider to change the brightness from 1~100%.
-  Touch Master ON, and Turn on all linked lights.
- Long press 5 seconds to turn ON the indicating sound.
-  When the light is ON, press "60S Delay OFF" the light will be OFF Automatically after 60 seconds.
-  Touch Master OFF, and Turn off all linked lights.
- Long press 5 seconds to turn OFF the indicating sound.
-  Touch Zone ON, and Turn on zone-linked lights.
-  Touch Zone OFF, and Turn off zone-linked lights.








Link / Unlink

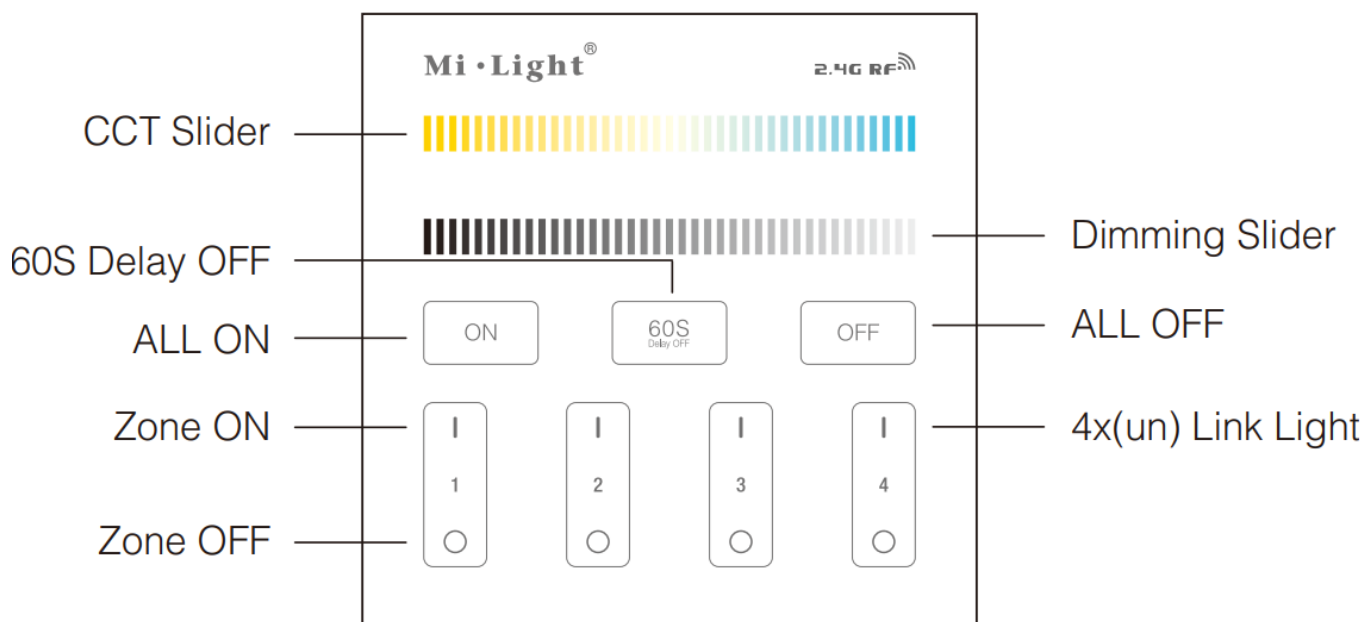- Link: First power off, then power on, within 3 seconds touch any of the Zone 'I' buttons 3 times shortly, the link is done when you see the light blink 3 times, otherwise, try again later.

- Unlink: First power off, then power on, within seconds touch the linked Zone 'I' button or the Master 'I' button 5 times shortly, the unlink is done when you see the light blink 9 times, otherwise, try again later.

B2 & T2












-  Touch the slider to change the color temperature.
-  Touch the Dimming Slider to change the brightness from 1~100%.
-  Touch Master ON, and Turn on all linked lights.
-  Long press 5 seconds to turn ON the indicating sound.
- When the light is ON, press “60S Delay OFF” Automatically after 60 seconds. , the light will be OFF
-  Touch Master OFF, and Turn off all linked lights.
- Long press 5 seconds to turn OFF the indicating sound.
-  Touch Zone ON, and Turn on zone-linked lights.
-  Touch Zone OFF, and Turn off zone-linked lights.

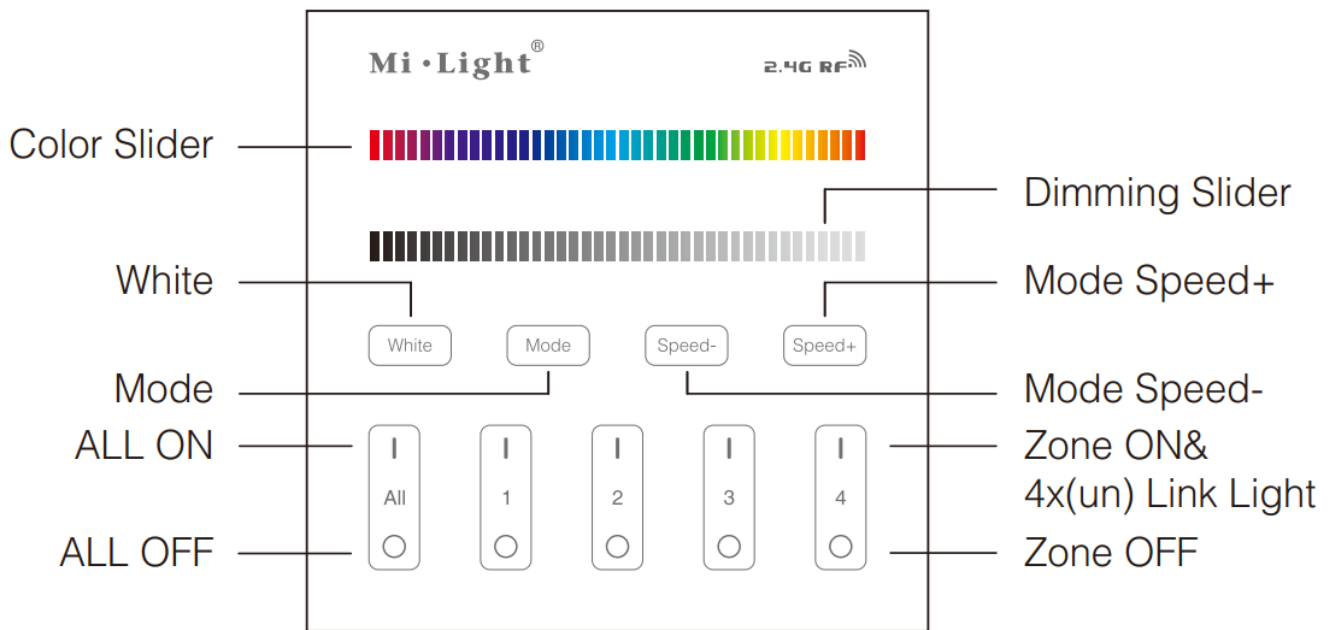Link / Unlink

- Link: First power off, then power on, within 3 seconds touch any of the Zone 'I' button 3 times shortly, the link is done when you see the light blink 3 times, otherwise, try again later.
- Unlink: First power off, then power on, within 3 seconds touch the linked Zone 'I' button or the Master 'I' button 5 times shortly, the unlink is done when you see the light blink 9 times, otherwise, try again later.

B3 & T3

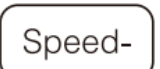





-  Touch the Color Slider, Choose the color you want.
-  Touch the Dimming Slider to change the brightness from 1 ~ to 100%.
-  Touch the White button to white light mode.
-  Switching Modes.
-  Slow the speed in the present dynamic mode.
-  Accelerate the speed in the present dynamic mode.
-  ALL ON: Touch and turn on all linked lights.
- Long press 5 seconds to turn ON the indicating sound.
- Zone(1-4) ON: Touch Zone ON, Turn on zone-linked lights.
-  ALL OFF: Touch and turn off all linked lights.
- Long press 5 seconds to turn OFF the indicating sound.
- Zone(1-4) OFF: Touch Zone OFF and turn off zone-linked lights.


Link / Unlink

Link: First power off, then power on, within 3 seconds touch any of the Zone 'I' buttons 1 time shortly, the link is done when you see the light blink 3 times, otherwise, try again later. unlink: First power off, then power on, within 3 seconds, long press the Zone 'I' button, the unlink is done when you see the light blink 9 times, otherwise try again later.

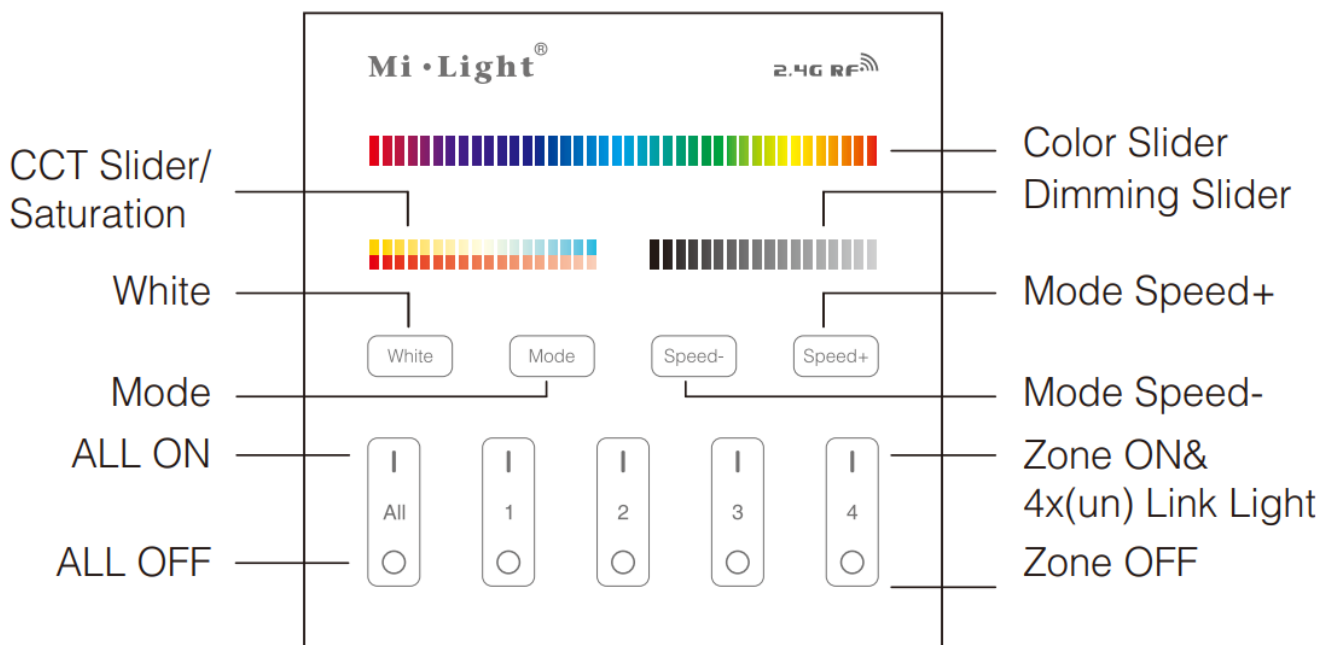
B4 & T4





-  Touch the Color Slider, Choose the color you want.
-  Under white light mode, touch the slider to change color temperature;
-  Under color mode, touch the slider to change the saturation.


-  Touch the Dimming Slider to change the brightness from 1 ~ to 100%.
- Touch the White button to white light mode.

-  Switching Modes.

-  Slow the speed in the present dynamic mode.

-  Accelerate the speed in the present dynamic mode.

-  ALL ON: Touch and turn on all linked lights.
- Long press 5 seconds to turn ON the indicating sound.
- Zone(1-4) ON: Touch Zone ON, Turn on zone-linked lights.

-  ALL OFF: Touch and turn off all linked lights.
- Long press 5 seconds to turn OFF the indicating sound.
- Zone(1-4) OFF: Touch Zone OFF and turn off zone-linked lights.

Link / Unlink

- Link: First power off, then power on, within 3 seconds touch any of the Zone 'I' button 3 times shortly, the link is done when you see the light blink 3 times with green color, otherwise try again later.

- Unlink: First power off, then power on, within 3 seconds touch the linked Zone 'I' button or the Master 'I' button times shortly, the unlink is done when you see the light blink 10 times with a red color, otherwise, try again later.

Download PDF: [Mi-Light T4 Smart Panel Remote Controller User Guide](#)

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.