

# MiBOXER 1-Channel Host Controller SYS-T1 User Manual

Home » MiBOXER » MiBOXER 1-Channel Host Controller SYS-T1 User Manual

MiBOXER 1-Channel Host Controller SYS-T1 User Manual



# Contents [hide 1 Features 2 Parameters 3 Product Dimension 4 Auto-transmitting function 5 Auto-synchronization 6 Connection Diagram 7 Link/Unlink 8 Attention 9 Documents / Resources 10 Related Posts

### **Features**

This controller adopt the widely used 2.4GHz wireless technology with the features of low power consumption, long signal transmitting and strong anti-interference, etc. 2.4GHz RF remote controller, DMX512 controller ( Need DMX 512 LED transmitter. Model No. FUTD01 ). Also with smartphone APP control (2.4GHz gateway is needed). The controller has auto-transmitting and auto-synchronizing function. Only compatible with SYS series products, including wall washer light, underwater light and Garden Light, etc.


### **Parameters**

Model No.: SYS-T1Input Voltage: DC24V

• Working Temperature: -20~60°C


Product Weight: 57g
Output Voltage: DC24V
Output Current: Max 15A
Output Power: Max 360W
Controlling Distance: 30m

### **Product Dimension**

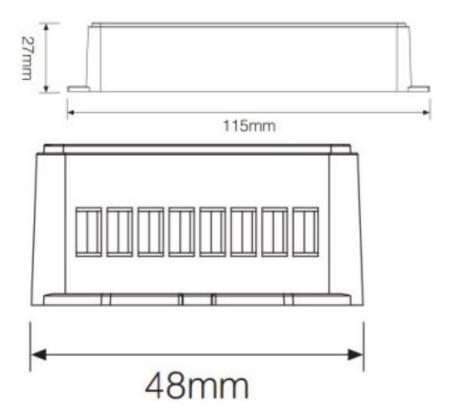

## **Auto-transmitting function**


One strip controller can transmit the signals from the remote control to another controller within 30m, as long as there is a strip controller within 30m, the remote control distance can be limitless.

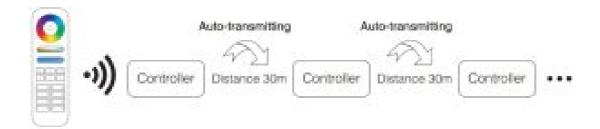


# **Auto-synchronization**

Different controllers can work synchronously when they are started at different times, controlled by the same

remote, under same dynamic mode and with same speed, and within 30m distance.

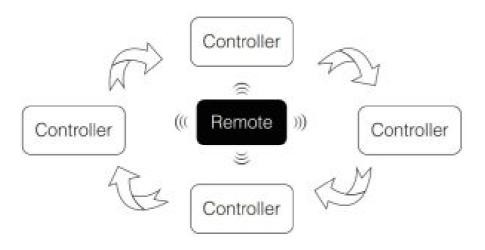

# **Connection Diagram**

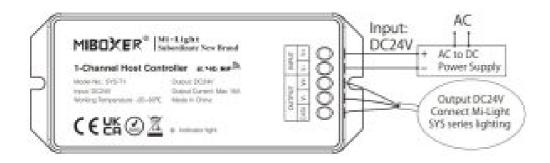

DMX512 controller ( Need DMX 512 LED transmitter. Model No. FUTD01 ).

**Note** When using "SYS-T1 controller", you need to add "SYS-T2 1-channel signal amplifier" for below 3 situations.


- 1. Connecting over 50pcs lights.
- 2. Connected cable length over 300m.
- 3. Output power over 360W.
- All connected lights to "SYS-T1 Controller" cannot be over 360W, otherwise, it will damage the controller.
- The wiring method, please see details for the SYS series instructions.

# Link/Unlink

Compatible with these remote controls (Purchased separately)




Controller will work after linking with remote control; for more details, pls read the remote instruction.

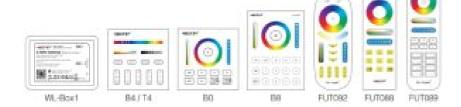


### **Attention**

- 1. Please check whether the input voltage is in accordance with the controller working voltage, and please check the connection of both the cathode and anode.
- 2. The working Voltage is DC24V, the controller will be broken if the voltage is higher than 24V.
- 3. Non-professional user cannot dismantle the controller directly, Otherwise the controller may be broken
- 4. The working temperature is -20~60°C; Do not use the device to direct sunlight, moist and other high temperature area.
- 5. Please do not use controller around the mental area and high magnetic field, otherwise, it will badly affect the control distance.

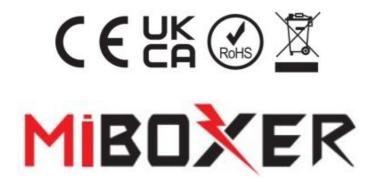

### **Documents / Resources**

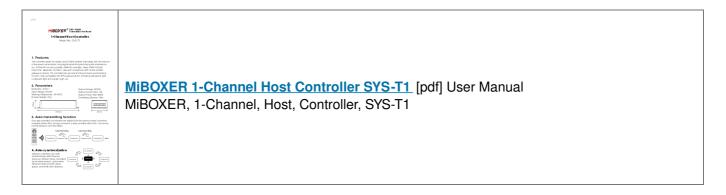

Manuals+, home privacy