

# MIBOXER FUT021 RF Wireless Touching LED Remote Controller Instruction Manual

Home » MIBOXER » MIBOXER FUT021 RF Wireless Touching LED Remote Controller Instruction Manual




Mi.Light Subordinate New Brand

RF Wireless Touching LED Remote Controller(Brightness Adjusting)

Model No.: FUT021

#### Contents [ hide

- 1 Technical Parameters(remote control):
- 2 Technical Parameters(controller):
- 3 Functions of Keys
- 4 How to use
- 5 Caution
- 6 Connecting chart:
- 7 Documents / Resources
- **8 Related Posts**

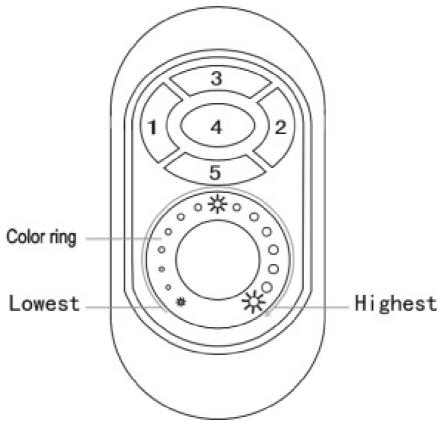

### **Technical Parameters(remote control):**

1: Power supply: AM battery 2 pcs

2:Cover material: ABS

# **Technical Parameters(controller):**

1. Working voltage: DC12V-24V

2. Output control:

3. Control current, 6A/

4. Total output: Max. 10A

5. Dimension: L85\*W45\*H22mm

6 RF: 2.4GHz

7. Receiving range: Om

#### **Functions of Keys**

1. Key 1: on

2. Key 2: off

3. Key 3: highest brightness

4. Key 4: medium brightness

5. Key 5: lowest brightness

#### How to use


- 1. Use your finger to touch the color ring, you can change the brightness from the highest to the lowest (100%-1%).
- 2. Resume function. The previous settings will be resumed while power on again.
- 3. Link/Unlink Link: Press 'Key 3' one time within 3 seconds when power on, the link is done when the light blinks 3 times.

Unlink Press'Key 3' five times quickly within 3 seconds when power on, the unlink is done when the light blinks 6 times.

#### Caution


Please don't touch or press the color ring while loading the batteries to protect the sensitiveness. Please use the remote controller 3 seconds after the batteries are loaded. Please reload the batteries when you find the color ring is not sensitive.

# **Connecting chart:**

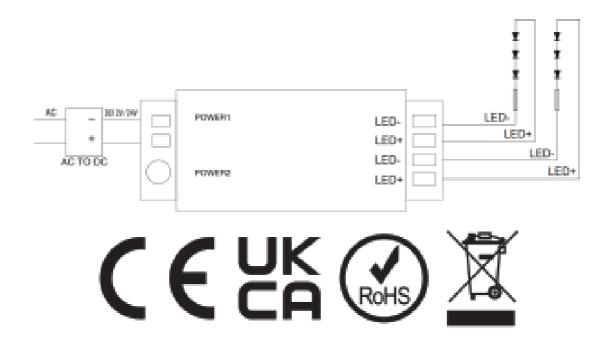

Made in China

#### **Documents / Resources**

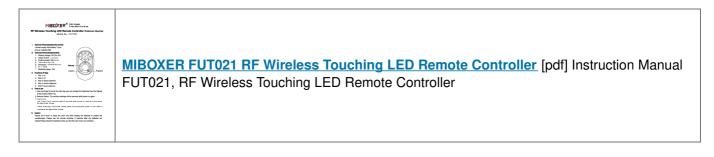

Manuals+, home privacy