



MiBOXER P1 Panel Controller User Manual

[Home](#) » [MiBOXER](#) » MiBOXER P1 Panel Controller User Manual 

Contents

- [1 MiBOXER P1 Panel Controller](#)
- [2 Features](#)
 - [2.1 Panel Controller \(Single Color \)](#)
 - [2.2 Panel Controller \(Color Temp. \)](#)
 - [2.3 Function](#)
 - [2.3.1 P1 Button Function](#)
 - [2.3.2 P2 Button Function](#)
 - [2.4 Link/Unlink](#)
 - [2.5 P1 / P2 Dynamic Mode table](#)
 - [2.6 Remote control Link/Unlink](#)
 - [2.7 Signal transmitting](#)
 - [2.8 Modes synchronization](#)
 - [2.9 PWM high frequency / low frequency switching](#)
 - [2.10 Installation / Dismantlement](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)




MiBOXER P1 Panel Controller



Features

This product is touch panel controller designed with standard 86*86mm-box structure which can be connected with constant voltage LED strip or lamp. You can pair it with remote control and enjoy remote control function, It's flexible and convenient to use.

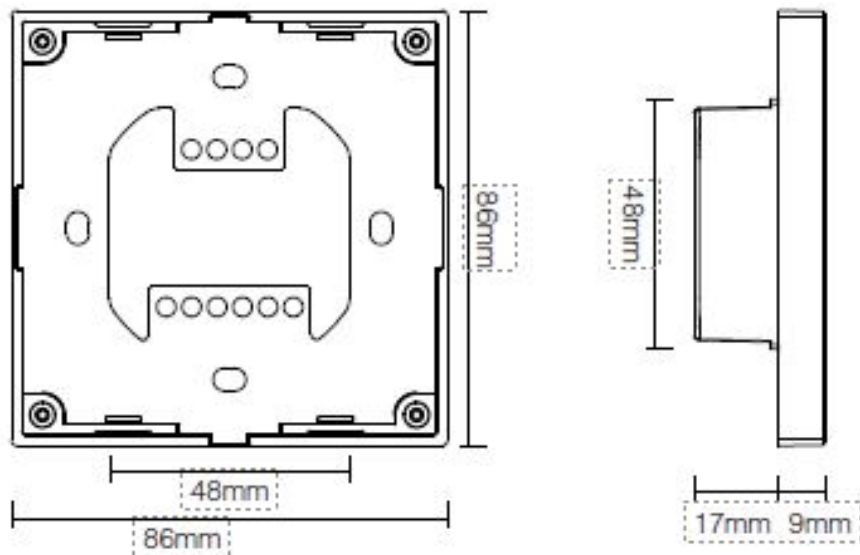


Panel Controller (Single Color)

Model No.: P1

- Input/Output Voltage: DC12V~24V
- Output: 5A/Channel
- Total Output Max: 10A

- RF: 2.4GHz
- Control Distance: 30m
- Working Temp.: -20~60°C
- Dimmable control 2.4G RF wireless transmission technology
- Remote control Control distance 30m
- Smartphone APP control (2.4GHz gateway is needed)
- Support third party voice control (2.4GHz gateway is needed)
- 60S Delay OFF

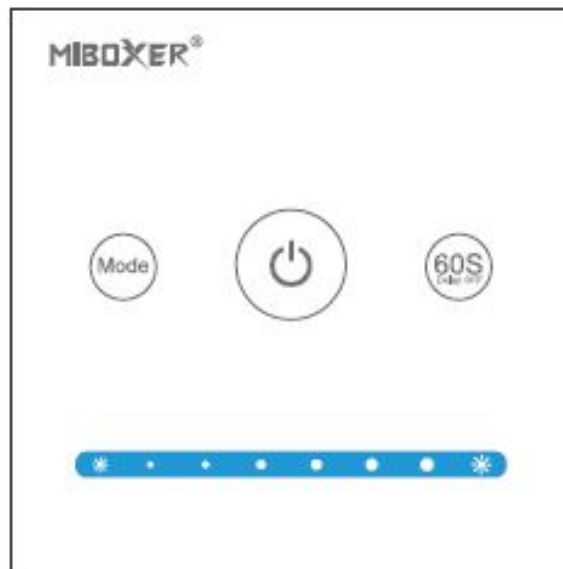


Model No.: P1
Panel Controller (Single Color)

Panel Controller (Color Temp.)

Model No.: P2


- Input/Output Voltage: DC12V~24V Output: 5A/Channel
- Total Output Max: 10A
- RF: 2.4GHz
- Control Distance: 30m
- Working Temp.: -20~60°C
- Color temperature 2700K~6500K
- 2.4G RF wireless transmission technology
- Support third party voice control (2.4GHz gateway is needed)
- 60S Delay OFF
- Dimmable control
- Smartphone APP control (2.4GHz gateway is needed)
- Remote control Control distance 30m

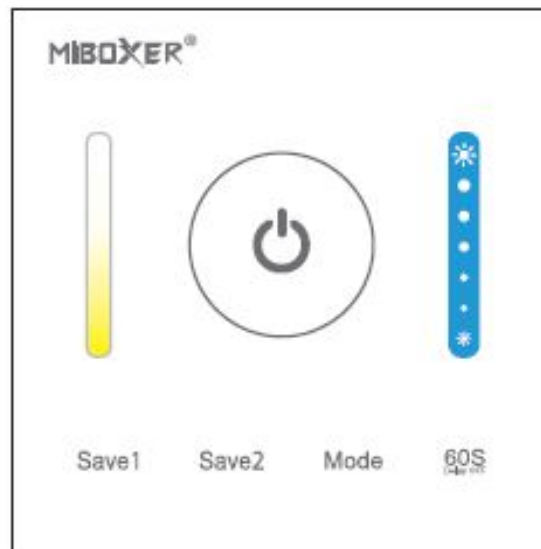

Model No.: P2
Panel Controller (Color Temp.)

Function

P1 Button Function

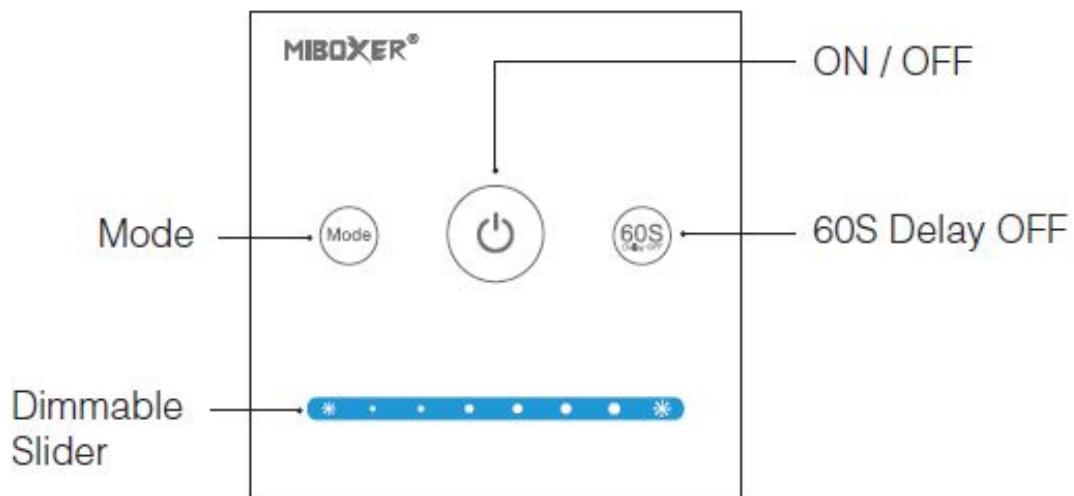

1. Short press ON / OFF switching
2. Long press to turn on night light while light is on.
3. Short press twice to enter the learning code state (see 5 for details) while light is on.
4. When the light is ON, Press “ ”, the light will be off automatically after 60 seconds.
5. When light is OFF, long press 5 seconds to turn ON the indicating sound.
6. Press mode shortly, switch to next mode. 9 modes switching. Long press “Mode” to exit dynamic mode.
7. When light is OFF, Long press 5 seconds to turn OFF the indicating sound.
8. Touch dimming slider to change the brightness from 1%~100%.

P2 Button Function

1. Short press ON / OFF switching
2. Long press to turn on night light while light is on.
3. Short press twice to enter the learning code state (see 5 for details) while light is on.
4. When the light is ON, press “ ”, the light will be off automatically after 60 seconds.
5. Press mode shortly, switch to next mode; 9 modes switching. Touch dimming slider to change the brightness from 1%~100%.
6. Touch CCT slider, change the color Temperature from 2700K-6500K.

Save1

1. Press “ Save1 ” shortly, select save1 mode; long press “ Save1 ”, save present mode to save1.
2. When light is OFF, long press 5 seconds to turn OFF the indicating sound.

Save2

1. Press “ Save2 ” shortly, select save2 mode; long press “ Save2 ”, save present mode to save2.
2. When light is OFF, long press 5 seconds to turn ON the indicating sound.

Link/Unlink

Compatible with these remote controls (Purchase separately)




FUT006




FUT007



FUT087

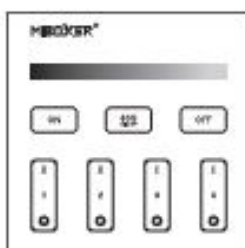

B1 / T1

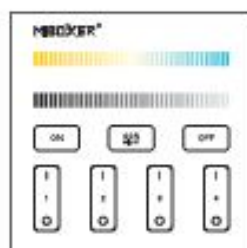

B2 / T2



WL-Box1


Caution! Light will work after linking with remote control; for more details, pls read the remote instruction.

P1 / P2 Dynamic Mode table

State	Number	Mode	Brightness
P1/P2 Dynamic Mode	1	Gradual change fast	Adjustable
	2	Gradual change in middle speed	
	3	Gradual change Slowly	
	4	Jump to change Fast	
	5	Jump to change in middle speed	
	6	Jump to change slowly	
	7	Blinks fast	
	8	Blinks in middle speed	
	9	Blinks slowly	

Remote control Link/Unlink

Support all remote control to do Link/Unlink (see 3 for details)

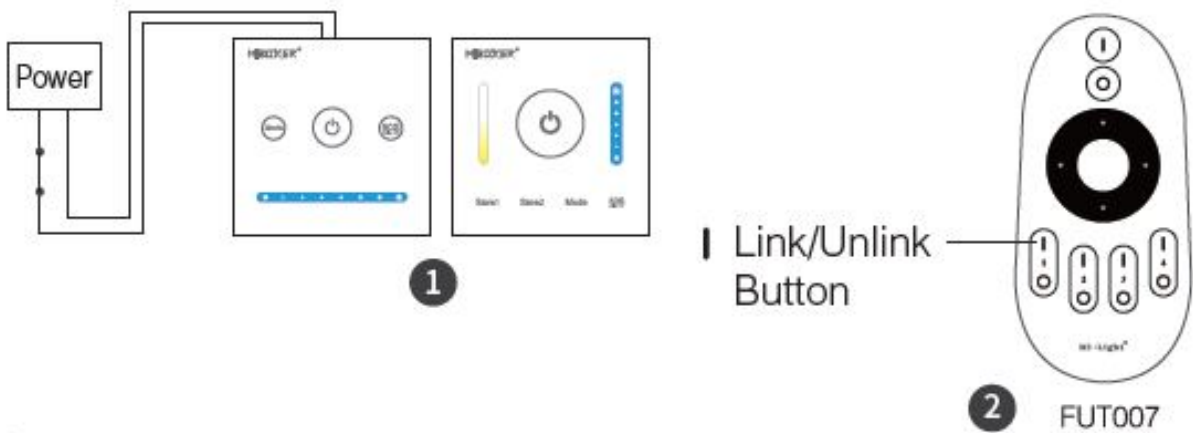

Link

Press " " **2 times continuously** when light is on Press the remote control within 3 seconds "I" key 3 times
The light blink 3 times slowly means the linking is done successfully

Unlink

Press " " 2 times continuously when light is on Press the remote control within 3 seconds " " key 5 times
The light blinking 10 times quickly means the unlinking successfully

Caution

If the link or unlink failed, please follow the above steps again.

Signal transmitting


One controller can transmit the signals from the remote control to another controller within 30m, as long as there is a controller within 30m, the remote control distance can be limitless.

Modes synchronization

Different controllers can work synchronously when they are started at different times, controlled by the same remote, under same dynamic mode and within 30m distance.

Caution

The same dynamic mode, the same speed can be synchronized.

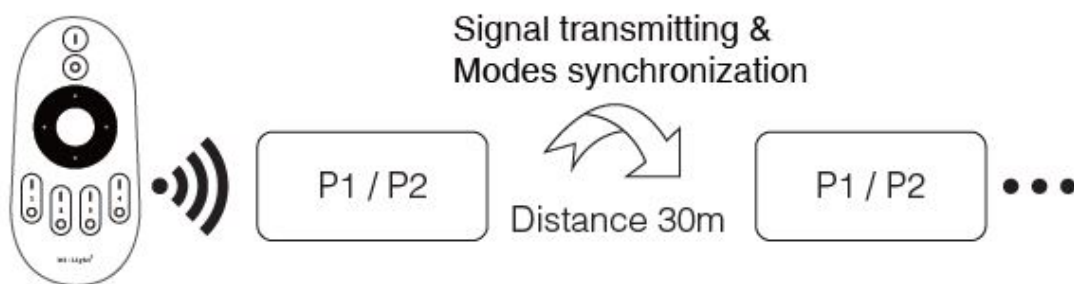

PWM high frequency / low frequency switching


Switch to high frequency (8KHz): on the condition of turning on the light

1. Short press the "OFF" button of the remote control once;
2. Short press the "ON" button of the remote control 5 times within 3 seconds, the white light blink 2 times quickly, indicating successfully.


Switch to low frequency (500Hz): on the condition of turning off the light

1. Short press the "ON" button of the remote control once;
2. Short press the "OFF" button of the remote control 5 times within 3 seconds, the white light blink 2 times slowly, indicating successfully.


Installation / Dismantlement

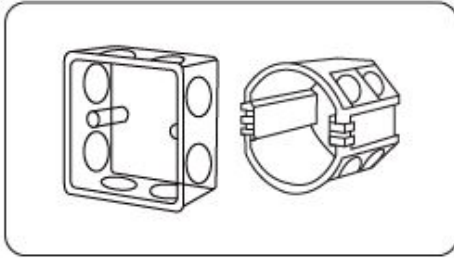


Install the bottom case into the wall;
Above are the standard bottom cases.

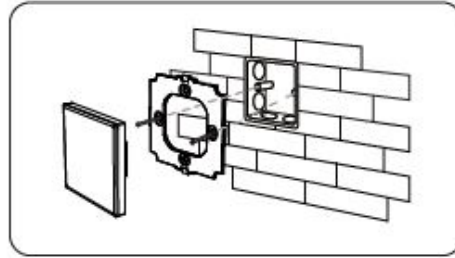

Fix the controller base on the bottom
case with screw.

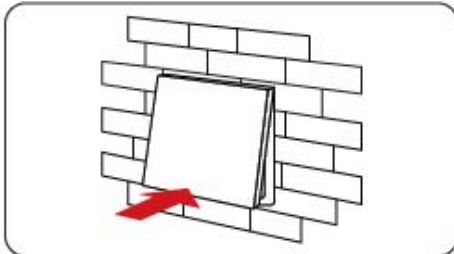

Clicks into the upper side of glass
panel on the controller base, then
press the lower side slightly to make
it clicks into the controller base.

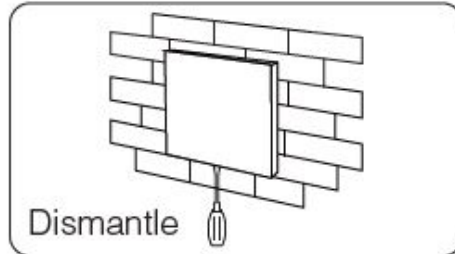

Dismantle


Plug into the below bayonet with a
screwdriver, and upwarp screwdriver,
then you can dismantle the controller.

- Install the bottom case into the wall; Above are the standard bottom cases.
- Fix the controller base on the bottom case with screw.
- Clicks into the upper side of glass panel on the controller base, then press the lower side slightly to make it clicks into the controller base.
- Plug into the below bayonet with a screwdriver, and upwarp screwdriver, then you can dismantle the controller.

Attention

1. Please check whether the voltage of the power supply is in accordance with the controller, and please check the connection of both the cathode and anode, otherwise the controller will be broken.
2. Please don't connect wires with power on. Please turn on again only when it is in right connection and no short circuit.
3. Please do not use the controller in the place with widely range metal area or strong electromagnetic wave nearby, otherwise,
the remote distance will be seriously affected .

Documents / Resources

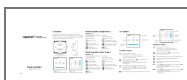

[MiBOXER P1 Panel Controller](#) [pdf] User Manual
P1, P2, Panel Controller