



MICKEY MOUSE MCH01i1 Mickey Challenge Instruction Manual

[Home](#) » [MICKEY MOUSE](#) » MICKEY MOUSE MCH01i1 Mickey Challenge Instruction Manual 

MICKEY MOUSE MCH01i1 Mickey Challenge



Contents

1 OVERVIEW

2 Directional keys

3 PACKAGING CONTENTS

4 BATTERY REQUIREMENTS

5 MAINTENANCE AND WARRANTY

 
6 Documents / Resources

6.1 References


7 Related Posts

OVERVIEW



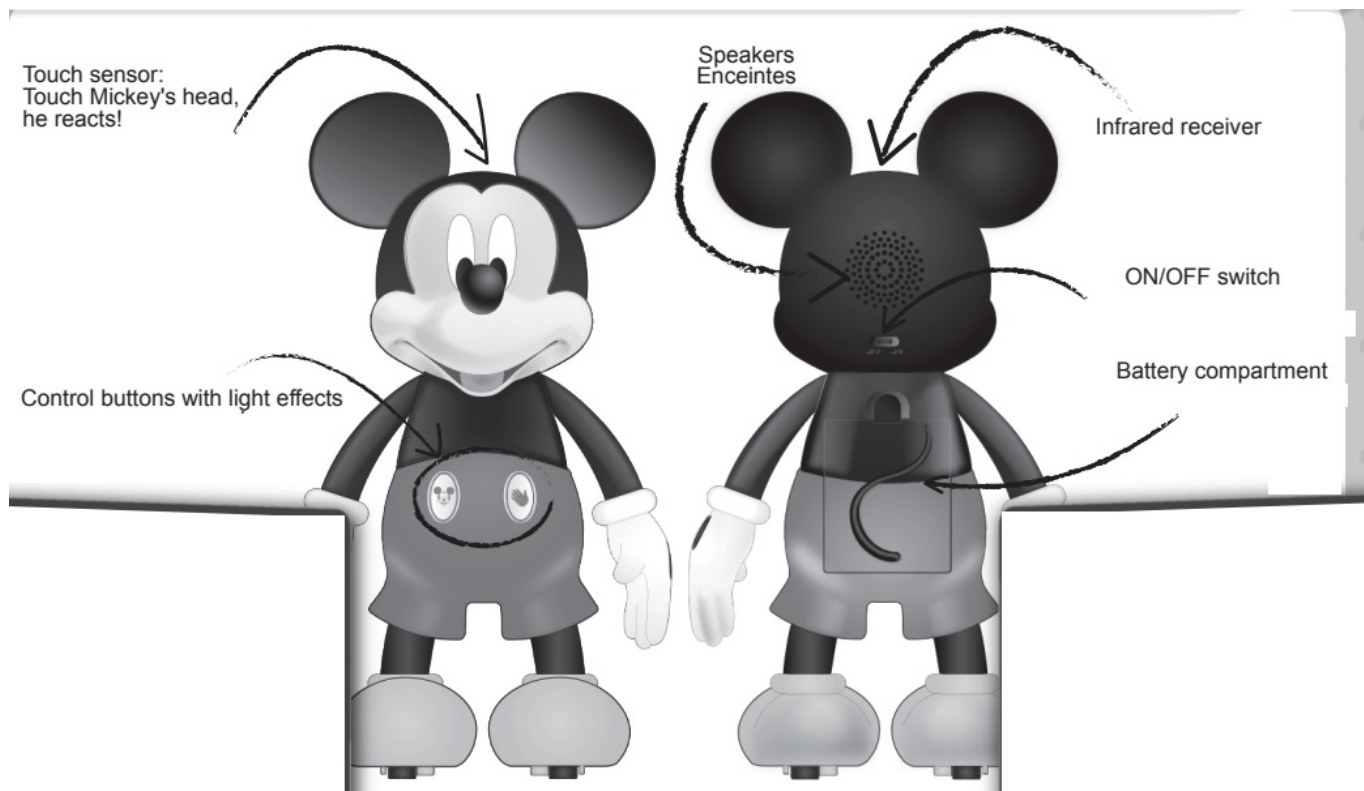

 Surprise sounds:
Press this button
to hear a surprise.
Sons surprises:

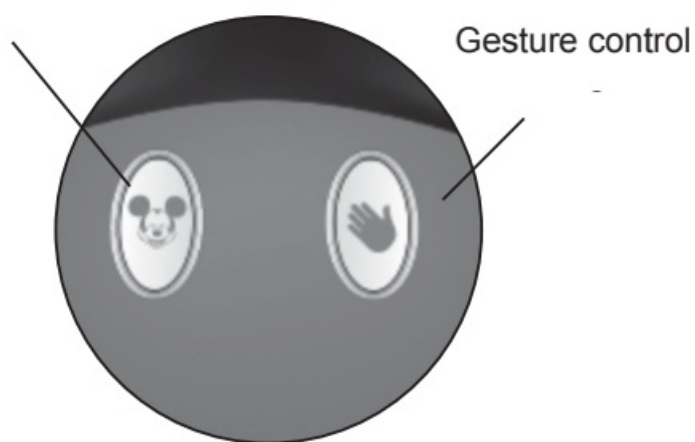

Directional keys



Press to have Mickey making a few steps, turning right and left.

Tip: Press forward / backward for 2 seconds to slide.

Press left / right for 2 seconds to spin around.

Volume



Press to change the volume Low ↔ Normal ↔ High

Stop



Press this key to stop any of Mickey's actions. If you don't press any button for some time, Mickey will go into sleep mode automatically to save power and so will the remote. To wake him up, press on one of the 2 buttons on Mickey's pants.

Sleep mode is suitable for short periods of time. If you don't plan to use the robot for a few hours or more, please use the ON/OFF switch.

Clap function / Language switch




Press to activate the "clap" function. Clap your hands and Mickey will start dancing. Press and hold this button to change the language.

Gesture control



Press this key and use gestures to control Mickey's movements

- Turn right: Swipe your hand just below the robot's belly from left to right – Mickey will turn toward the right.
- Turn left: Swipe your hand just below the robot's belly from right to left – Mickey will turn toward the left.
- Move forward: Swipe your hand from top to bottom in front the robot's belly, and then away from the robot – the robot will go forward.
- Move backward: Place your hand around 20cm in front of the robot's belly, below its chest, and bring your hand toward the robot and hold it there until it starts to move backward. To stop the gesture control function, simply press the button  again.

This function works better in a clear and luminous space with no obstacles.

Songs



Press once to play music, press again to play another music.


Dances




Press once to play a dance, press again to play another dance.

Programming





- Press  to create a program.
- Create your program by pressing the directional keys.



You can add music by pressing .

Press several times to select another melody.

- Once finished, save your program by pressing .
- At any moment, you can play your program by pressing .

Note: any new program or restart of the robot erase the current program

Quiz



Press this key, and Mickey will ask you questions to test your knowledge.
Answer using the numbers on the remote control.

- The Animal Quiz
- The Musical Instrument Quiz!
- The Location Quiz!
- The Math quiz!
- The Intruder Quiz!

Mickey's challenge !



Press this key to play « Mickey's challenge! » where Mickey will read your mind. Think about an animal and he will try to guess it!

Yes / No / I don't know



Press these buttons to answer in the « Mickey's challenge! » and « Quiz » modes.

PACKAGING CONTENTS

When opening the product's packaging, please ensure that the following elements are included:

- 1 x Mickey



- 1 x Remote control



 
- 1 x Instruction manual



BATTERY REQUIREMENTS


- **Robot**

The robot operates with 3 x 1.5V AA/LR6 batteries (not included)

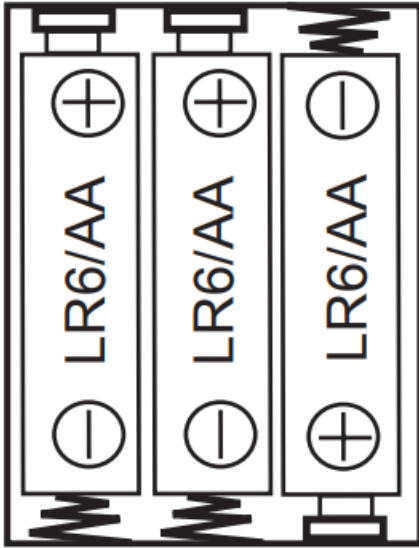

- **Remote control**

 The remote control operates with 2 x 1.5V AA/LR6 batteries (not included)

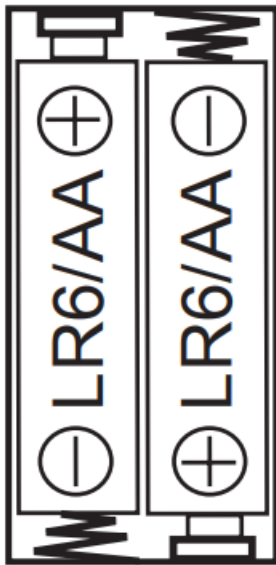

ROBOT :

Battery installation or replacement

1. Use a screwdriver to loosen the screw on the battery compartment located at the back of the robot
2. Install or replace 3 x AA/LR6 batteries, observing the polarity indicated at the bottom of the battery compartment, and as per the diagram shown opposite.
3. Close the battery compartment and tighten the screw

Remote control

Battery installation or replacement

1. Use a screwdriver to loosen the screw on the battery compartment located at the back of the remote control.
2. Install or replace 2 x AA/LR6 batteries, observing the polarity indicated at the bottom of the battery compartment, and as per the diagram shown opposite.

3. Close the battery compartment and tighten the screw

Note: Switch off the power before replacing batteries. Use only alkaline batteries, other type of batteries may affect the performance.

Non-rechargeable batteries are not to be recharged. Rechargeable batteries are to be removed from the toy before being charged. Rechargeable batteries are only to be charged under adult supervision. Different types of batteries or new and used batteries are not to be mixed. Only batteries of the same or equivalent type as recommended are to be used. Batteries are to be inserted with the correct polarity. Exhausted batteries are to be removed from the toy. The supply terminals are not to be short-circuited. Do not throw batteries into a fire. Remove the batteries if you are not going to use the toy for a long period of time. Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

WARNING : Malfunction or loss of memory may be caused by strong frequency interference or electrostatic discharge. Should any abnormal function occur, remove the batteries and insert them again.

MAINTENANCE AND WARRANTY

Only use a soft, slightly damp cloth to clean the unit. Do not use detergent. Do not to expose the unit to direct sunlight or any other heat source. Do not immerse the unit in water. Do not dismantle or drop the unit. Do not try to twist or bend the unit.

REMINDER: This product is covered by our 2-year warranty. For any claim under the warranty or after-sales service, please contact your distributor and present a valid proof of purchase. Our warranty covers any manufacturing material and workmanship defect, with the exception of any deterioration arising from the non-observance of the instruction manual or from any careless action implemented on this item (such as dismantling, exposing to heat and humidity, etc.). It is recommended to keep the packaging for any further reference. In a bid to keep improving our services, we could implement modifications on the colours and the details of the product shown on the packaging.

WARNING! Not suitable for children under 3 years.

Choking hazard – Small parts.

NOTE: Please keep this instruction manual, it contains important information.

Reference: MCH01i1

Designed and developed in Europe – Made in China

Lexibook S.A.
6 avenue des Andes
Bâtiment 11
91940 Les Ulis
France

Lexibook UK
PO Box 59
SOUTH MOLTON
EX36 9AU
UK

www.lexibook.com – © Lexibook®

For after-sales service, please contact us at savcomfr@lexibook.com

 
Suivez-nous



Environmental Protection:

Unwanted electrical appliances can be recycled and should not be discarded along with regular household waste! Please actively support the conservation of resources and help protect the environment by returning this appliance to a collection centre (if available).

Documents / Resources

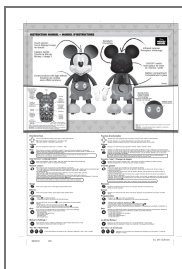

[MICKEY MOUSE MCH01i1 Mickey Challenge](#) [pdf] Instruction Manual
MCH01i1 Mickey Challenge, MCH01i1, Mickey Challenge, Challenge

References

- [Lexibook.com - Jouets éducatifs, tablettes et multimédia high-tech](#)
- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.