




MICMOL IMOS 4.0 Smart Controller User Manual

[Home](#) » [MICMOL](#) » MICMOL IMOS 4.0 Smart Controller User Manual 

Contents

 
- [1 ICMOL IMOS 4.0 Smart Controller](#)
- [2 OVERVIEW](#)
- [3 Smart Controller Menu Overview](#)
- [4 Quick Set](#)
- [5 Auto Mode](#)
- [6 Manual Mode](#)
- [7 Linkage Mode](#)
- [8 Expand](#)
- [9 Settings](#)
- [10 Default Settings](#)
- [11 Documents / Resources](#)
- [12 Related Posts](#)



ICMOL IMOS 4.0 Smart Controller



OVERVIEW

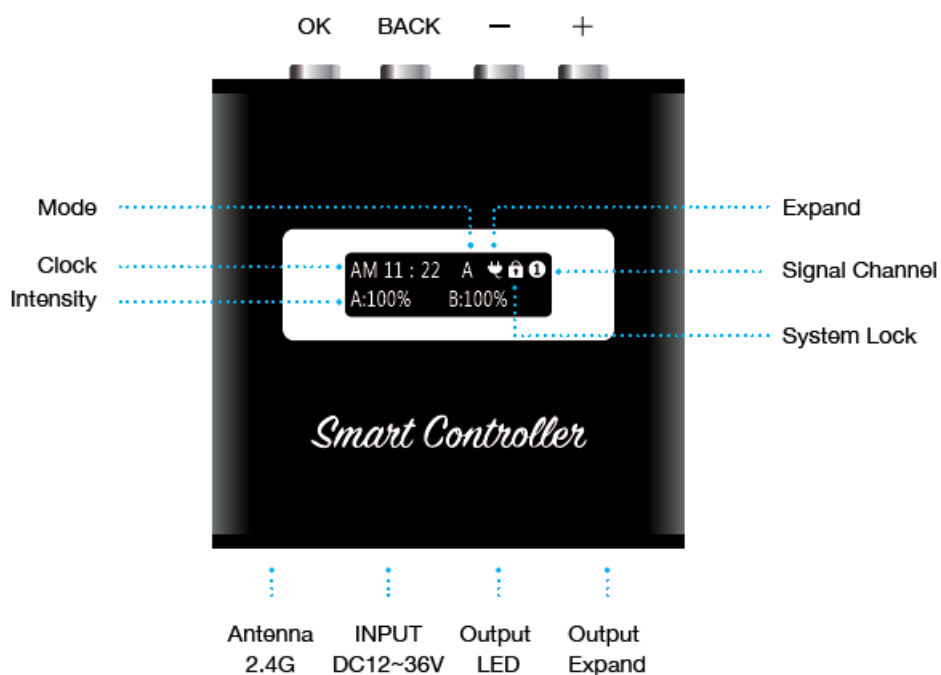

- **Special Function 1:** Press and hold "OK" for 3 seconds, while the unit is locked, to toggle between Auto & Manual Mode.
- **Special Function 2:** Press and hold "BACK" for 3 seconds to unlock or lock the controller.
- **Special Function 3:** Press and hold "OK" + "BACK" together to change the Receiver Mode.

Note: "A" = Auto Mode, "M" = Manual Mode, "A:100%" = Intensity for each Channels

"🔒" = Locked, "🔓" = Unlocked, "🔌" = Expand ON, "①" = Channel Signal.

Smart Controller Menu Overview

Quick Set
Auto Mode

Manual Mode
Broadcaster

Receiver
Expand

Settings

Quick Set

SPS - 20K
LPS - 15K

Mixed Reef
Green Planted

Red Planted
Mixed Planted

Refugium
DIY 1

There are 7 presents available to quickly setup your light. You may customize up to 3 presets with your own custom settings.

Auto Mode

CH-A CH-B
CH-C ALL Demo
Save Settings

↓
Dawn 08:00 AM Sunrise 10:00 AM Midday 12:00 PM Sunset 03:00 PM Dark 06:00 PM Night 08:00 PM
Intensity 000% Intensity 080% Intensity 100% Intensity 100% Intensity 080% Intensity 000%

Channels A, B, C and D have 6 time points and the intensity can be adjusted for each channel.

Note: If you select “ALL”, then all the channels will be overwritten with the new settings.

DEMO: The DEMO mode will run the current light settings in a 1 minute demonstration.

Save Settings: You can save your current settings to any of the 3 customized presets.

Manual Mode

A:100% B:100%
C:100% ALL

The Manual Mode will allow you to set the intensity from 1 to 100% for all or each individual channels

Linkage Mode

(Broadcaster – Receiver)

Broadcaster Receiver Signal Pairing CH 1 YES Pairing... → AM 11 : 22 A B:100% A:100%

- **Broadcaster (Parent):** When linking multiple units, assign one controller as the Broadcaster which will become the primary unit.
- **Signal:** Select a channel. Up to 9 channels can be selected and paired with multiple units to the same channel number

Note: Enabling the Broadcaster will display the channel signal number on the home screen.

Broadcaster Receiver Pairing Mode Pairing... → Receiver Paired CH 1

- **Receiver (Child):** Switch controller to receiver mode to set additional units that will connect to the primary Broadcaster unit.
- **Signal:** The controller's home screen will only show the "Receiver" and the paired channel number

Note: The 2.4G antenna signal covers up to 16 square feet (5 square meters) and may not be able to penetrate walls.

Expand



 
The Expand option (Plug icon) adds more flexibility to adapt with additional devices such as pumps, fans, valves etc..

The timers in the expand mode can turn ON/OFF, adjust the power to the speed of the fan, the intensity for the lights or power for the valve

Settings

- **Set Clock:** Set the controller to your local time
- **Languages:** Two languages are available in "English" or "Chinese"
- **24 HOUR:** You can toggle between 24 HOUR or AM/PM mode
- **Factory Reset:** Reset all settings to factory default settings

24 Hours Lighting Cycle Overview

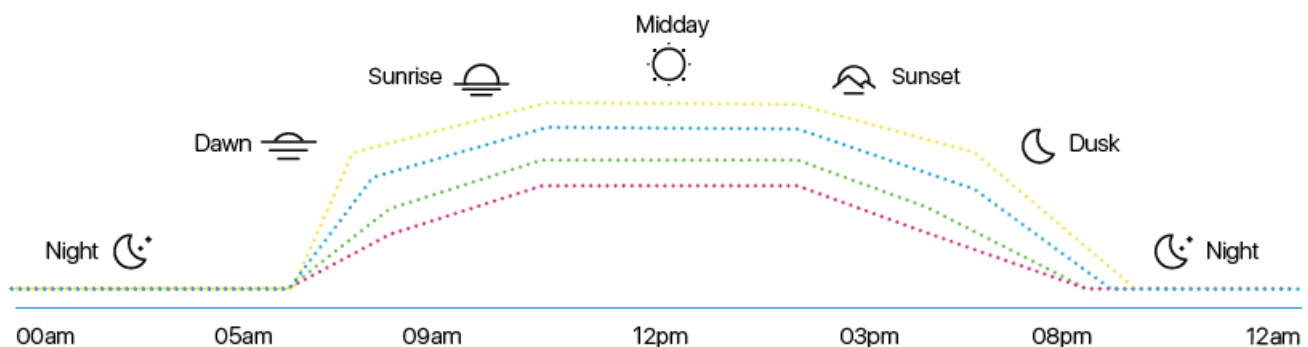


The smart controller gradually ramps the light intensity between the set points


The graph below outlines how the LEDs will ramp up and down between the settings

Default Settings

Default Settings						
	Dawn	Sunrise	Midday	Sunset	Dusk	Night
Channel A	0% @ 6:00AM	1% @ 8:00 AM	75% @ 12:00 PM	75% @ 5:00 PM	1% @ 8:00 PM	0% @ 10:00 PM
Channel B	0% @ 6:00AM	1% @ 7:00 AM	75% @ 12:00 PM	75% @ 5:00 PM	1% @ 8:00 PM	0% @ 10:00 PM
Channel C	0% @ 6:00AM	1% @ 8:00 AM	75% @ 12:00 PM	75% @ 5:00 PM	1% @ 8:00 PM	0% @ 10:00 PM
Channel D	0% @ 6:00AM	1% @ 8:00 AM	75% @ 12:00 PM	75% @ 5:00 PM	1% @ 8:00 PM	0% @ 10:00 PM

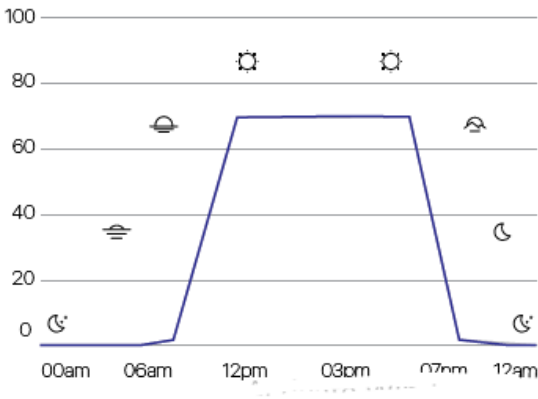 

Documents / Resources

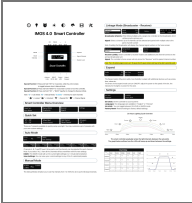

[MICMOL IMOS 4.0 Smart Controller](#) [pdf] User Manual
IMOS 4.0 Smart Controller, IMOS 4.0, Smart Controller, Controller