



Microsemi FlashPro Lite Device Programmer User Guide

[Home](#) » [Microsemi](#) » Microsemi FlashPro Lite Device Programmer User Guide 

Microsemi FlashPro Lite Device Programmer



Contents

- 1 Kit Contents
- 2 Software Installation
- 3 Hardware Installation
- 4 Common Issues
- 5 Documentation Resources
- 6 Technical Support and Contacts
- 7 Documents / Resources
 - 7.1 References

Kit Contents

This quickstart card applies only to the FlashPro Lite device programmer.

Quantity	Description
1	FlashPro Lite programmer standalone unit
1	Ribbon cable for FlashPro Lite
1	IEEE 1284 parallel port cable

Software Installation

If you are already using Libero® System-on-Chip (SoC) software, you have the FlashPro software installed as part of this software. If you are using the FlashPro Lite device programmer for standalone programming or on a dedicated machine, download and install the latest release of the FlashPro software from the Microsemi SoC Products Group website. The installation will guide you through the setup. Complete the software installation before connecting the FlashPro Lite device programmer to your PC. The installation will ask you “Will you be using FlashPro Lite or FlashPro programmer via parallel port?”, answer “Yes”.

Software releases: www.microsemi.com/soc/download/program_debug/flashpro.

Hardware Installation

1. Connect the programmer to a parallel printer port on your PC. Connect one end of the IEEE 1284 cable to the programmer’s connector. Plug the other end of the cable into your parallel printer port and tighten the screws. You should not have any licensing dongles connected between the parallel port and cable. Your port settings must be EPP or bidirectional. Microsemi also supports ECP mode with FlashPro v2.1 software and newer.
2. Verify that you are connected to the correct parallel port on your computer. Microsemi recommends that you dedicate a port to the programmer. Connecting to a serial port or a third-party card can damage the programmer. This type of damage is not covered by the warranty.
3. Connect the FlashPro Lite ribbon cable to the programming header and turn the target board on.

Common Issues

If you see two blinking LEDs on the programmer after you have connected the programmer to the parallel port, make sure the parallel port cable is connected firmly to the PC parallel port. For more information, refer to the FlashPro Software and Hardware Installation Guide and the “Known Issues and Workarounds” section of the FlashPro software release notes:

www.microsemi.com/soc/download/program_debug/flashpro.

Documentation Resources

For further FlashPro software and FlashPro Lite device programmer information, including user’s guide, installation guide, tutorial, and application notes, refer to the FlashPro software page:

www.microsemi.com/soc/products/hardware/program_debug/flashpro.


Technical Support and Contacts

Technical support is available online at www.microsemi.com/soc/support and by email at soc_tech@microsemi.com.

Microsemi SoC Sales offices, including Representatives and Distributors, are located worldwide. To find your local representative visit www.microsemi.com/soc/company/contact.



Documents / Resources

	<p>Microsemi FlashPro Lite Device Programmer [pdf] User Guide</p> <p>FlashPro Lite Device Programmer, FlashPro Lite, FlashPro Lite Programmer, Device Programmer, Programmer</p>
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.