Midea BL1189CEE-**MP01S Personal Blender**





Midea BL1189CEE-MP01S Personal Blender User Manual

Home » Midea » Midea BL1189CEE-MP01S Personal Blender User Manual



Contents

- 1 Midea BL1189CEE-MP01S Personal
- Blender
- **2 SAFETY INSTRUCTIONS**
- **3 IMPORTANT SAFEGUARDS**
- **4 SPECIFICATIONS**
- **5 PRODUCT OVERVIEW**
- **6 INSTRUCTIONS FOR USE**
- 7 Banana smoothie
- **8 CLEANING AND MAINTENANCE**
- 9 TROUBLESHOOTING
- 10 ABNORMALITY ANALYSIS AND HANDING
- 11 WARRANTY / SERVICE
- 12 DISPOSAL AND RECYCLING
- 13 Package information
- 14 DATA PROTECTION NOTICE
- **15 FAQ**
- 16 Documents / Resources
 - 16.1 References
- 17 Related Posts



Midea BL1189CEE-MP01S Personal Blender



THANK YOU LETTER

Thank you for choosing Midea! Before using your new Midea product, please read this manual thoroughly to ensure that you know how to operate the features and functions that your new appliance offers in a safe way.

SAFETY INSTRUCTIONS

Intended Use

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance. Please check the packaging and appliance on arrival to make sure everything is intact to ensure safe operation. If you find any damage, please contact the retailer or dealer. Please note modifications or alterations to the appliance are not allowed for your safety concern. Unintended use may cause hazards and loss of warranty claims.

Explanation of Symbols

Danger This symbol indicates that there are dangers to the life and health of persons due to extre mely flammable gas.

Warning of electrical voltage This symbol indicates that there is a danger to life and health of per sons due to voltage.

Warning The signal word indicates a hazard with a medium level of risk which, if not avoided, may r esult in death or serious injury.

Caution The signal word indicates a hazard with a low degree of risk which, if not avoided, may r esult in minor or moderate injury.



Attention The signal word indicates important information (e.g. damage to property), but not danger.

Observe instructions This symbol indicates that a service technician should only operate and maintain this appliance in accordance with the operating instructions.

Read these operating instructions carefully and attentively before using/commissioning the unit and keep them in the immediate vicinity of the installation site or unit for later use!

IMPORTANT SAFEGUARDS

Safety Instructions

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
- Always disconnect the blender from the supply if it is left unattended and before assembling, disassembling or cleaning.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience

and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.

- Children shall not play with the appliance.
- Do not use outdoors.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- WARNING: Misuse may cause potential injury.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.


SPECIFICATIONS

Product Model	BL1189CEE-MP01S
Rated voltage	220-240V~
Rated frequency	50-60Hz
Rated power	600W

PRODUCT OVERVIEW

Part Name



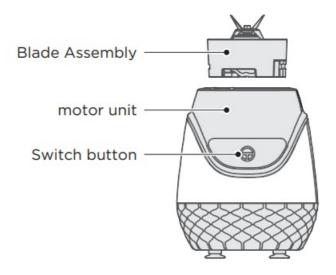

INSTRUCTIONS FOR USE


Fill the bottle with your favorite ingredients.
 Be sure not to fill ingredients over the 600mL marking.




2. Fasten the blade assembly on the open end of the bottle.



3. Turn the bottle upside down, line up arrow "▲"on the blade assembly to the lock " on the base, place the bottle in the base by pressing and simply turn the bottle clockwise to lock " on the base.

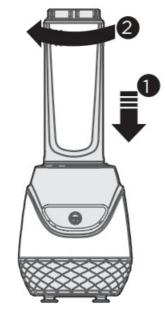


4. Place the blender base on a flat surface and plug in it. Pressing switch button, the blender will start to work, release switch button to stops working.

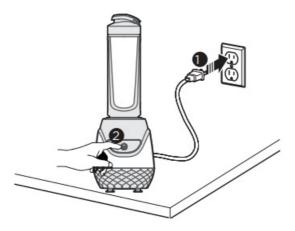

5. After the ingredients are fully blended, stop the blender working, and turned counterclockwise rotation the bottle, take out the bottle form the base.



6. Remove the blade unit and screw on the lid.

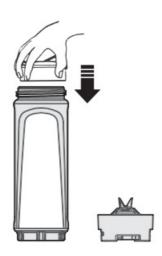

Warning


- Rotating blades can cause severe injury.
- Lids are not interchangeable between different container styles, types, and sizes.
- Machine running time can not be more than 3 minutes. After the shutdown, it is necessary to let it fully heat, cooling to room temperature.

RECIPES

Item	Food	Quantity	Time
1	Carrot juiceJar capacity 600 mL	240g carrot + 360g water	1 mins
2	Crushing ice cubes and wat er	250g 20mm diameter ice cubes 250g ambi ent water	1 mins
3	Pineapple smoothie	154g pineapple, skin removed diced, 300m L milk3pcs ice cubes	15 seconds
4	Kiwi smoothie	168g kiwi, peeled diced 3pcs ice cubes, 30 0mL milk	15 seconds
5	Banana smoothie	1/2 banana, halved 250mL milk1 scoop ice cream 1t bsp honey	15 seconds

CLEANING AND MAINTENANCE

Cleaning

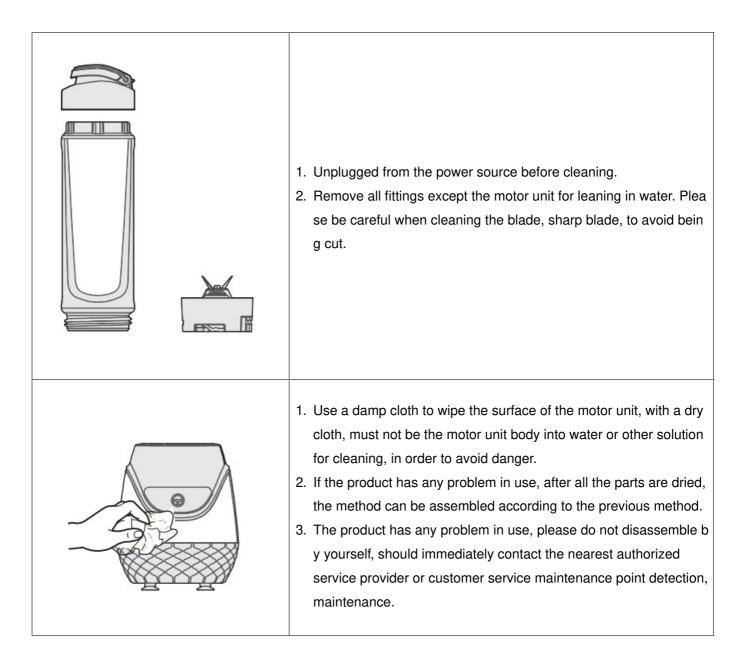

TROUBLESHOOTING

Operation of your appliance can lead to errors and malfunctions. The following tables contain possible causes and notes for resolving an error message or malfunction. It is recommended to read the tables carefully below in order to save your time and money that may cost for calling to the service center.

Fault Analysis and Elimination

Symptom	Analysis of Possible Causes	Countermeasure
Product does not w ork	The jar assembly is not installed in place.	The jar assembly must be closed in place.
	The inching switch is not presse d.	Keep the switch press states.
Blender blade stuck	The amount of processed food i s too much.	Reduce the amount of processed food.
	Food sticking the blade.	Switch off electrical power if clean up the ingredients on the clean blade.
The Products found abnormal odor, hot, smoke and other phenomena	The amount of processed food i s too much.	Reduce the amount of processed food.
	The product running times too I ong.	Reduce the motor running times.
	The temperature of the process ed ingredients is too high.	Do not exceed 60°C.
Jar drain juice (wat er)	The blade holder seal is missing or not properly mounted on the tool holder assembly.	Check the blade holder seal states.
	The jar is screwed into the blad e holder assembly without tighte ning.	Check the jar whether on ttightening.
	The jar is screwed into the jar c over without tightening.	Check the jar whether on ttightening

ABNORMALITY ANALYSIS AND HANDING

Abnormality Handling

- 1. In case of abnormalities such as abnormal noises, smell, smoke, etc., you should immediately cut off power and stop use.
- 2. If the product cannot work, please check if the power supply is connected, if the switch is put to the ON position and if fittings are installed in place.
- 3. If the product still cannot work after checks mentioned above, please consult the designated repair centre for maintenance.

TRADEMARKS, COPYRIGHTS AND LEGAL STATEMENT



logo, word marks, trade name, trade dress and all versions there of are valuable assets of Midea Group and/or its affiliates ("Midea"), to which Midea owns trademarks, copyrights and other intellectual property rights, and all goodwill derived from using any part of an Midea trademark. Use of Midea trademark for commercial purposes without the prior written consent of Midea may constitute trademark infringement or unfair competition in violation of relevant laws. This manual is created by Midea and Midea reserves all copyrights thereof. No entity or individual may use, duplicate, modify, distribute in whole or in part this manual, or bundle or sell with other products without the prior written consent of Midea. All the described functions and instructions were

up to date at the time of printing this manual. However, the actual product may vary due to improved functions and designs.

WARRANTY / SERVICE

Congratulations to your new product. We hope that you will enjoy it.

If you should have any reason for complaint, please contact our customer service at:

• Midea Europe GmbH Ludwig-Erhard-Str. 14 65760 Eschborn

Tel.: 06196-90 200Fax: 06196-90 20 -120

• E-Mail: kundenservice@midea.com Homepage: www.midea.com/de

Im Servicefall:

• Tel.: 06196-90 20 - 0

• Fax: 06196-90 20 -120 kundenservice@midea.com

In case of malfunction, please provide your correct address, phone number, number of purchase agreement, type of device, serial no. (on the rating plate of your product), and a short description of the fault. This device has been manufactured and tested according to the latest methods. Regard- warranty on material and workmanship for a period of 36 months (or 12 months for commercial use) starting from the day of purchase. A warranty claim will be void in case of any intervention by the seller or third party. The warranty does not cover damage caused by improper handling or use, incorrect assembly or storage, improper installation or connection, force majeure, or any other external factors. In case of warranty claims, we reserve the right to repair or replace any defect part or to replace the whole product. Parts or devices replaced will become our property. If the use intended by the manufacturer cannot be achieved by repair/s or replacement of a device, only then and within 6 months starting from the day of purchase may the purchaser under warranty request a reduction of the purchase price or cancellation of the purchase agreement. Any claims for damages, including consequential damages, are excluded, provided they are not the result of intent or gross negligence. The purchaser must proof a warranty claim by presenting the purchase receipt. This warranty is applicable within the Federal Republic of Germany.

DISPOSAL AND RECYCLING

Important instructions for environment

- Compliance with the WEEE Directive and Disposing of the Waster Product:
- This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waster electrical and electronic equipment (WEEE).

This symbol indicates that this product shall not be disposed with other household wastes at the end of its service life. Used device must be returned to official collection point for recycling of electrical electronic devices. To find these collection systems please contact to your local authorities or retailer where the product was purchased. Each household performs important role in recovering and recycling of old appliance. Appropriate disposal of used appliance helps prevent potential negative consequences for the environment and human health.

Compliance with RoHS Directive

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

Package information

Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

DATA PROTECTION NOTICE

For the provision of the services agreed with the customer, we agree to comply without restriction with all stipulations of applicable data protection law, in line with agreed countries within which services to the customer will be delivered, as well as, where applicable, the EU General Data Protection Regulation (GDPR). Generally, our data processing is to fulfil our obligation under contract with you and for product safety reasons, to safeguard your rights in connection with warranty and product registration questions. In some cases, but only if appropriate data protection is ensured, personal data might be transferred to recipients located outside of the European Economic Area. Further information are provided on request. You can contact our Data Protection Officer via MideaDPO@midea.com. To exercise your rights such as right to object your personal date being processed for direct marketing purposes, please contact us via EN MideaDPO@midea.com. To find further information, please follow the QR Code.

FAQ

Q: Can I blend hot liquids in this personal blender?

A: It is not recommended to blend hot liquids in this blender to avoid potential hazards.

· Q: How do I clean the blender blades?

A: To clean the blender blades, detach them from the jar and wash them carefully with warm soapy water, ensuring not to cut yourself on the sharp edges.

· Q: Can I use ice cubes in this blender?

A: Yes, you can use ice cubes in the blender, but make sure not to overload the jar beyond the maximum capacity to prevent damage to the blades or motor.

Documents / Resources



Midea BL1189CEE-MP01S Personal Blender [pdf] User Manual BL1189CEE-MP01S Personal Blender, BL1189CEE-MP01S, Personal Blender, Blender

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.