




Midea MAD22C1AWS Dehumidifier with Auto Restart Instruction Manual

[Home](#) » [Midea](#) » Midea MAD22C1AWS Dehumidifier with Auto Restart Instruction Manual



**Midea Energy Star Dehumidifier with Auto Restart
INSTRUCTION MANUAL**

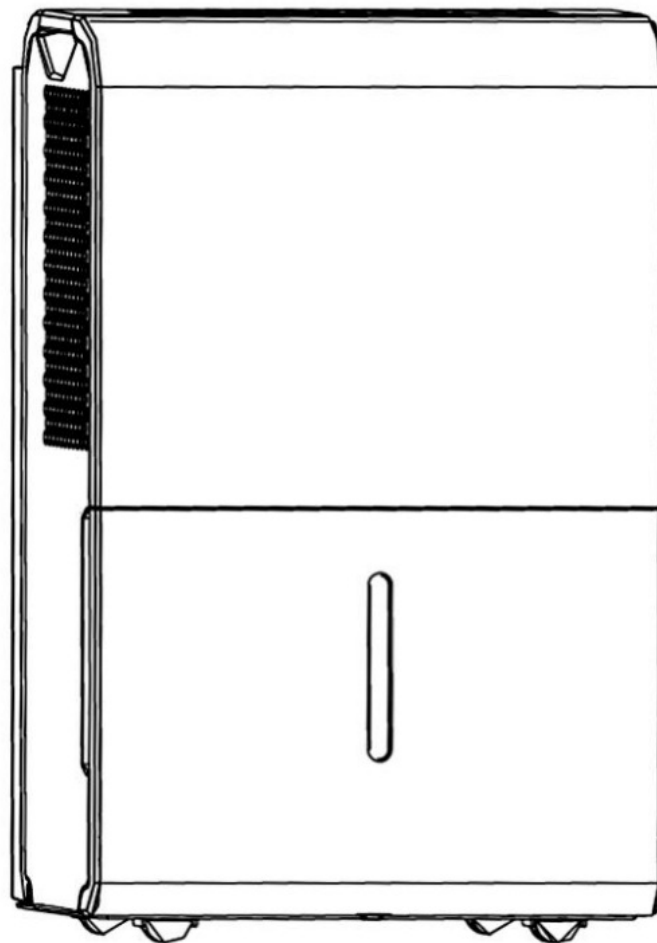

Contents [[hide](#)]

- [1 DISPOSAL INFORMATION](#)
- [2 SAFETY PRECAUTIONS](#)
- [3 INTRODUCTION](#)
- [4 PARTS AND CONTROLS](#)
- [5 OPERATION INSTRUCTIONS](#)
- [6 WATER DRAINAGE INSTRUCTIONS](#)
- [7 MAINTENANCE](#)
- [8 TIPS ON WHEN TO USE YOUR PORTABLE DEHUMIDIFIER](#)
- [9 TROUBLESHOOTING](#)
- [10 Documents / Resources](#)
- [11 Related Posts](#)

DISPOSAL INFORMATION

Thank you for choosing this Dehumidifier. Please follow the instructions provided in this user guide to obtain the very best performance from your dehumidifier.

Please keep this user manual in a safe place for future reference.



This symbol on the product or its packaging indicates that the appliance cannot be treated as normal domestic trash, but must be handed in at a collection point for recycling electric and electronic appliances. Your contribution to the correct disposal of this product protects the environment.

Further information about the recycling of this product can be obtained from your local municipal authority.

SAFETY PRECAUTIONS

WARNING	TO REDUCE THE RISK OF ELECTRICAL SHOCK, DISCONNECT THE POWER CORD FROM THE WALL OUTLET BEFORE REMOVING THE COVER.
----------------	---

- Read all instructions before using the appliance.
- Never clean appliance parts with flammable fluids. The fumes can create a fire hazard. Do not use an excessively
- Do not store or use gasoline or any other flammable vapors and liquids in the vicinity of this or any other appliance.
- Do not abuse, sit on, or stand on the appliance.
- This appliance is not intended for use by persons (including children with reduced physical, sensory or mental supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the power cord is damaged, it must be replaced by the manufacturer or its service agent, or a similarly qualified
- Please dispose of packing materials properly.
- Use the portable dehumidifier only for its intended function. This appliance is designed for household, noncommercial
- To avoid the risk of shock, the product should never be used in bathrooms, shower rooms, or in any other steamy
- During installation, the power supply must not be excessively or dangerously bent or flattened.
- Do not tamper with controls.
- Make sure the power plug is placed fully and firmly into the wall socket. If the wall receptacle you intend to use is not a qualified electrician install an outlet that is appropriate to local electrical codes and requirements.
- Do not use multiple sockets or an extension cord as it may overheat and become a risk of fire.
- Make sure the power plug is clean before usage.
- Do not turn this appliance on and off by plugging and unplugging. Always use the ON/OFF switch.
- After turning the appliance off, please take the power plug out of the socket.
- Make sure hands are dry when connecting the power plug. The appliance is equipped with a three-prong ground repair the power plug
- Do not repair, disassemble and/or modify the appliance by yourself.
- Always turn off the appliance when cleaning the air filter, and transporting.
- At the end of each season, all water must be drained from the appliance and the air filter must be cleaned before
- Do not drink or use the water collected or drained from the appliance.
- Do not remove the drain bucket during operation.
- Transport the appliance in an upright position only, or leave it in an upright position for at least 2 hours before first
- When positioning or moving the appliance, ensure that it is not turned upside down or greater than 45° or more
- This appliance must be installed in an area protected from the element, such as wind, rain, water spray, or drips.
- Always place the appliance on an even and hard and level surface that can support the unit when it is full of water
- Ensure objects are not obstructing the exhaust and air intake.
- Never insert your fingers or other objects into the air intakes and air outlets.
- Do not operate the appliance without the air filter.

THE MANUFACTURER DISCLAIMS ANY RESPONSIBILITY IF THE ABOVE INSTRUCTIONS ARE NOT FOLLOWED

INTRODUCTION

How it Works


When the dehumidifier is started, the fan begins to pull moisture-laden air across the dehumidifying coils. The coils condense or draw moisture from the air, and air flows through the top louver into the room as dry, warm air. Moisture removed from the air is collected in a drain bucket on the front of the dehumidifier.

The appliance is designed to operate between 41°F (5°C), and 96°F (35°C). The “Compressor” circuit has an

automatic 3-minute time delayed start if the appliance is turned off and on quickly. This prevents overheating of the compressor and possible circuit breaker tripping. Make sure the drain bucket is fitted correctly otherwise the appliance will not turn on.


- Do not cover the air intake and outlet.
- Do not place the appliance in front of curtains or drapes – to ensure they do not obstruct the air intake.
- Keep curtains, blinds or drapes closed during the sunniest part of the day.
- Close all windows and doors.
- Indoor relative humidity should ideally be kept between 35%RH and 60%RH depending on the ambient temperature.
- Make sure the appliance is on a hard and level surface.
- To prolong the compressor's life, please wait at least 3 minutes before turning the appliance back on after shutting it off.
- Inspect and keep the air filter clean by cleaning regularly.
- Perform routine maintenance.

PARTS AND CONTROLS

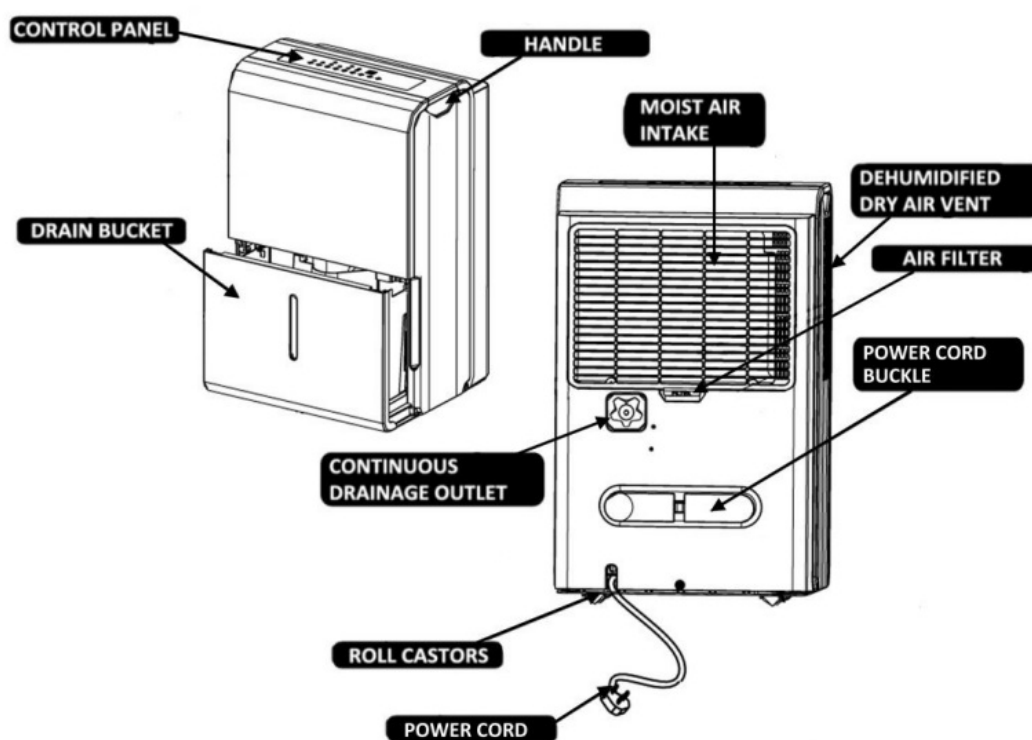


Power Cord Buckle Installation

For easy storage, install the power cord buckle to the rear of the unit. Once installed, the power cord can be wrapped using the buckle for safe storage.

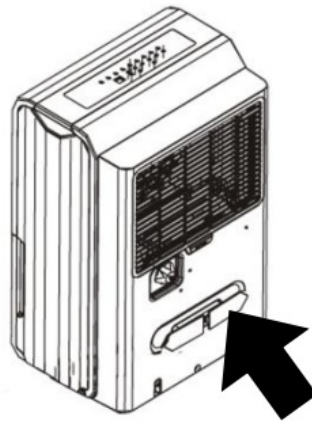

PARTS AND CONTROLS (images may vary depending on the model)

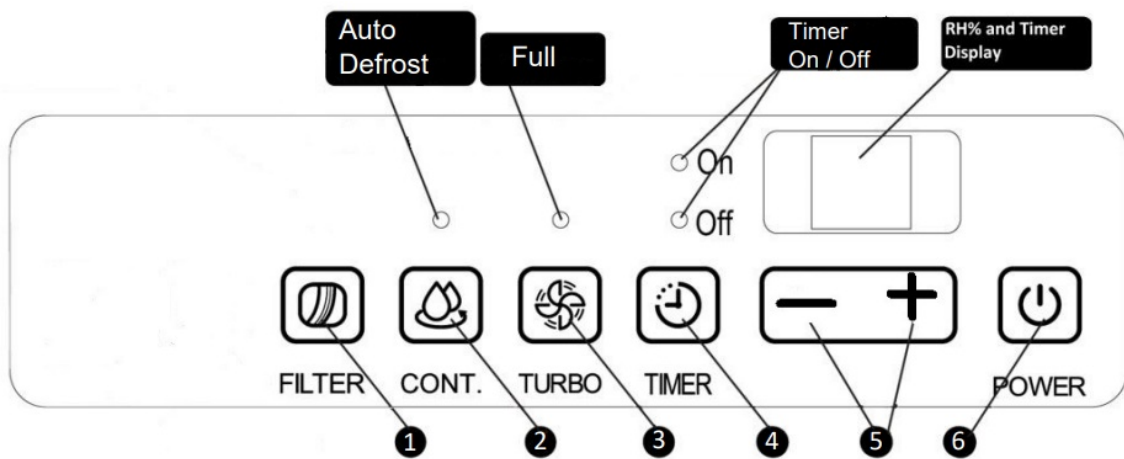

1. Filter Button

The check filter indicator is a reminder to clean the air filter for more efficient operation. The filter light will illuminate after approximately 250 hours of operation. To reset after cleaning the filter, press the Filter button and the light will turn off.

2. Continuous Button

Press to activate the Continuous dehumidifying operation. The Continuous indicator light will come on when this mode is selected. To stop continuous operation, press the Continuous (CONT.) Button and set the desired RH percentage value to resume normal operation.

Note: The Humidity Set Control Buttons will be disabled. The compressor will not stop unless the drain bucket is full, or removed.

3. Turbo Button

Press the Turbo button to engage Turbo Fan mode. Press the Turbo button again to set the unit to Normal Fan mode is activated.

PARTS AND CONTROLS

4 Timer Button

Press to activate the Timer delay feature, in conjunction with the Timer Control Buttons.

- **Timer Delay Switch Off**

When the appliance is ON, press the Timer button to activate the Auto-stop function, and the Timer OFF light

will come on. Set the desired time delay OFF hours by pressing the ◀ and ▶ buttons. The time increments are 1 hour up to 24 hours. When the delay time set has elapsed, the appliance switches off. To cancel the delayed switch-off function, set the time to "00" or turn off the appliance.

- **Timer Delay Switch On**

When the appliance is OFF, press the Timer button to activate the Auto-start function, and the Timer ON light will come on. Set the desired time delay ON hours by pressing the ◀ and ▶ buttons. The time increments are 1 hour up to 24 hours. When the delay time set has elapsed, the appliance turns on. To cancel the delayed switch-on function, set the time to "00" or turn off the appliance.

- **Timer Delay Switch On and Off Sequence**

When the appliance is OFF, press the Timer button to activate the Auto-start function and the Timer light ON will come on. Set the desired time delay ON hours by pressing the ◀ and ▶ buttons. Once Timer Delay Switch On is placed, press the Timer button again to activate the Auto-stop function, and the Timer OFF light will come on. Set the desired time delay OFF hours by pressing the ◀ and ▶ buttons. When the delay time set has elapsed, the appliance switches off. To cancel the delayed switch-off function, set the time to "00" or turn off the appliance.

- **5 Humidity / Timer Control Bottom**

- **Humidity Set Control Buttons**

The humidity level can be set within a range of 35%RH(Relative Humidity) to 85%RH in 5% increments. For lower humidity levels, press the ◀ button and set it to a lower RH percentage value. For higher humidity levels, press the ▶ button and set it to a higher RH percentage value. Once the RH% is set, the set RH% will stay on the display for about 5 seconds then it will revert back to the current RH%.

- **Timer Set Control Buttons**

If Timer Button is pressed, use the ◀ and ▶ buttons to set the Auto Start and Auto Stop time from 0.0 hours to 24 hours.

6. Power Button

Press to turn the dehumidifier on and off

Energy Saver

When the unit is running on normal operation, once the RH% is reached, the fan will still run continuously to avoid high start-up amperage which makes the unit energy-efficient. Please note that the fan may run continuously or shut off intermittently depending on the RH% and set humidity.

PARTS AND CONTROLS

Bucket Full Indicator

The appliance will run continuously until the set RH% is reached or when the drain bucket is full. When the drain bucket is full, the Full indicator light will illuminate and the dehumidifier will stop operating. Remove the water in the bucket with two hands, then place the drain bucket back to it's proper position and the machine will start operating again.

Auto Defrost Indicator

In the event frost builds up on the evaporator coils, the compressor will cycle off and the fan will continue to run until the frost is evaporated. This happens when the appliance is operating in low temperatures (less than 53°F or 12°C), which affects the efficiency of the dehumidifier. When this happens, the Auto Defrost light will turn on and the machine will go into periodic defrost mode automatically.

Defrost time may vary. If the dehumidifier freezes up, turn the appliance off for a few hours and then restart. The appliance will not operate satisfactorily if the room temperature is below 41°F

Display

The display screen shows a number of different indications depending on the selection function.

- Shows the set % relative humidity level from 35%RH to 85%RH.
- Once the RH% is set, the set RH% will stay on the display for about 5 seconds then it will revert back to the current RH%.
- Shows Auto Start and Auto Stop time from 0.0 hours to 24 hours.
- After the option settings are completed, the display shows the approximate room humidity level in a range of 30%RH (Relative Humidity) to 90%RH.

Error Codes and Protection Code	
AS – Humidity Sensor Error	Unplug the unit and plug it back in.
ES – Temperature Sensor Error	Unplug the unit and plug it back in.
P2 – Drain Bucket Full	Empty the drain bucket. Please make sure the float moves freely and is not stuck.
EC – Unit Malfunction	Please make sure that the environment temperature is between 41°F (5 °C), and 96°F (35°C).
E3 – Unit Malfunction	Unplug the unit and plug it back in.
Eb – Drain Bucket Error	The drain bucket is removed or not positioned correctly. Make sure that the drain bucket is properly installed and in the right position.

Auto Restart

In the event of a power outage, the appliance restarts at the previously set function mode and settings when power is restored (not applicable to Timer Function).

OPERATION INSTRUCTIONS

AIR FILTERS INSTALLATION

Your portable dehumidifier is equipped with a 2-in-1 silver-coated washable pre-filter combo. This washable pre-filter removes large particles such as dust, pet hair, and dander. The silver coating is designed to kill bacteria in the air and control the growth of microbes, such as viruses, fungi, and spores.

WARNING: NEVER OPERATE THE DEHUMIDIFIER WITHOUT THE FILTER

START OPERATION

1. Ensure that the appliance is connected to the power socket.
2. Make sure the drain bucket is placed in the proper position.
3. Make sure the filter is installed. (Fig. 1)
4. When the unit is turned on for the first time, if the bucket full lamp lights up, just pull out the drain bucket and then push it back to the proper position. (Fig. 2)
5. Set the relative humidity level RH% by pressing the ◀ and ▶ buttons. We recommend setting the RH% to at least 10% lower than the current RH%.

Fig. 1



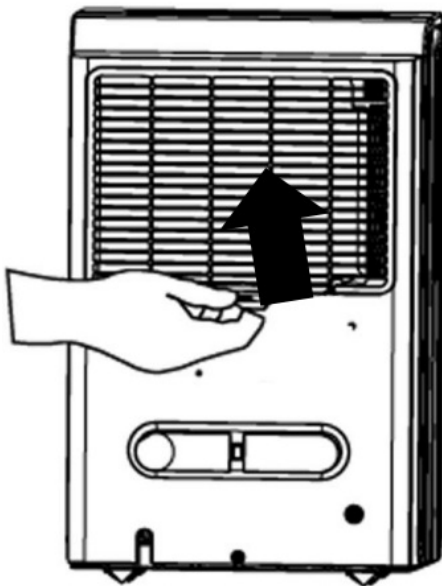


Fig. 2

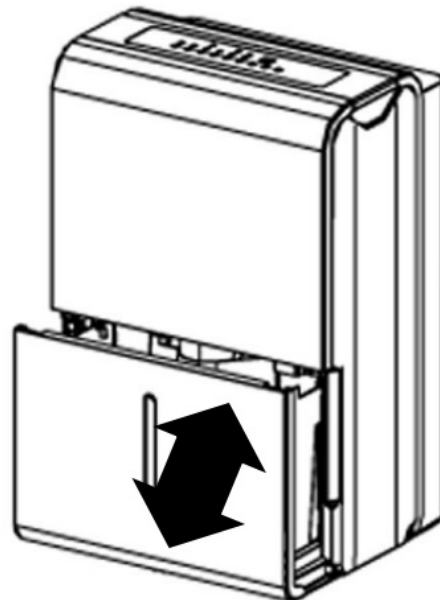

OPERATION INSTRUCTIONS

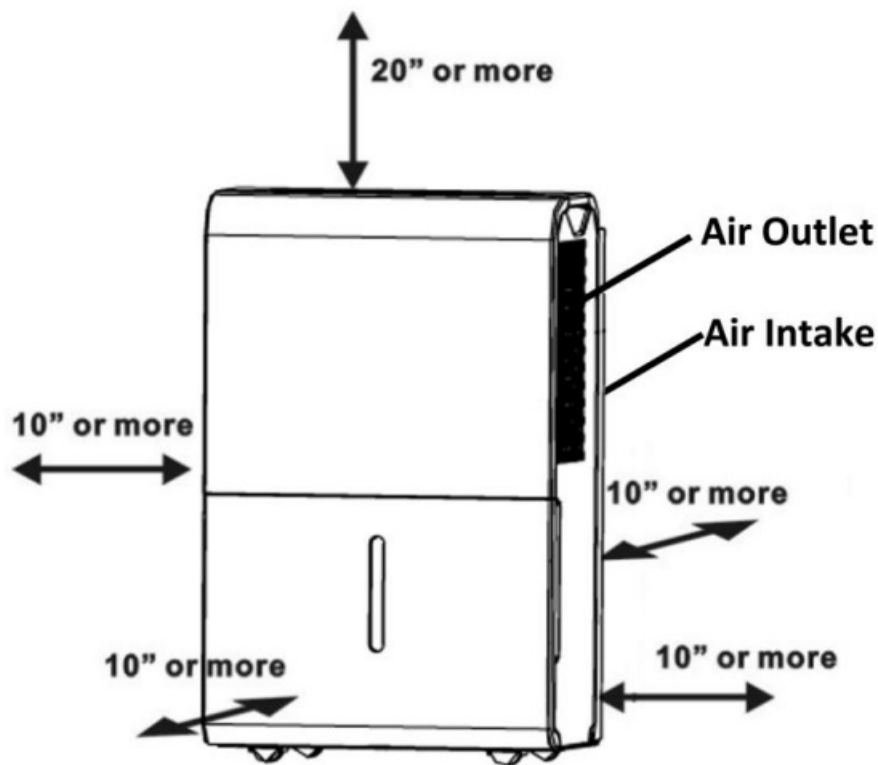

POSITIONING THE UNIT

- This dehumidifier is intended for indoor residential applications only and should not be used for commercial or industrial applications.
- Place the dehumidifier on a smooth, hard, and level floor strong enough to support the appliance with a full bucket of water.
- Do not attempt to roll the appliance over objects.
- Avoid placing the appliance in an area where the temperature will fall below 53°F. The coils may become covered with frost and may reduce performance.
- Do not place the appliance near the clothes dryer, heater, or radiator.
- Shut all doors, windows, and openings to your target dehumidifying space for maximum performance.
- Allow at least 10" of air space on all sides of the appliance for good air circulation and 20" or more above the appliance.

NOTE:


- Dehumidifiers working in a basement will have little or no effect on adjacent enclosed rooms such as closets unless there is enough circulation of air in and out of the enclosed area.
- If the appliance has been switched off and needs to be switched on again, allow approximately three minutes for the correct operation to resume.
- Select a suitable location and make sure you have easy access to the electrical outlet.
- Ensure the air filter and drain bucket are correctly installed before switching the appliance on.
- Always be careful when moving the appliance with a full drain bucket.
- Ensure that the safety requirements and warnings detailed in this user manual are followed when operating this appliance.

WATER DRAINAGE INSTRUCTIONS

Using a portable dehumidifier requires that collected water be emptied frequently. Draining water from this unit can be done in 3 different methods:

1. DRAIN BUCKET METHOD


1. When the bucket is full, the Full indicator light will light. The compressor and fan will turn off, the Full indicator will light, and a P2 code will be displayed.
2. It is recommended to turn the unit off before removing the drain bucket.
3. Grip the left and right handles of the drain bucket securely and carefully pull out the drain bucket. Do not put the drain bucket on the floor because the bottom of the bucket is not even which may cause the water to spill. See Fig.3 and Fig. 4.
4. Remove the water from the drain bucket and replace it back to the dehumidifier. The drain bucket must be installed properly and securely seated for the dehumidifier to operate.
5. The machine will restart when the drain bucket is restored in its correct position. If the unit was turned off prior to the removal of the drain bucket, press the Power button to restore operation.

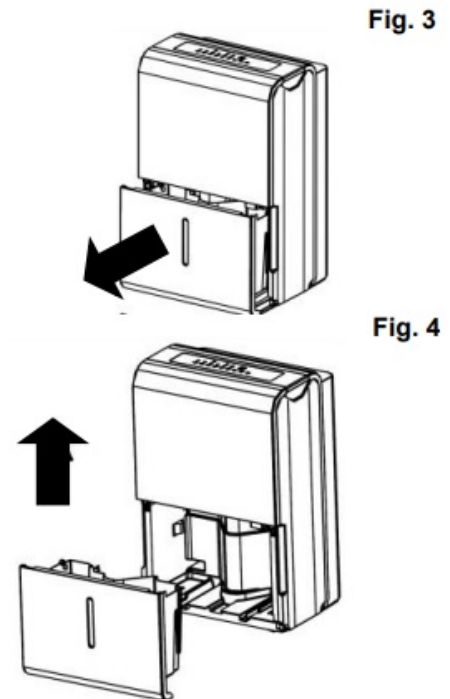

2. CONTINUOUS / GRAVITY DRAIN METHOD

Water can be automatically emptied into a floor drain by attaching a standard drain hose to the continuous/gravity drain outlet. To use gravity to drain your portable dehumidifier, it must be installed on a level surface or at least 12 inches above the ground, on a sturdy table or shelf unit. When using the function of continuous/gravity drainage, your drain hose must be placed horizontally below the drainage hole. Avoid uneven ground and folding the hose.

1. Remove the continuous drain cover and then attach a continuous/gravity drain hose. Make sure the hose is securely fastened to prevent leakage.
2. Direct the drain hose toward a drain or other suitable drainage outlet. Make sure that there are no distortions with the hose that may stop the water flow. (See Fig. 7)
3. Select the desired humidity setting and fan speed on the unit for continuous draining to start.

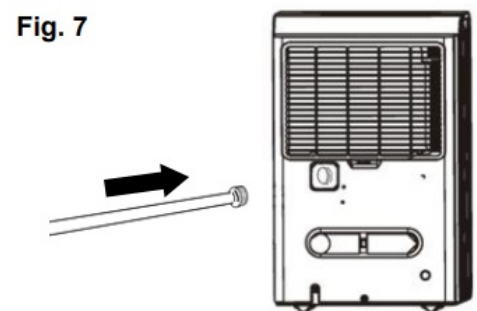


NOTE: When using continuous/gravity drainage setup, there may be some water collected in the water the

drain bucket

MAINTENANCE

CAUTION: Always turn off and unplug the dehumidifier before cleaning

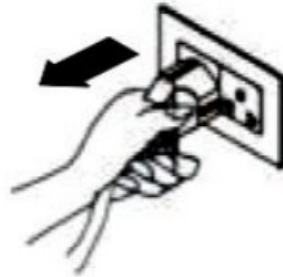

1. Cleaning the air grille and main unit

- Use a damp cloth to wrap the main unit or use water and a mild detergent. Do not use bleach, chemicals or abrasives.
- Do not splash water directly onto the unit. Doing so may cause an electrical shock, cause the insulation to deteriorate, or cause the unit to rust.
- Use a vacuum attachment or brush to clean the air intake and outlet grilles.

2. Cleaning the bucket


- Clean the bucket to prevent the growth of mold, mildew, and bacteria every two weeks.
- Fill the bucket with clean warm water and add a mild detergent to the water.
- Dry thoroughly before reinserting the bucket into the main unit.

NOTE: Do not clean the bucket in a dishwasher.

3. Cleaning the air filter


To ensure the air intake is filtered properly and to assure that your dehumidifier runs efficiently, it is recommended to clean the air filter at least once every two weeks.

- Use a vacuum cleaner or tap the filter lightly to remove loose dust and dirt.
- Rinse the air filter under warm or cold running water (no hotter than 100F.)
- Dry thoroughly before reinserting the air filter.
- Reinstall the air filter and replace the bucket securely.

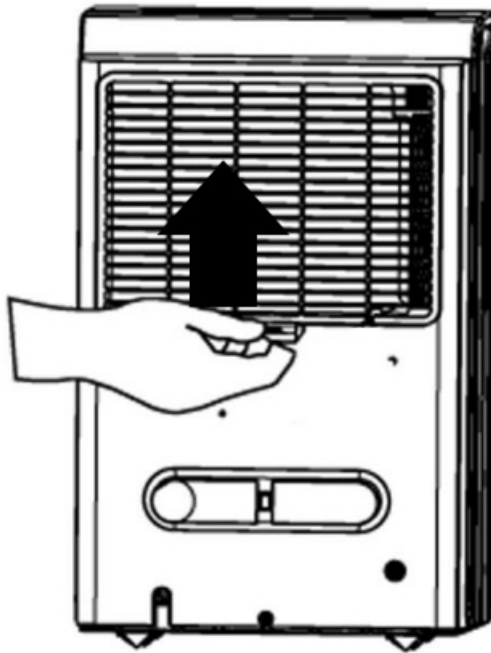

4. End of Season Storage

- After turning off the unit, wait 24 hours before emptying the bucket to allow excess moisture to drain into the bucket.
- Attach the power cord buckle.
- Wrap the power cord using the power cord buckle.
- Clean the main unit, drain bucket, and air filter as detailed above.
- Cover the unit with the original plastic bag that came with the unit or any appropriate dust cover.
- Store the unit upright in a dry, well-ventilated place.

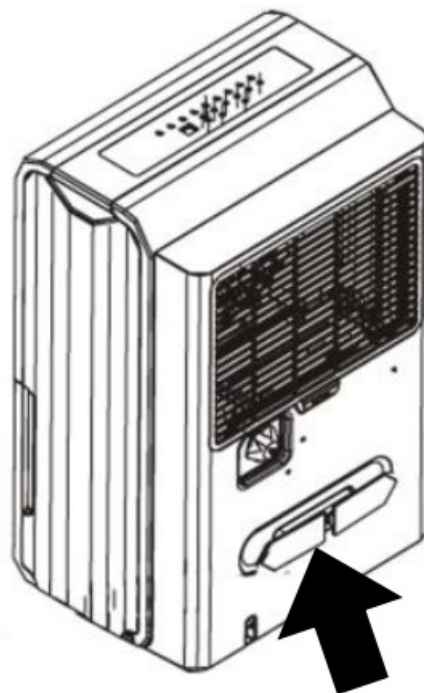

TIPS ON WHEN TO USE YOUR PORTABLE DEHUMIDIFIER

If you have respiratory problems, asthma, and allergies, your Portable Dehumidifier is a great option for controlling moist environments. Creating dry air can keep indoor air pollutants at a more manageable level, especially when used in conjunction with an air purifier. Using your portable dehumidifier can help you save money in the long run

because it uses relatively little power and can help furnaces and air conditioners operate more efficiently.

1. **Excess moisture**

Indoor environments with excessive moisture can cause mold and fungus to thrive inside the walls and beneath the carpet. Many types of mold are potentially dangerous and can lead to health problems. This Portable Dehumidifier reduces the amount of moisture in the air inside a home, which makes it far more difficult for harmful mold to grow. This portable dehumidifier is also effective for a small areas, such as a hallway or bedroom.

2. **Respiratory problems or allergies**

This Portable Dehumidifier is perfect for larger rooms or areas in your home, including a living room or family room. If your home is musty, you will want to use your portable dehumidifier, especially if you have respiratory trouble or allergies. This unit can also help relieve symptoms by controlling the relative humidity inside your home and is a good idea in general if your home has such underlying problems as leaky foundation walls or inadequate ventilation or if you live in a humid area. By keeping the relative humidity indoors below 50 percent, you can keep allergy-inducing dust mites and mold from thriving.

3. **Basements**

If you have a basement that is below grade, you should use your Portable Dehumidifier. This dehumidifier will help you keep the moisture levels in your basement down to manageable levels. By doing this, you can help keep your indoor furnace operating efficiently and even help eliminate minor standing-water problems. Your portable
a dehumidifier also can help keep furniture and valuables dry, and it will help keep electronics in proper working order.

4. **Humid climates**

In humid climates, such as areas near a beach or a large body of water, this Portable Dehumidifier can help keep the environment in your home at a more comfortable level. While the actual temperature won't be affected, you'll sleep more comfortably and may actually save money, since your unit can keep the indoor humidity and, thus, your thermostat under control.

TROUBLESHOOTING

Many common portable dehumidifier problems are easily resolved. Try the troubleshooting suggestions below to see if the problems can be resolved before having to contact the service department.

Problem	Possible Causes	Solutions
---------	-----------------	-----------


<p>The dehumidifier does not operate.</p>	<ul style="list-style-type: none"> • Power failure/outage. • The automatic switch, line fuse , or breaker has been tripped. • The power supply voltage is too low. • The power cord is damaged. • The dryness level you selected has been reached. • The drain bucket is full or not positioned properly. 	<ul style="list-style-type: none"> • Restore the power supply. • Flip the switch / change the fuse / turn the breaker back on. Also, note that you may have too many appliances drawing power on one circuit, you may need to move the other appliances to another circuit. • Move the appliance onto another circuit with the correct voltage. • Call for service. Only authorized personnel should replace the damaged power cord or power plug. • If you want to remove more moisture, set the unit on Continuous operation. • Empty the drain bucket and insert the bucket into the appliance properly.
<p>The dehumidifier runs too much.</p>	<ul style="list-style-type: none"> • Windows or doors near dehumidifiers are open. • The area to be dehumidified is too large. • Air movement through the dehumidifier is blocked. The Air grille may be dirty. • Continuous mode is on. 	<ul style="list-style-type: none"> • Close all windows or doors. • You may need an additional dehumidifier for the area. • Clean the air filter. • The appliance must be placed in a space that does not restrict airflow into the rear coil or out of the front grille. • Set the RH% level and the appliance will stop when the set RH% is reached.
<p>The dehumidifier runs but the room is not dry enough.</p>	<ul style="list-style-type: none"> • Humidity setting (RH%) is too high. • The dehumidifier does not have sufficient clearance to operate. • The room temperature is too low. • Windows or doors are opened. 	<ul style="list-style-type: none"> • Set the humidity level to a lower RH%. • We recommend setting the RH% to at least 10% lower than the current RH%. • Ensure there is at least 10" of clearance for proper ventilation. • The appliance will not operate satisfactorily if the room temperature is below 41°F • Close windows or doors.

Frost appears on the coils above the bucket.	<ul style="list-style-type: none"> • The dehumidifier has been turned on recently. • The room temperature is too low. 	<ul style="list-style-type: none"> • This is normal due to refrigerant rushing through the coil. Frost will usually disappear within 60 minutes. This happens when the appliance is operating in low temperatures of less than 53°F. • The appliance will not operate satisfactorily if the room temperature is below 41°F.
The dehumidifier makes a loud noise.	<ul style="list-style-type: none"> • The appliance is not leveled. 	<ul style="list-style-type: none"> • Shut off the appliance and let it sit on the level surface for at least 6 hours

The dehumidifier leaks.	<ul style="list-style-type: none"> • The continuous/gravity drain hose is loose. • Cracked drain bucket. 	<ul style="list-style-type: none"> • Secure the drain hose. • Contact Service Department.
The dehumidifier does not operate.	<ul style="list-style-type: none"> • Power failure or outage. • The automatic switch, line fuse, or breaker has been tripped. • The power supply voltage is too low. • The power cord is damaged. • The dryness level you selected has been reached. • The drain bucket is full or not positioned properly. 	<ul style="list-style-type: none"> • Restore the power supply. • Flip the switch / change the fuse / turn the breaker back on. Also, note that you may have too many appliances drawing power on one circuit, you may need to move the other appliances to another circuit. • Move the appliance onto another circuit with the correct voltage. • Call for service. Only authorized personnel should replace the damaged power cord or power plug. • If you want to remove more moisture, set the unit on Continuous operation. • Empty the drain bucket and insert the bucket into the appliance properly.

<ul style="list-style-type: none"> Water on the floor. 	<ul style="list-style-type: none"> Drain bucket is not installed properly. The drain hose connection may be loose or not installed properly. 	<ul style="list-style-type: none"> Install the drain bucket securely. Make sure that the drain hose is securely installed in the drain outlet. For the Drain Bucket method, make sure that the continuous drain assembly is not installed and the rubber drain cover is in place. For the Continuous/Gravity Drain method and Water Pump method, make sure the hose is securely fastened to prevent leakage. <p>Direct the drain hose toward a drain or other suitable drainage outlet.</p>
---	--	---

Documents / Resources

	<p>Midea MAD22C1AWS Dehumidifier with Auto Restart [pdf] Instruction Manual MAD22C1AWS, Dehumidifier with Auto Restart, MAD22C1AWS Dehumidifier with Auto Restart</p>
--	---