



# Midea MVC-V18P 2 In 1 Cordless Handstick Vacuum Cleaner User Guide

[Home](#) » [Midea](#) » Midea MVC-V18P 2 In 1 Cordless Handstick Vacuum Cleaner User Guide

## Contents [ [hide](#) ]


- [1 Midea MVC-V18P 2 In 1 Cordless Handstick Vacuum Cleaner](#)
- [2 What comes in the carton](#)
- [3 How to identify parts of your vacuum cleaner](#)
- [4 Easy assembly](#)
- [5 How to maintain your vacuum cleaner](#)
- [6 How to maintain brush roll](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)

# Midea


**Midea MVC-V18P 2 In 1 Cordless Handstick Vacuum Cleaner**




## What comes in the carton

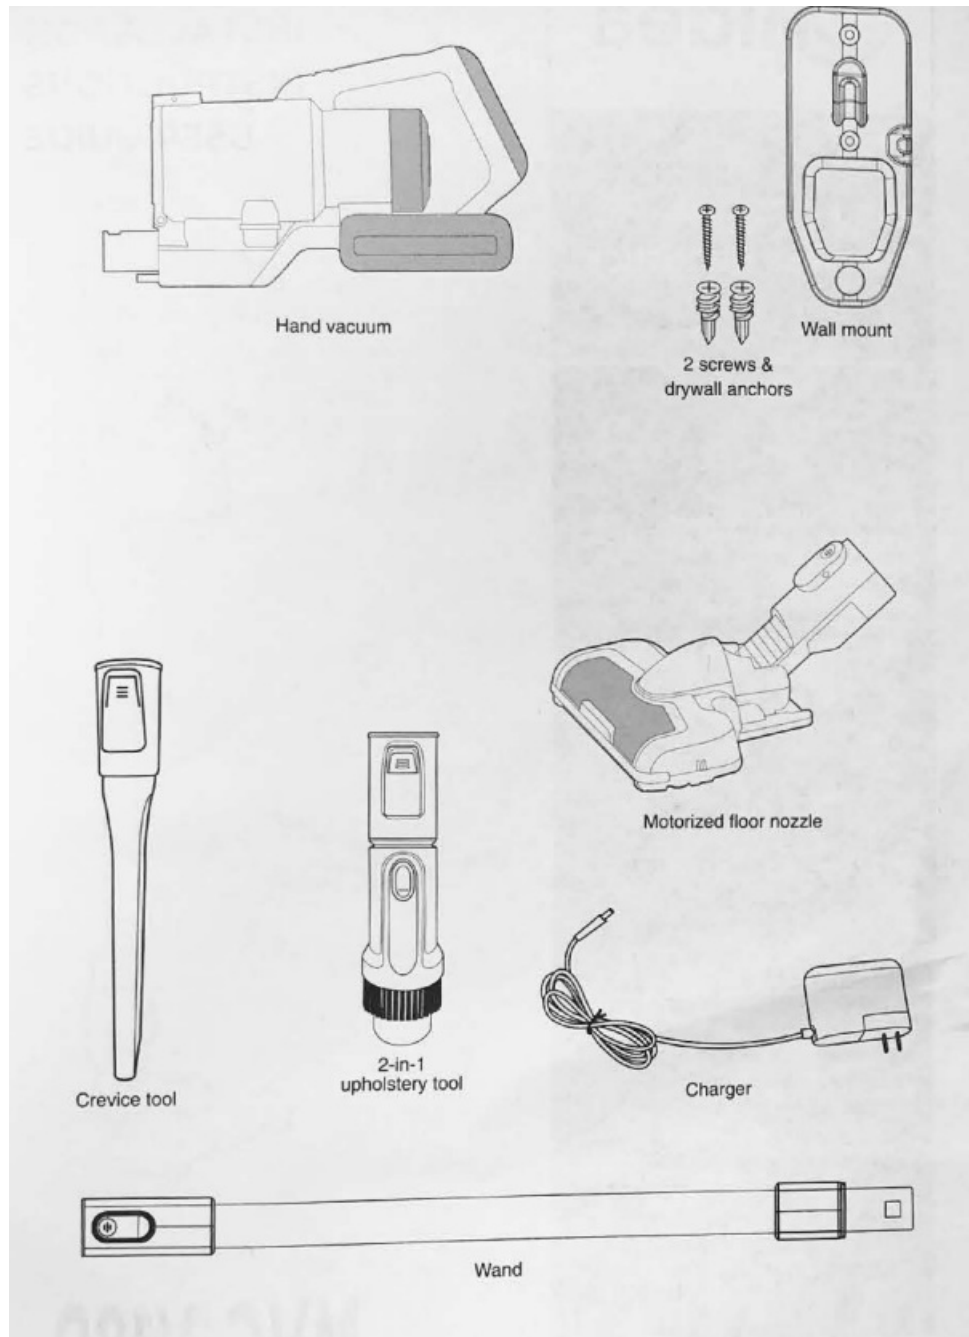

## How to identify parts of your vacuum cleaner

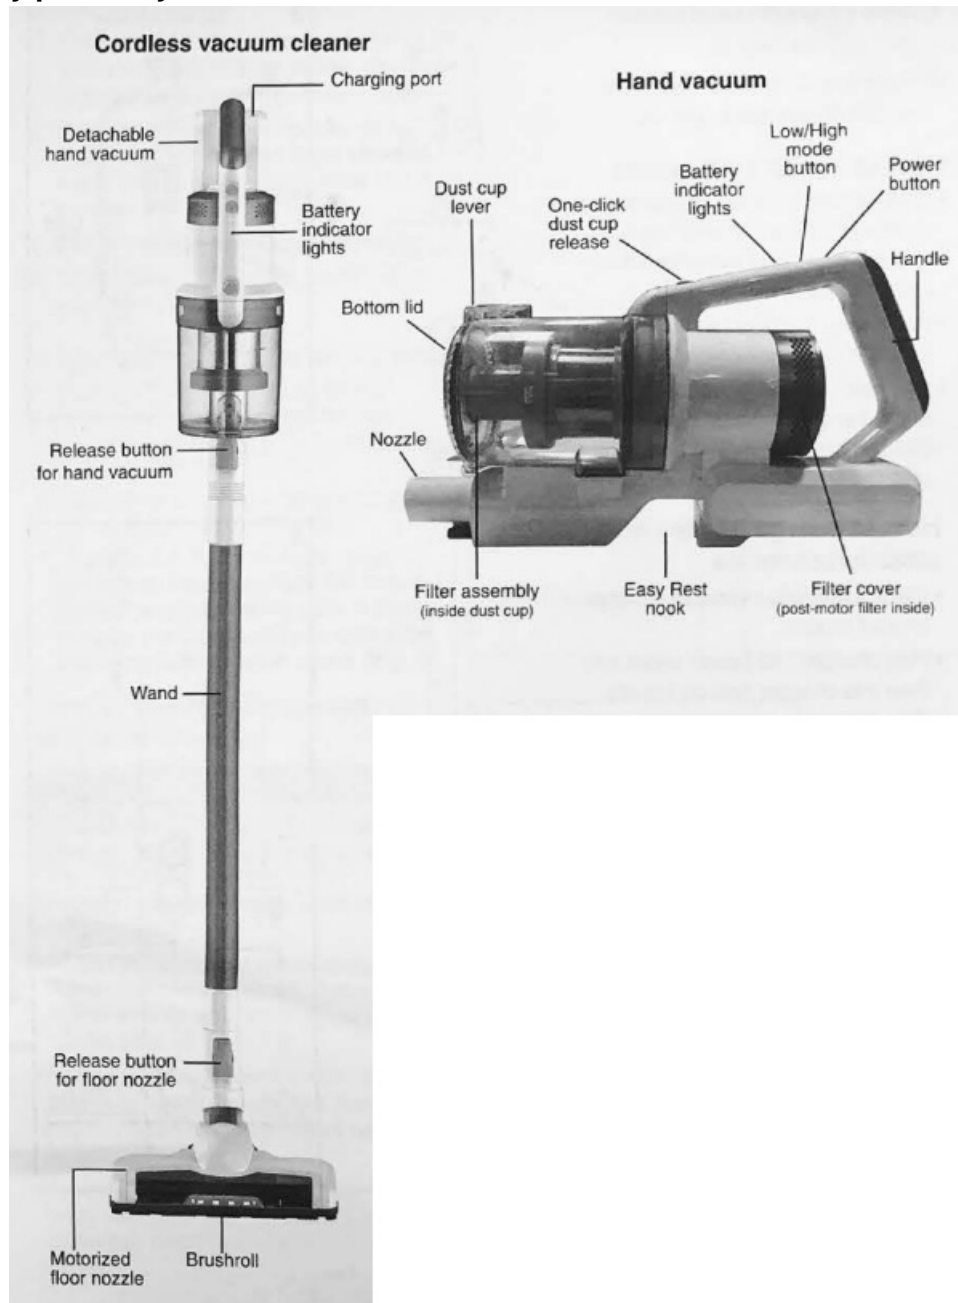


## For filter maintenance instructions

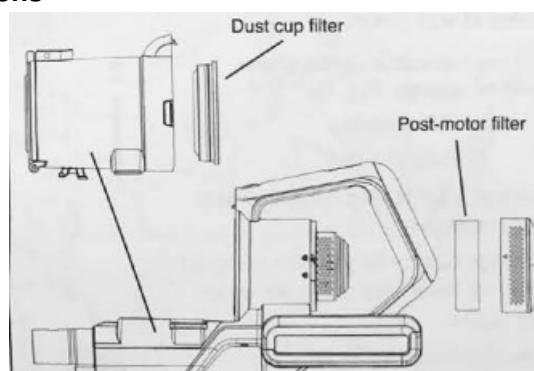


## Easy assembly

1. Slide wand onto hand vacuum until it clicks

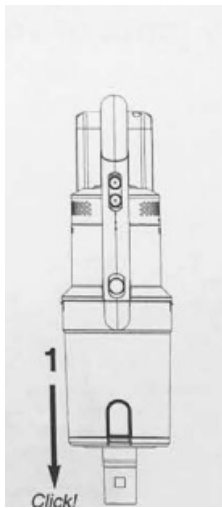


2. Push wand into motorized floor nozzle until it clicks

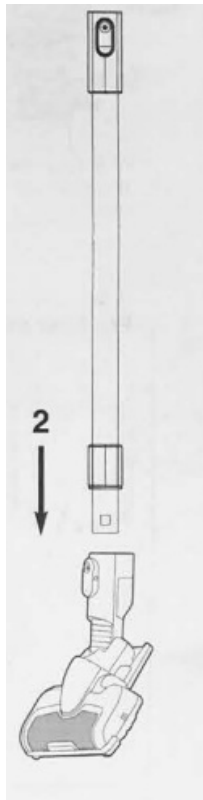


### How to install wall mount

- Choose location near power outlet. Locate point high enough on wall to allow wand and motorized floor nozzle to hang freely.
- Place mount against wall and use pencil to mark drill holes.
- Drill holes (with 1/4" bit) and insert drywall anchors. Insert screws through holes on mount and tighten until firmly attached

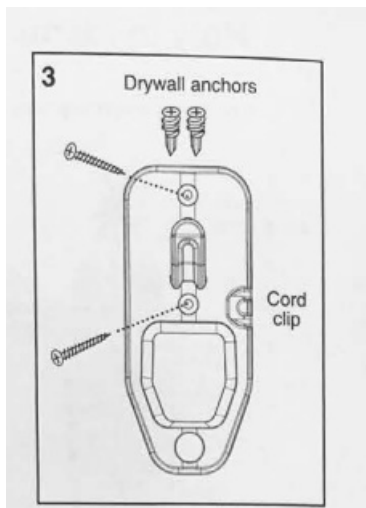

### How to charge battery and store accessories

- Place assembled vacuum cleaner on wall mount.
- Plug charger into power outlet and then into charger port on handle
- Loop charger cord into clips on sides of wall mount.

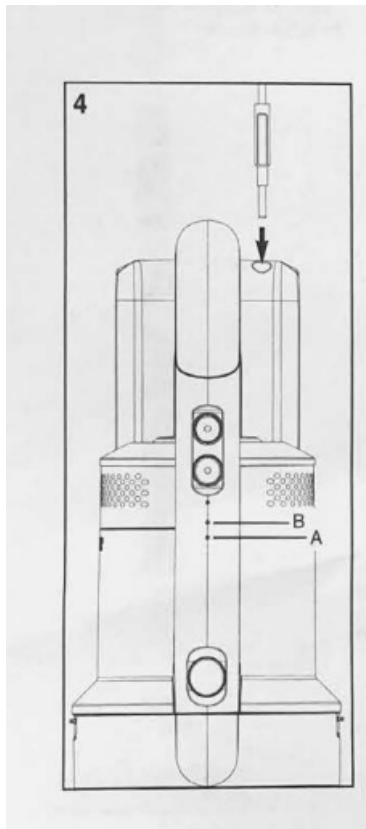


### Battery indicator lights show level of charge

- A. Half charged
- B. Fully charged
- Indicator lights stop blinking when fully charged.
- Charge battery fully before using for the first time. This may take up to six hours.

### How to use cleaner for cleaning floors


- Click power button once to start. Vacuum starts on High mode. Use Low/ High button to switch between modes

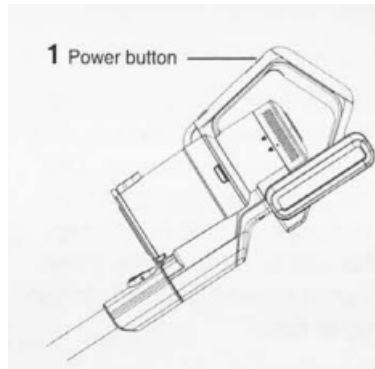

- Using a motorized floor nozzle, glide back and forth on area to be cleaned Avoid oversized or sharp items (such as screws) with cleaner.
- Twist wrist to engage swivel function.
- When done, click power button once to stop motor.


### Empty dust cup after every use

- Click the dust cup release button, located on the front of the handle just above the dust cup and pull dust cup out.
- Press lever to release bottom lid of dust cup to empty debris.
- To place the dust cup back, angle it forward so the lower hook catches the slot and then gently push it back towards the wand until you hear click indicating it is locked in place.

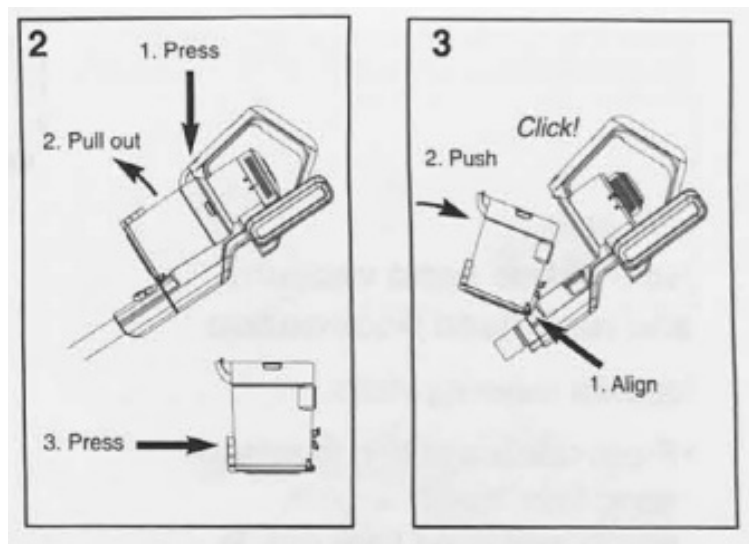


### How to use hand vacuum and accessories

- The hand vacuum can be used with or without tools.
- To use without tools, press release button and remove wand. Collect debris directly with hand vacuum nozzle
- To use tools with wand, press release button to remove motorized floor nozzle. Slide tool onto end of wand until it clicks

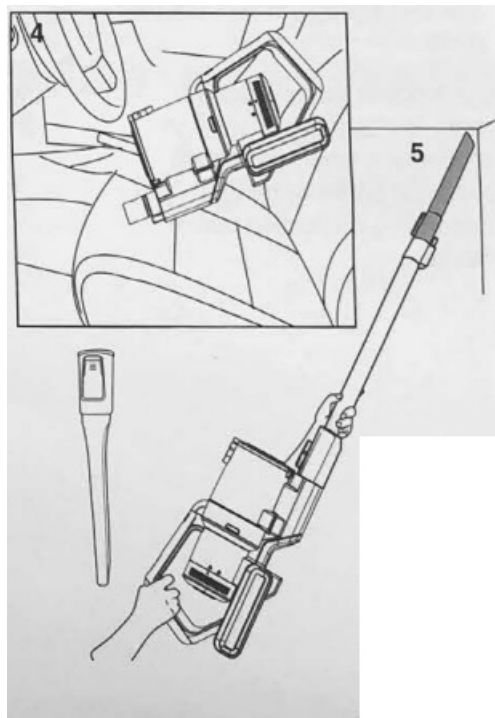

- To use tools with hand vacuum only, press release button to remove wand.
- Slide tool onto hand vacuum until it clicks.
- Use with or without wand.
- 2-in-1 upholstery tool: Use brush to vacuum blinds, vents or upholstered surfaces. Use felt portion to clean delicate surfaces. To switch between felt and brush portions, press thumb release and slide brush up or down.

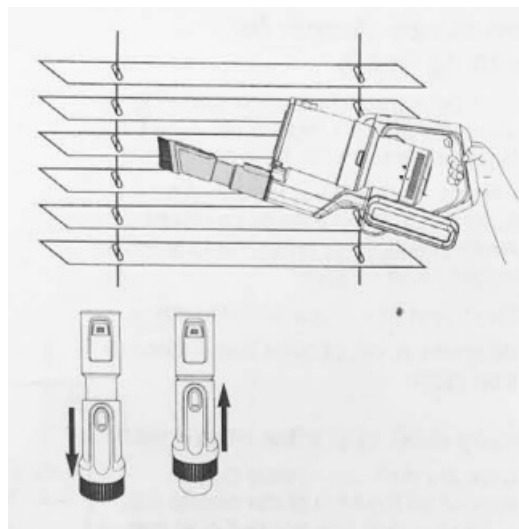


#### **Crevice tool:**

Cleans hard- to-reach areas such as corners, baseboard edges, dryer vents, chairs and sofas.

#### **How to use hand vacuum and motorized floor nozzle**

- Ideal for cleaning stairs.
- Press release button to remove wand from hand vacuum. Attach motorized floor nozzle directly to hand vacuum until it clicks
- Click power button once to start. Vacuum starts on High mode. Use Low/High button to switch between modes depending on suction power desired.




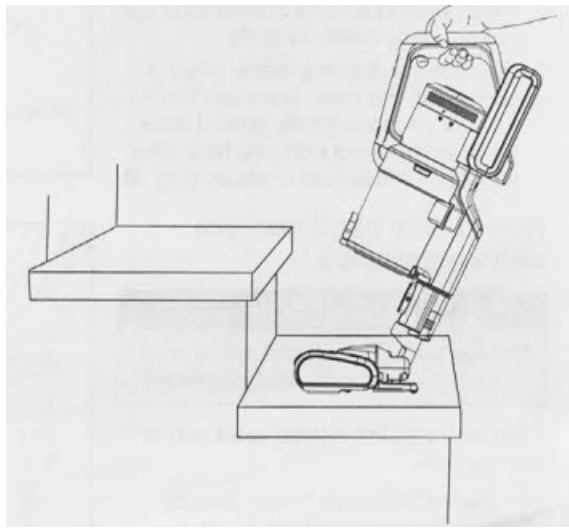


## How to maintain your vacuum cleaner

### Dust cup-Empty after each use

- Click the dust cup release button, located on the front of the handle just above the dust cup and pull dust cup out.

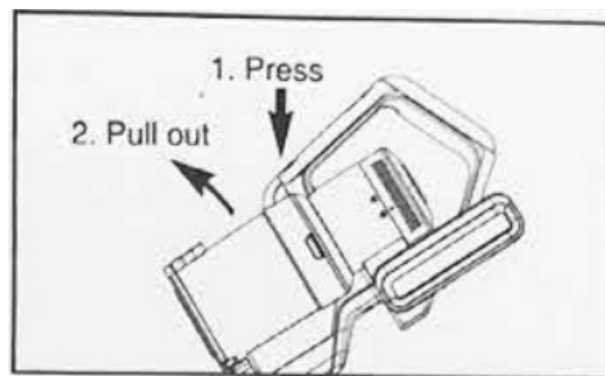

- Press lever to release bottom lid of dust cup to empty debris.

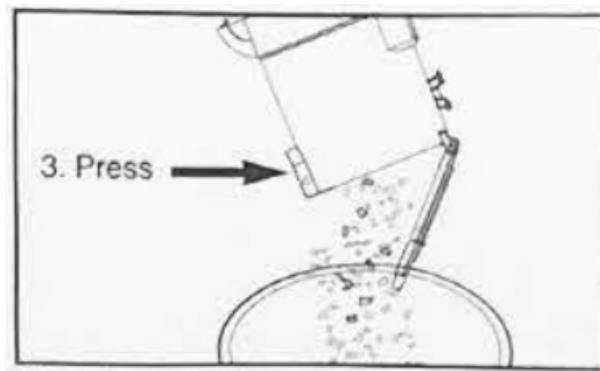

### Washable dust cup filter- clean monthly


1. Click the dust cup release button, located on the front of the handle just above the dust cup and pull dust Cup out.
2. Lift out pre-motor filter and shake off dust frequently. Every three months rinse filter and dry THOROUGHLY.
3. Reattach filter and Cyclone.

- Click dust cup back into place on unit.



### Washable post-motor filter clean every 6 months


- Twist filter cover and remove
- Lift out post-motor filter.
- Shake to remove dust
- Every 6 months, replace filter or rinse and dry THOROUGHLY
- Reposition filter and cover and twist to "lock"

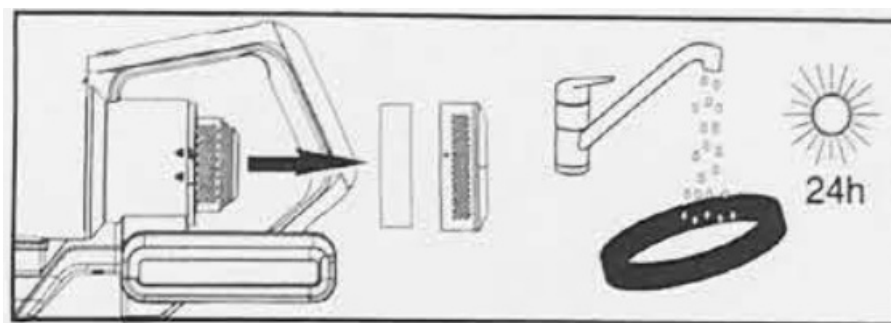


### How to maintain brush roll

#### Washable brush roll-clean frequently


- Step on floor nozzle to lower handle. Turn vacuum face down on floor. Use scissors to clip heavy threads or strings

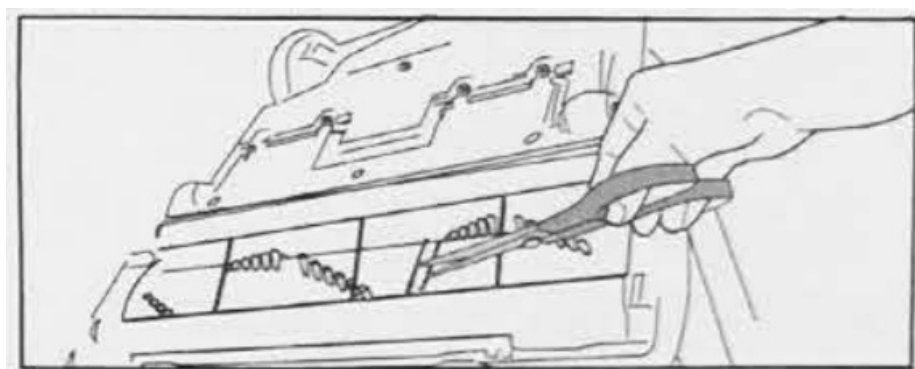

- If debris cannot be removed easily, locate the brush roll release tab on the right side and open the brush roll cover. Remove the brush roll and clear any tangled hair and remaining debris.

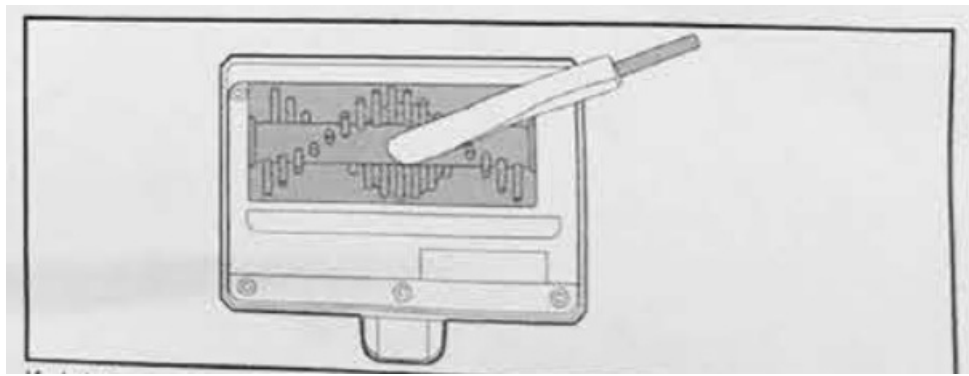

- To reassemble.

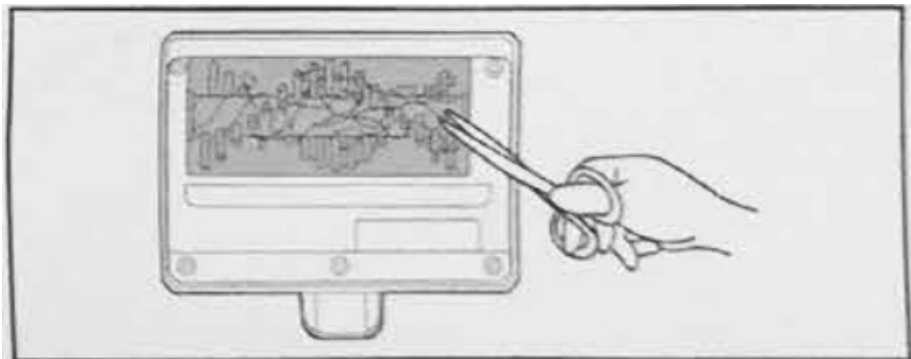

- Align one end of brush roll with floor nozzle gear
- Press another end into slot
- Replace brush roll release tab into the slot and press down to click it into place.

## Documents / Resources



[Midea MVC-V18P 2 In 1 Cordless Handstick Vacuum Cleaner](#) [pdf] User Guide  
MVC-V18P, 2 In 1 Cordless Handstick Vacuum Cleaner, MVC-V18P 2 In 1 Cordless Handstick Vacuum Cleaner