



MIDLAND C1502 Mesh and Bluetooth Conference System User Guide

[Home](#) » [MIDLAND](#) » MIDLAND C1502 Mesh and Bluetooth Conference System User Guide 

Contents

- 1 MIDLAND C1502 Mesh and Bluetooth Conference System
- 2 ON/OFF
- 3 PAIRINGS
- 4 ACCESS SETTINGS
- 5 PHONE, GPS, TFT PAIRING
- 6 MIDLAND INTERCOM PAIRING
- 7 OTHER BRAND INTERCOM PAIRING
- 8 MESH DYNAMIC REPEAT SECURE PAIRING
- 9 RESET BLUETOOTH PAIRINGS
- 10 MESH DYNAMIC REPEAT SECURE RESET
- 11 EXIT SETTINGS MODE CANCEL PAIRING
- 12 OPERATING MODES
- 13 CHOOSE OPERATING MODE
- 14 INTERCOM MODE
- 15 MESH IDENTIFICATION CODE (ID) SELECTION
- 16 FUNCTION DESCRIPTION
- 17 MESH COMMUNICATION ACTIVATION/DEACTIVATION
- 18 TO OPEN/CLOSE INTERCOM MANUALLY
- 19 TO OPEN/CLOSE INTERCOM BY VOICE
- 20 VOX ACTIVATION/DEACTIVATION
- 21 TO OPEN/CLOSE UNIVERSAL INTERCOM
- 22 SWITCHING FROM MESH CONFERENCE TO MESH DYNAMIC REPEAT
- 23 PHONE MODE
 - 23.1 FUNCTION DESCRIPTION
- 24 MAKING A CALL
- 25 ANSWERING/ENDING A CALL REJECTING A CALL
- 26 MUSIC
- 27 RADIO MODE
- 28 FM RADIO
- 29 Documents / Resources
- 30 Related Posts




MIDLAND C1502 Mesh and Bluetooth Conference System



ON/OFF

DESCRIPTION OF BUTTONS

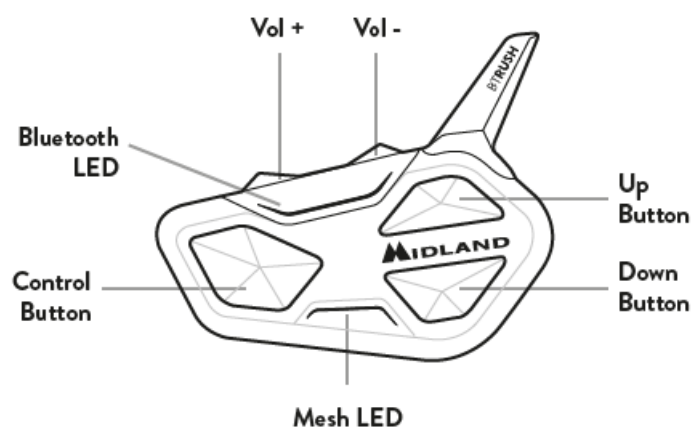

SWITCH ON

SWITCH ON




Press for 3 seconds



	Beep
	Flashes

SWITCH OFF


SWITCH OFF



Press together for 3 sec.

	Flashes
	Notification jingle

PAIRINGS

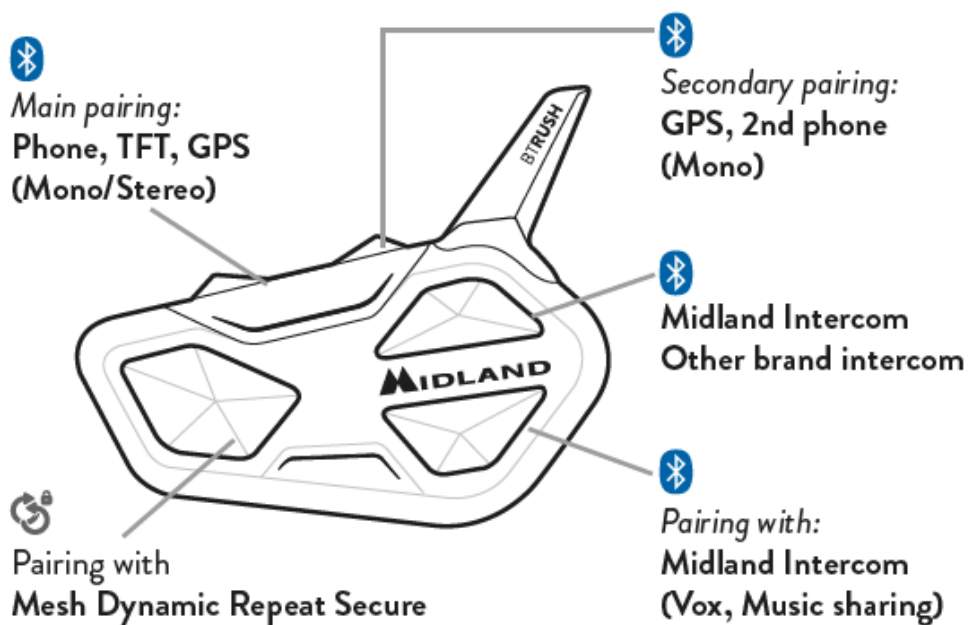

ATTENTION: To carry out any pairings you need to access Settings. If the Control button is pressed for fewer than 7 seconds, the device will switch itself on instead of accessing Settings. If this occurs, repeat the process.

ACCESS SETTINGS

ACCESS SETTINGS

Status: device off

Press for 7 seconds

	Beep
	Flashes
	Static

PHONE, GPS, TFT PAIRING







Status: Settings

Press for 3 seconds

	Beep
	Flashes
	Select BT Rush on PHONE, GPS or TFT
	Beep
	Confirm (1 sec.)





Note: to pair a 2nd device in mono audio, repeat this procedure using Vol -.

MIDLAND INTERCOM PAIRING





Status: Settings	
	
Press for 3 seconds	Press for 3 seconds
 Flashes	 Flashes
 Confirm (1 sec.)	 Confirm (1 sec.)
<i>Pairing successful</i>	

Note: to pair another BT Pro/Pro S intercom, follow the same procedure using the Up button.



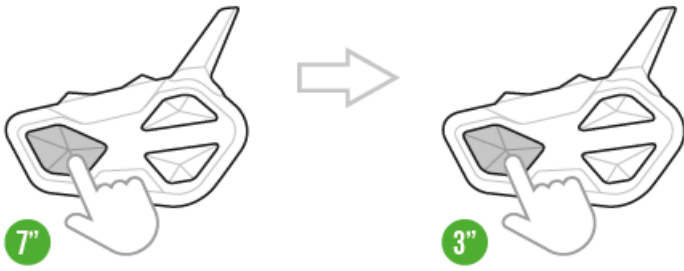

OTHER BRAND INTERCOM PAIRING

Status: Settings	
	
Press for 7 seconds	
 Flashes fast (press and hold)	Follow procedure to pair with phone
 Flashes slowly (Release)	

MESH DYNAMIC REPEAT SECURE PAIRING

Status: Settings	
MASTER	OTHER MEMBERS of the GROUP
	
Press for 7 seconds	Press for 3 seconds
 Flashes fast	 Flashes
When the intercoms of all members have received the Secure code (<i>flashing stops</i>) press the Control button 2 times.	 Code received

RESET BLUETOOTH PAIRINGS

Status: Settings	
	Press together, 3 seconds
	 Beep
	 Confirm (1 sec.)
	 Static

MESH DYNAMIC REPEAT SECURE RESET

Status: Settings

Press together, 3 seconds

	Beep
	Flashes
	Static

Frequency (GHz)	Max power (mW)
2.402 - 2.480	100

EXIT SETTINGS MODE CANCEL PAIRING

Status: Settings

Press 2 times


Flashing changes

OPERATING MODES

- Intercom Mode: to communicate with another device via Mesh or Bluetooth.
- Phone Mode: for phone calls or for managing music.
- FM Radio Mode: to listen to, search for and store radio stations.

Note: Phone mode is only active when there are devices paired to the Vol+/Vol- buttons.

CHOOSE OPERATING MODE

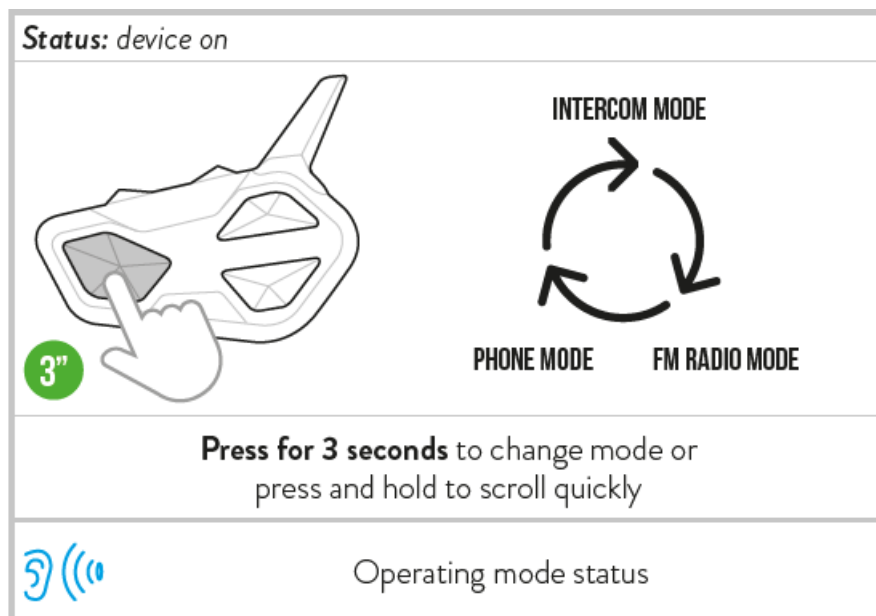

Note: By pressing simultaneously Vol + and Vol – for 1 second, BT Rush communicates the selected operating mode.

Attention: to communicate the participants must be in the same Mesh group and have different IDs.









Conference Mesh Group: 10 people in a 1.4 Km bubble.

Mesh Dynamic Repeat Group: 6 people within 3.5 Km.

Mesh Dynamic Repeat Secure Group: 6 people within 3.5 Km with Secure key assigned for private communications.

TABLE 1 – IDS ASSIGNED TO THE VARIOUS GROUPS:







GROUP	ID	GUEST	LED
 Mesh Conference	1-10	Infinite	
 Mesh Dynamic Repeat	1-6	Infinite	
 Mesh Dynamic Repeat Secure	1-6	Infinite	

Guest: listening mode only


INTERCOM MODE

The default Mesh Group is set to Dynamic Repeat. For further information consult the online manual (www.midlandeurope.com) or the tutorials on YouTube – Midland World.

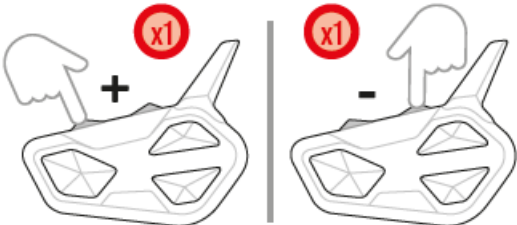

MESH IDENTIFICATION CODE (ID) SELECTION

	Press together, 1 time	
		Voice ID
		Flashes
		5 sec. to choose the personal ID (press Vol+ to increase and Vol- to decrease ID figure)
		Confirm ID and group

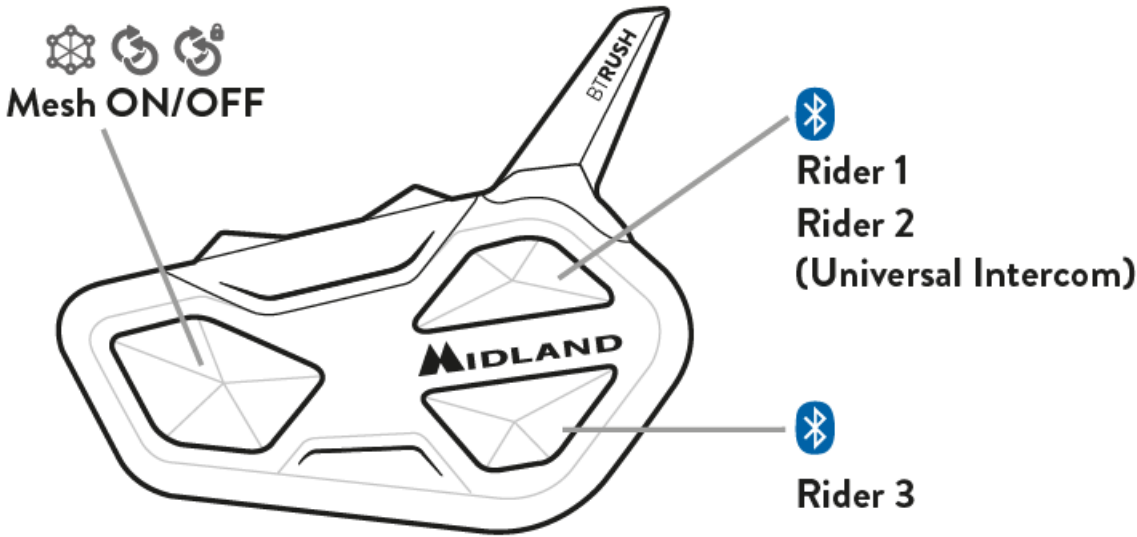


FUNCTION DESCRIPTION



MESH COMMUNICATION ACTIVATION/DEACTIVATION






Status: Intercom mode	
	Press 1 time
	 Jingle
	Flashes the colour of the group selected (see TABLE 1)

TO OPEN/CLOSE INTERCOM MANUALLY

Status: Intercom mode	
	Press 1 time
	 Beep
	 Flashes

Note: to communicate with Rider 1 repeat the process of pressing the Up button.


TO OPEN/CLOSE INTERCOM BY VOICE

Status: in all modes	
 Say "Hi"	
 Jingle	
 Flashes	
 Silent for 40 sec. the intercom deactivates	
 Beep	


Note: Voice activation is only possible with an intercom paired with the down button.

VOX ACTIVATION/DEACTIVATION

Status: in all modes



Press for 7 seconds




Jingle


SHORTCUT: In Intercom mode pressing Control 2 times activates/deactivates the music.

TO OPEN/CLOSE UNIVERSAL INTERCOM


Status: Intercom mode



Press for 3 seconds to activate or deactivate the Universal Intercom



Beep



Flashes

Note: to activate/deactivate the audio from a different brand device, use the voice call command (for some models it is necessary to send the voice call 2 times)

SWITCHING FROM MESH CONFERENCE TO MESH DYNAMIC REPEAT

Status: all modes



Press together, 3 seconds




Announcement

Flashes the colour of the group selected (see **TABLE 1**) if Mesh communication is on

SHORTCUT: In Phone/FM Radio modes pressing Control 2 times activates/deactivates Mesh communication.

PHONE MODE

FUNCTION DESCRIPTION

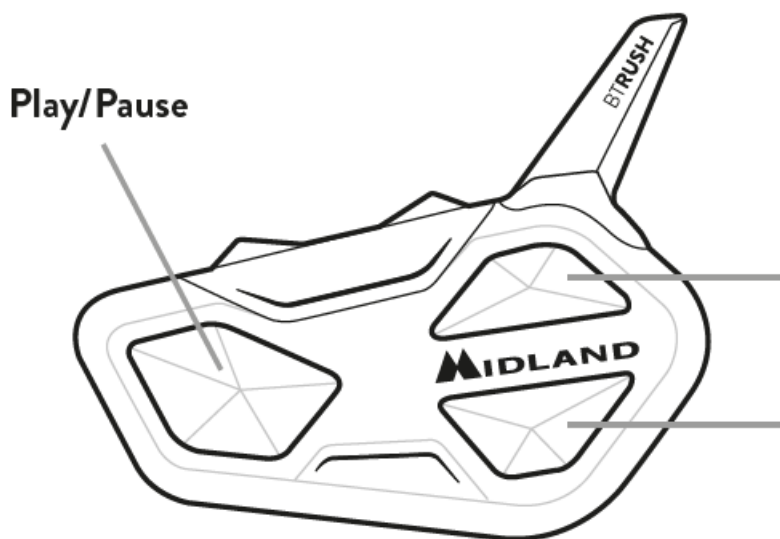


(Phone on Vol+)

- Call
- Answer
- End
- Reject
- Next song

(Phone on Vol-)

- Call
- Answer
- End
- Reject
- Previous track


MAKING A CALL

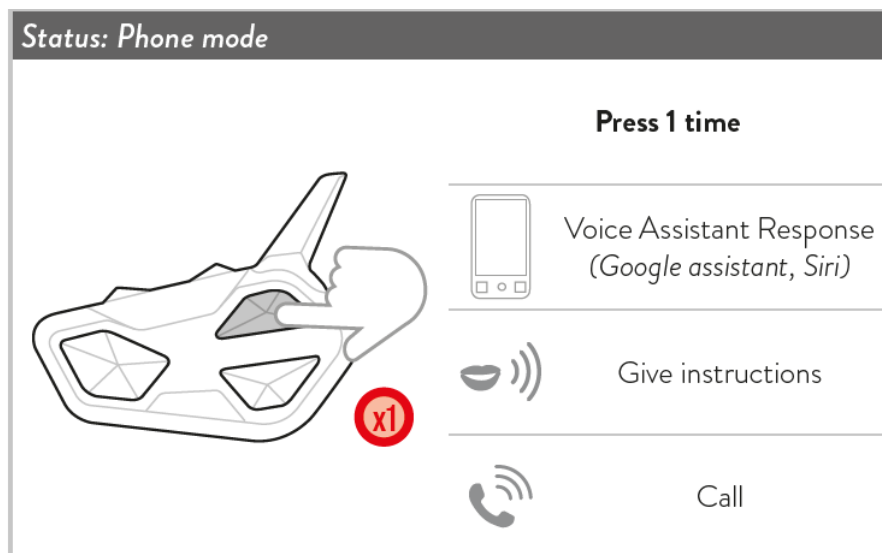

Note: If you have a phone paired with the Vol – button, use the Down button.

SHORTCUT: In Phone/FM Radio modes pressing the Down button 2 times turns the Intercom on/off.

ANSWERING/ENDING A CALL REJECTING A CALL

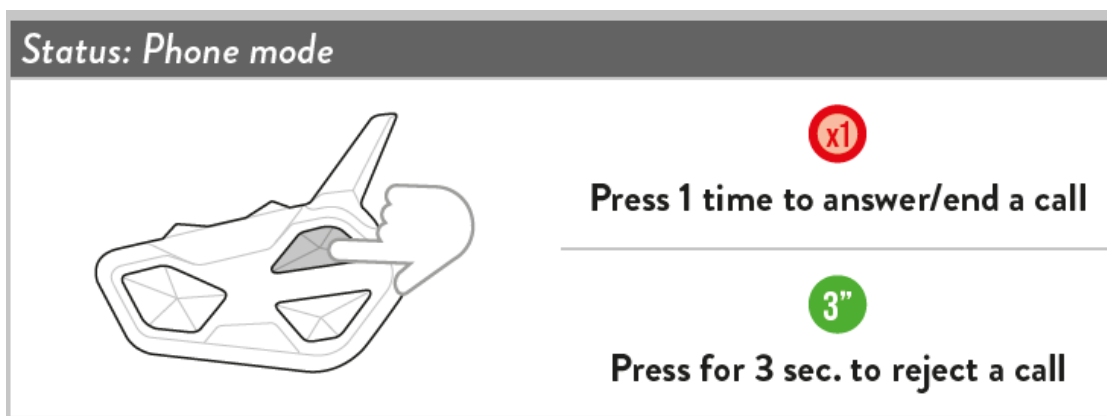


Note: If you have a phone paired with the Vol – button, use the Down button.


MUSIC

	Select Music app
	 Press 1 time Play/Pause
	 Press 1 time Next track
	 Press 1 time Previous track <hr/>  Press for 3 sec. Start/stop sharing music <i>with passenger (paired with Down button)</i>

RADIO MODE

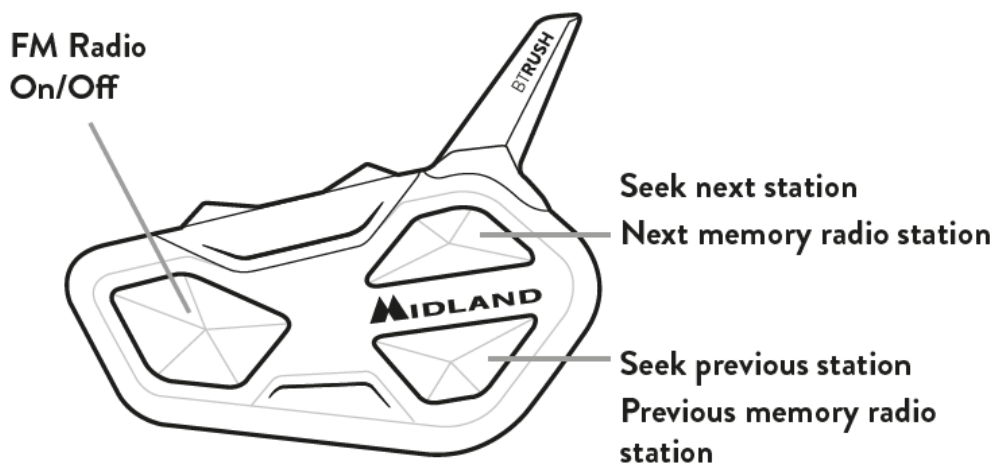


FM RADIO

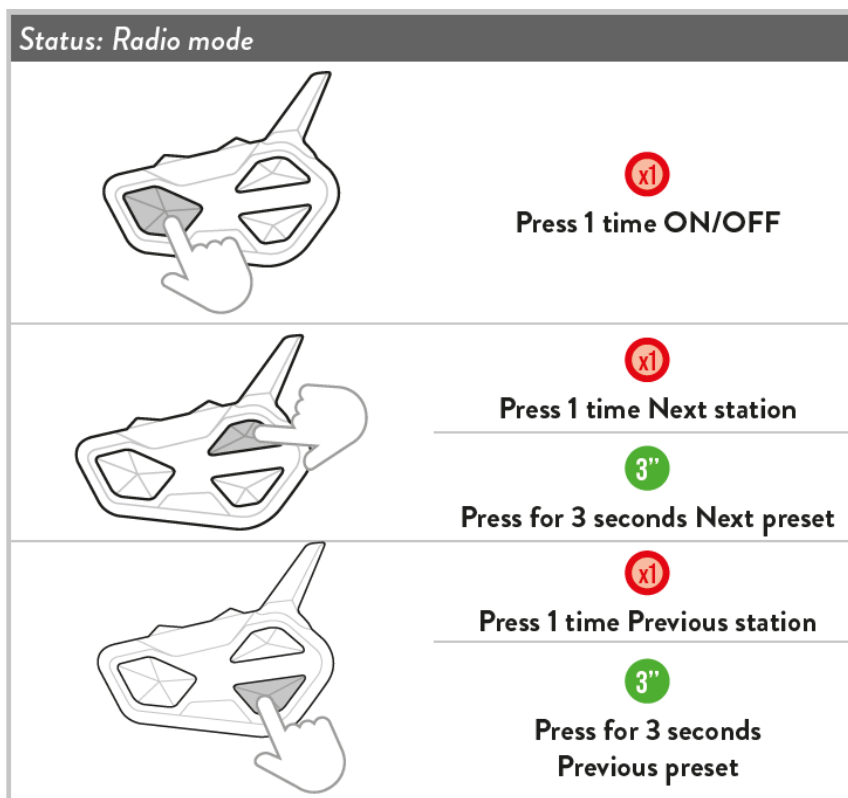

Go to our website www.midlandeurope.com, download the complete manual and the BT Updater software. Customize your intercom with the BTPRO NetApp. Download it here:



Documents / Resources

	<p>MIDLAND C1502 Mesh and Bluetooth Conference System [pdf] User Guide C1502, Mesh and Bluetooth Conference System, C1502 Mesh and Bluetooth Conference System, Bluetooth Conference System, Conference System</p>
---	--