



MIDLAND T51BLK X Talker Two Way Radios Owner's Manual

[Home](#) » [MIDLAND](#) » MIDLAND T51BLK X Talker Two Way Radios Owner's Manual 

MIDLAND T51BLK X Talker Two Way Radios Owner's Manual



***X-TALKER* TWO-WAY RADIOS**



T51BLK

midlandusa.com

midlandusa.com

Welcome to the world of Midland electronics

Congratulations on the purchase of your high quality MIDLAND product. Your two-way radio represents state-of-the-art high-tech engineering and is designed for FRS (Family Radio Service) operation. It is a quality piece of electronic equipment, skillfully constructed with the finest components. The circuitry is all solid-state and mounted on a rugged printed circuit board. Your two-way radio is designed for reliable and trouble-free performance for years to come.

Features

- 22 FRS Channels
- 38 Privacy Codes (CTCSS)
- VOX
- Call Alert
- Scan Function
- Monitor Function
- Roger Beep Tone
- Silent Operation
- Key Pad Lock
- Speaker / Microphone Jacks
- Battery Meter / Battery Low Indicator
- USB Jack Charging

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device does not cause harmful interference, and (2) this radio must accept any interference that may cause undesired operation.

To maintain compliance with FCC's RF exposure guidelines, for body-worn operation, this radio has been tested and meets the FCC RF exposure guidelines when used with Midland Radio Corp. accessories supplied or designated for this product. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

IMPORTANT NOTICE

Exposure To Radio Frequency Energy

Your Midland radio is designed to comply with the following national and international standards and guidelines regarding exposure of human beings to radio frequency electromagnetic energy:

- United States Federal Communications Commission, Code of Federal Regulations: 47 CFR part 2 sub-part J
- American National Standards Institute (ANSI)/Institute of Electrical & Electronic Engineers (IEEE) C95. 1-1992
- Institute of Electrical and Electronic Engineers (IEEE) C95. 1-1999 Edition
- National Council on Radiation Protection and Measurements (NCRP) of the United States, Report 86, 1986
- International Commission on Non-Ionizing Radiation Protection (ICNIRP) 1998

To control your exposure and ensure compliance with the general population or uncontrolled environment exposure limits, transmit no more than 50% of the time. The radio generates measurable RF energy exposure only when transmitting.

Body-Worn Operation

If you wear the radio on your body when transmitting always use Midland- supplied or approved belt clip, holster, case, or body harness for this product. Use of any accessories not supplied or approved by Midland may exceed FCC/Health Canada RF exposure guidelines. If you do not use any accessories supplied or approved by Midland, **ensure the radio and its antenna are at least 1 inch (2.5cm) from your body when transmitting.**

Contents

- 1 LCD DISPLAY
- 2 CONTROLS
- 3 BATTERY INSTALLATION
- 4 INSTALLING THE BELT CLIP
- 5 CHARGING THE BATTERIES
- 6 BATTERY LEVEL INDICATOR
- 7 OPERATING YOUR RADIO
 - 7.1 POWER ON/OFF AND VOLUME
 - 7.2 RESTORING YOUR RADIO TO THE ORIGINAL SETTING
 - 7.3 TRANSMITTING AND RECEIVING A CALL
 - 7.4 ABOUT RANGE
- 8 T51BLK SERIES QUICK REFERENCE CHART
- 9 TROUBLESHOOTING GUIDE
- 10 USE AND CARE
- 11 SPECIFICATIONS
- 12 LIMITED WARRANTY (United States and Canada)
- 13 ACCESSORIES
- 14 Documents / Resources
 - 14.1 References

 
LCD DISPLAY

- 1.KEY LOCK ICON** – Indicates KEY LOCK mode is on.
- 2.VOX ICON** – Indicates when VOX mode is active.
- 3.CHANNEL NUMBER** – Changes from 1~22 on FRS band (1~10 on WX band).
- 4.PRIVACY CODE** – Indicates Privacy Code selected by user (0F~38).
- 5.BATTERY METER** – Indicates the battery level.
- 6.RECEIVE (RX) ICON** – Indicates radio is receiving a transmission.
- 7.TRANSMIT (TX) ICON** – Indicates radio is transmitting a signal.
- 8.PRIVACY CODE ICON** – Indicates Privacy Code is on.



CONTROLS

- 10.PTT Button** – Press and hold to transmit voice communication.
- 11. CALL/LOCK Button** – Press to send a CALL ALERT signal. Press and hold to turn KEY LOCK on/off.
- 12. MIC** – Built-in microphone.
- 13. USB CHARGING JACK**
- 14. ANTENNA**
- 15. EXTERNAL SPEAKER/MIC JACK**
- 16. MENU Button** – Press momentarily to access Menu mode.
- 17. MONITOR/SCAN Button** – Press to enter SCAN mode. Press and hold to enter MONITOR mode.
- 18. UP ▲ and DOWN ▼ Buttons** – Make adjustments in MENU mode.
- 19. SPEAKER** – Built-in speaker.

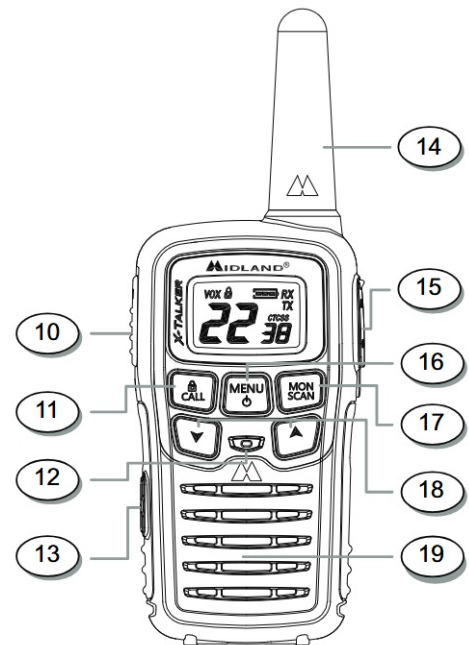


BATTERY INSTALLATION

Your radio operates with either a NiMH battery pack or optional 3 AAA alkaline batteries. The belt clip should be removed (see below) to ease installation or removal of the batteries.

To install the batteries:

 1. With the back of the radio facing you, remove the belt clip (see diagram below) for easy access, then remove the Battery Cover by pressing down on the top center and sliding it down from the radio.
2. Insert NiMH battery pack or 3 AAA batteries observing the polarity as shown. Installing the batteries incorrectly will prevent the unit from operating or may damage the unit.
3. Return the Battery Cover by sliding it up on the radio. Replace the belt clip, making sure it locks into place.

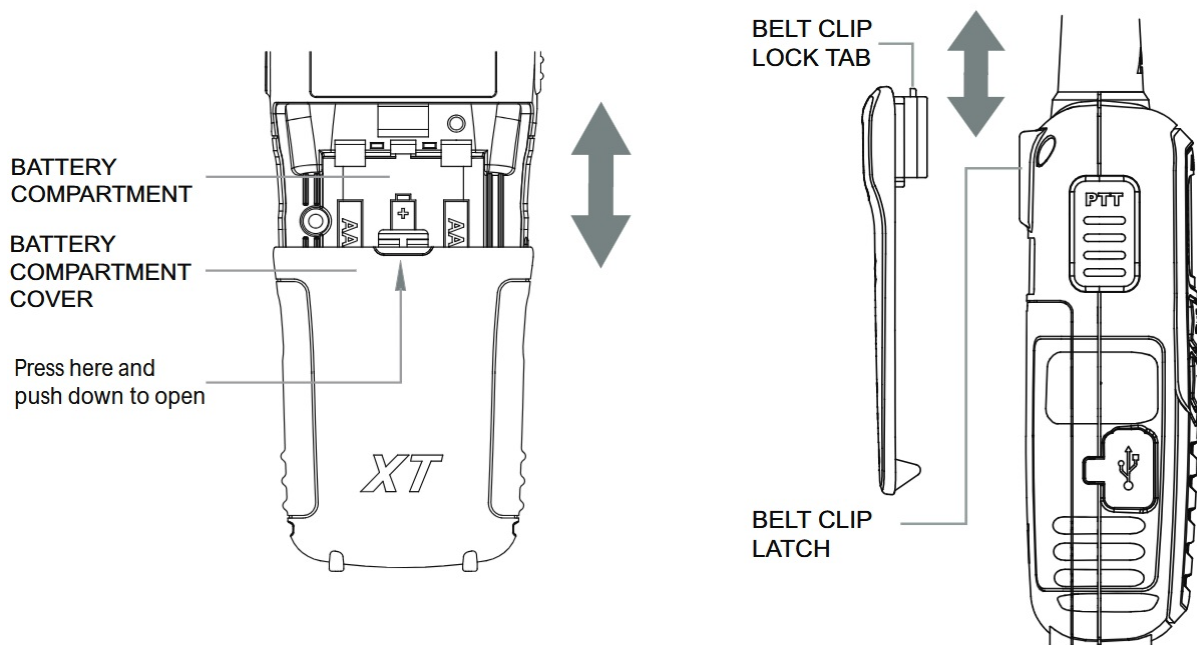

INSTALLING THE BELT CLIP

To install the **BELT CLIP**, slide the clip down into the slot on the back of the radio until the **BELT CLIP LATCH** clicks. To remove the **BELT CLIP**, pull the **LOCK TAB** away from the radio, then gently pull the belt clip up toward the top of the radio.

CHARGING THE BATTERIES

Your radios are equipped for using a rechargeable NiMH battery pack (BATT3R) which can be recharged by inserting one end of the USB Cable into a USB power source, and the other end into the radio USB charging jack, or with the optional desktop charger (as described below). While charging, the Battery Meter will flash from 1 to 3 bars. The LCD display will show **FULL** when charging is complete. For maximum battery life, Midland recommends charging the battery pack when the low battery icon comes on. Remove the radios from the charger when the charging is finished.



To charge using the Desktop Charger:

1. Place the BATT3R rechargeable battery packs in the radios.
2. Connect one end of the USB Cable into a USB power source.
3. Insert the other end of the USB Cable into the desktop charger USB jack.
4. Place the radios into the desktop charger slot. While charging, the Battery Meter will flash from 1 to 3 bars, and stop when charging is finished. The LCD display will show **FULL**.

In order to ensure that the battery pack is fully charged, it is recommended that the battery pack be charged with the radio turned OFF.

- ! 1. Only use the Midland NiMH battery pack.
- ! 2. Do not attempt to charge alkaline batteries or any batteries or battery packs other than the one indicated in the manual. This may cause leakage and damage to the radio.
- 3. For long term storage of the radio, turn the radio OFF and remove the batteries from the radio.

BATTERY LEVEL INDICATOR

Your radio has a **BATTERY LEVEL METER**  that shows the battery power level. The greater the number of bars visible, the stronger the battery level. When the battery level is low, the **Battery Shell**  icon and “**bt Lo**” will flash in the display indicating your batteries should be replaced or recharged if using a rechargeable battery pack.

OPERATING YOUR RADIO

POWER ON/OFF AND VOLUME

Press the **POWER/MENU** button for at least 3 seconds to turn the radio on/off. During Power On, the radio will beep 2 times with different tones, the LCD will display several icons for 1 second and then the LCD display will indicate the last channel selected.

To increase/decrease the volume level, press the ▲\▼ buttons during **RX** or **STANDBY** mode

RESTORING YOUR RADIO TO THE ORIGINAL SETTING

To reset your radio to the original (default) setting, turn on the radio while pressing and holding the ▲ button. The LCD display will reset to standby mode on channel 1 with no Privacy Code.

 
TRANSMITTING AND RECEIVING A CALL

To communicate, all radios in your group must be set to the same channel and/or Privacy Code.

1. For maximum clarity, hold the radio at least 1 inch (2.5 cm) from your mouth.
2. Press and hold the **PTT** button and speak in a normal voice into the **microphone**. The **TX** icon will appear continuously on the LCD display while transmitting.
3. To receive a call, release the **PTT** button. The **RX** icon will appear on the display when your radio is receiving a transmission.

ABOUT RANGE

Your radios are designed to give you maximum range under optimum conditions.

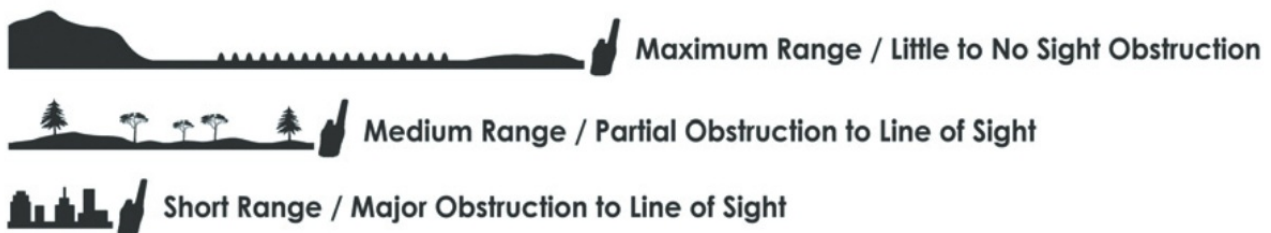


Optimum Conditions are:

- Over water
- Open rural areas without obstructions
- Flat areas where you can see the other person

To ensure you get maximum range:

- Be sure to use fresh or fully charged batteries – low batteries will cause low power conditions.
- Be sure to set your radio to use Hi power.

 T51BLK SERIES QUICK REFERENCE CHART

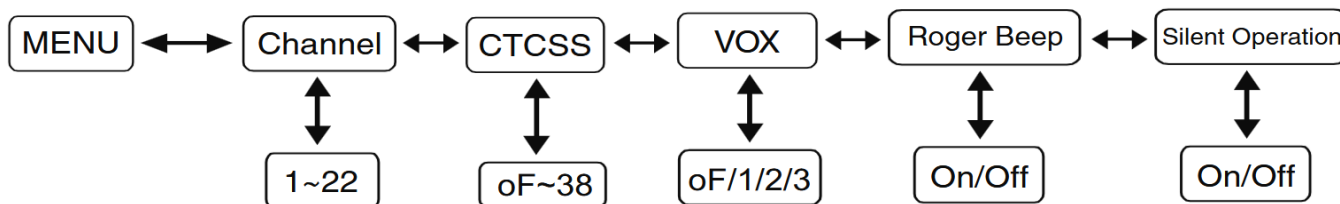

MONITOR

Pressing and holding the **MONITOR** button for 3 seconds will let you hear noise so you can adjust the volume level of the radio when not receiving a signal. This could also be used to check any activity on your current channel before transmitting.

Press and hold the **MONITOR** button for 3 seconds again to get out of **MONITOR** mode.

SCAN


Your radio can scan all 22 channels for activity. To enter, quickly press the **SCAN** button. Repeat the same procedure to exit. Your radio will rapidly scan each of the 22 channels and stop on any active channel for 6 seconds before resuming scan.

When you press the **PTT** button to transmit on an active channel, the scanning function will stop and remain on the active channel. To resume scanning, quickly press the **SCAN** button.

CALL ALERT

Your radio can transmit a call alert. To send a call alert, press the **CALL** button. The **TX** icon will appear while transmitting a call alert and a tone can be heard on the speaker for confirmation.

KEYPAD LOCK

To avoid accidentally changing the radio setting, press the **LOCK** button for 3 seconds. The  icon will appear on the display. **PTT** and **CALL** will still be active. Repeat the same procedure to unlock the keypad.

CHANNEL SELECTION (FRS BAND)

Press the **MENU** button once, and then the **▲\▼** buttons to select one of the 22 FRS channels. To confirm the selection, press the **PTT** button or press the **MENU** button again to move to the next feature setting.

SETTING PRIVACY CODES

Your radio has 38 **Privacy Codes** available. The selected Privacy Code may be different for each channel. To select a **Privacy Code** for the current channel press the **MENU** button twice, and then the **▲\▼** buttons to select one of the 38 **CTCSS** Codes. The Privacy Code icon on the display will indicate **CTCSS** mode. To confirm the selection, press the **PTT** button or press the **MENU** button again to move to the next feature setting.

! **Note** : Selecting a Privacy Code of “**oF**” will disable the Privacy feature. To communicate between two radios, all

radios in your group must be set to the same channel and/or Privacy Code selections.

VOX

Your radio has 3 VOX level settings: (**oF/1~3**).

To set **VOX**, press the **MENU** button until the display shows "**VOX**". On the right of the **CHANNEL NUMBER** display, an "**oF**" icon appears. Select "1" ~ "3" by pressing the **▲\▼** buttons and push the **PTT** key, or press the **MENU** button again to move to the next feature setting. **VOX** will be more sensitive on the lower setting than on the higher setting.

To turn **VOX** off, press the **MENU** button until the display shows "**VOX**". On the right of the **CHANNEL NUMBER** display, a "1" ~ "3" icon appears. Select "**oF**" by pressing the **▲\▼** buttons and push the **PTT** key, or press the **MENU** button again to move to the next feature setting.

ROGER BEEP (end of transmission) TONE

When the **PTT** button is released, the radio will beep to confirm to other users that your transmission has finished. To set the **ROGER BEEP** tone, press the **MENU** button until the display shows an "**rb**" icon. Select "on" or "**oF**" by pressing the **▲\▼** buttons and push the **PTT** key, or press the **MENU** button to move to the next feature setting.

SILENT OPERATION

 
Your radio has a **SILENT OPERATION** mode. In this mode, all "beeps" and "tones" are disabled.

To set **SILENT OPERATION**, press the **MENU** button until the display shows a "**bP**" icon. Select "on" or "**oF**" by pressing the **▲\▼** buttons and push the **PTT** key or **MENU** button.

EXTERNAL SPEAKER/MICROPHONE JACK

Your radio can be used with an optional external speaker/microphone or headset, freeing your hands for other tasks.

To use an optional speaker/microphone or headset:

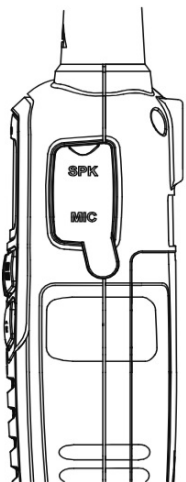

- Insert the plug(s) into the **SPK/MIC** jacks.
- Place the earbud into your ear, and adjust the mic into your desired position.

IMPORTANT: This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

IMPORTANT: Changes or modifications to this unit not expressly approved by **MIDLAND RADIO CORP.** could void your right to operate this unit. Your radio is set up to transmit a regulated signal on an assigned frequency. It is against the law to alter or adjust the settings inside the COMMUNICATOR to exceed those limitations. Any adjustment to your radio must be made by qualified technicians.

TROUBLESHOOTING GUIDE

PROBLEM	SOLUTION
No Power	- Check battery installation and/or replace batteries.
Cannot Receive Messages	- Confirm the radios have the same channel settings. - Make sure that you are within range of the other transceivers. - Buildings and other structures may interfere with your communication.
Radio is not responding to button presses	- Make sure key lock is not on (See Keypad Lock, Page 9). - Radio might need to be reset. Turn radio off then on.
Display is dim	- Recharge or replace batteries.
Charger not functioning	- Contacts on the bottom of the radio may require cleaning. - Ensure the outlet where the charger is plugged in is functioning properly. - Check that the battery pack is installed in the radio properly.

USE AND CARE

1. Use a soft damp cloth to clean the radio.
2. **Do not** use alcohol or cleaning solutions to clean the radio.
3. **Do not** immerse the radio in water.
4. Dry the radio with a dry lint-free cloth should it get wet.
5. Turn off the radio and remove the batteries during long-term storage.

If you have a problem which you believe requires service, please call first and speak with a service technician at [816-241-8500](tel:816-241-8500). Many problems can be remedied over the phone without returning the unit for service.

SPECIFICATIONS

Channels 22 FRS Channels +38 Privacy Codes

Operating Frequency UHF 462.5500 ~ 467.7125 MHz

Power Source 3 AAA Alkaline or 3.6V Rechargeable NiMH
 battery pack

FRS FREQUENCY CHART (MHz)

CH. No	CH. Freq.	CH. No	CH. Freq.		
1	462.5625	13	467.6875		
2	462.5875	14	467.7125		
3	462.6125	15	462.5500		
4	462.6375	16	462.5750		
5	462.6625	17	462.6000		
6	462.6875	18	462.6250		
7	462.7125	19	462.6500		
8	467.5625	20	462.6750		
9	467.5875	21	462.7000		
10	467.6125	22	462.7250		
11	467.6375				
12	467.6625				

* Channels 8~14 are low-power FRS channels

PRIVACY CODES FREQUENCY CHART (Hz)

Code	Freq.	Code	Freq.	Code	Freq.	Code	Freq.	Code	Freq.
1	67.0	9	91.5	17	118.8	25	156.7	33	210.7
2	71.9	10	94.8	18	123.0	26	162.2	34	218.1
3	74.4	11	97.4	19	127.3	27	167.9	35	225.7
4	77.0	12	100.0	20	131.8	28	173.8	36	233.6
5	79.7	13	103.5	21	136.5	29	179.9	37	241.8
6	82.5	14	107.2	22	141.3	30	186.2	38	250.3
7	85.4	15	110.9	23	146.2	31	192.8		
8	88.5	16	114.8	24	151.4	32	203.5		

LIMITED WARRANTY (United States and Canada)

Subject to the exclusions set forth below, Midland Radio Corporation will repair or replace, at its option without charge, any Midland FRS transceiver which fails due to a defect in material or workmanship within Three Years following the initial consumer purchase.

This warranty does not apply to water damage, battery leak, abuse or misuse of unauthorized accessories, unauthorized service or modification or altered products. Accessories have a 90 day warranty from date of purchase, including any chargers, microphones, and cables.

This warranty does not include the cost of labor for removal or re-installation of the product in a vehicle or other mounting.

ANY IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED AS SET FORTH HEREIN AND TO THE DURATION OF THE LIMITED WARRANTY, OTHERWISE THE REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MIDLAND BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING BUT NOT LIMITED TO NEGLIGENCE, GROSS NEGLIGENCE, BODILY INJURY, PROPERTY DAMAGE AND DEATH) FOR

DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR ACCESSORY, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS OR ACCESSORIES TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

For Product Purchased in the USA:

Performance of any obligation under this warranty may be obtained by returning the warranted product, prepaid freight, along with proof of purchase to:

**Midland Radio Corporation
Warranty Service Department
5900 Parretta Drive
Kansas City, MO 64120**

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state. Note: The above warranty applies only to merchandise purchased in the United States of America or any of the territories or possessions thereof, or from a U.S. Military exchange.

For Product Purchased in Canada:

Performance of any obligation under this warranty may be obtained by returning the warranted product, along with proof of purchase, to your place of purchase in Canada.


This warranty gives you specified legal rights. Additional warranty rights may be provided by law in some areas within Canada.

ACCESSORIES

Accessories can be purchased at midlandusa.com.

**AVP1**

 
- Over the Ear Headsets

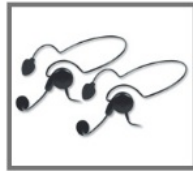**AVPH5**

- Behind the Head Headsets

**BATT3R**

 - Rechargeable Battery Pack

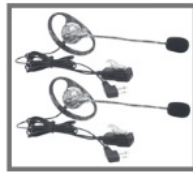**AVPH7**

- Camo Headsets with Boom Mic

**AVPH2**

- Closed Face Helmet Headset Kit

**AVP-H8**

- Acoustic Throat Mic

**AVPH3**

- Surveillance Headsets

**AVPH10**

- Shoulder Speaker Mic

**AVPH4**

- Wrap Around the Ear Headsets

MIDLAND®

X-TALKER*2-Way Radios**Weather Radios**Business 2-Way Radios***LXT / GXT***2-Way Radios**Emergency Crank Radios**CB Radios*

MIDLAND RADIO CORPORATION
5900 Parretta Drive
Kansas City, MO 64120

Call 816.241.8500

We'd love to hear from you! Let us know what you think of your new Midland product at



or by visiting us at midlandusa.com

Note: Features & Specifications are subject to change without notice. MIDLAND is not responsible for unintentional errors or omissions on its packaging.

Documents / Resources



[MIDLAND T51BLK X Talker Two Way Radios](#) [pdf] Owner's Manual

T51BLK X Talker Two Way Radios, T51BLK, X Talker Two Way Radios, Two Way Radios, Way Radios

References

- [▲ Midland | Two-Way Radios and Weather Radios – MIDLAND](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.