

# MIDO®

SWISS WATCHES SINCE 1918

## Automatic chronograph

### User manual



#### Contents [ [hide](#) ]

- [1 Display and functions](#)
- [2 Congratulations](#)
- [3 Use / Settings](#)
- [4 Care and maintenance](#)
- [5 Documents / Resources](#)
  - [5.1 References](#)

## Display and functions

1. Hour hand
2. Minute hand
3. Small seconds hand
4. Date display (according to model)  
Chronograph
5. 12-hour chronograph counter
6. 30-minute chronograph counter
7. 60-second chronograph counter
8. Stop/Start of chronograph
9. Return to zero of chronograph
10. Fast date corrector (according to model)

### **Crown with 2 positions:**

- I Running position and manual winding
- II Time setting with stop second

## **Congratulations**

We congratulate you on choosing an automatic chronograph from MIDO®, a Swiss brand among the most highly renowned in the world.

Meticulously designed, using only the highest quality materials and components, your chronograph is protected against impacts, temperature variations, water and dust. To ensure its perfect and accurate operation for many years, we advise you to closely follow the advice given in this user manual.

## **Use / Settings**

### **Chronograph function**

Press the Stop / Start push button (8) to start the timing operation.

Press the Stop / Start push button (8) again to stop the timing operation.

The timing operation restarts when you press the Stop / Start push button (8) again (time is added), or the two chronograph hands (6, 7) can be reset to zero by pressing the push button (9). This is only used to reset the chronograph hands to zero.

### **Setting the time**

Carefully pull the crown into position II; the seconds hand (3) stops at this point.

Turn the crown forwards or backwards until the hands display the correct time.

Once the hour hand passes the 12 o'clock position, you can see if it indicates midnight (the date changes at this point) or midday (the date does not change).

### **Fast date correction**

Important: Do not set the date between 8 pm and 2 am (the movement is in the process of changing the date at these times).

By pressing the corrector (10) repeatedly, move the disc forward until the desired date (4) is displayed. During this operation, your watch will continue to function normally, so you will not need to alter the time.

### **Care and maintenance**

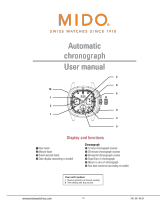
We would advise you to clean your watch regularly (except for the leather strap) using a soft cloth and lukewarm soapy water. After immersion in salt water, rinse it in fresh water and leave it to dry completely.

Do not leave it anywhere where it might be exposed to major temperature or humidity variations, direct sunlight or strong magnetic fields. To ensure that you receive the best possible service and the warranty remains valid, always consult an approved MIDO® dealer or agent. The high quality finish mechanism in your MIDO® watch will give you complete satisfaction for many years if properly cared for. However, we recommend that you have your watch checked every 3 to 4 years by your approved MIDO® dealer or agent.

[www.midowatches.com](http://www.midowatches.com)

245\_EN / 03.25

## **Documents / Resources**

	<p><a href="#">MIDO 245-en Automatic Chronograph [pdf]</a> User Manual</p> <p>245-en Automatic Chronograph, 245-en, Automatic Chronograph, Chronograph</p>
---	--

### **References**

- [User Manual](#)

🔍 245-en, 245-en Automatic Chronograph, Automatic Chronograph, Chronograph,

📁 MIDO MIDO

---

## Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

**Search:**

e.g. whirlpool wrf535swhz

**Search**

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.