



# Miele PWM 908 DP Professional Washing Machine Installation Guide

[Home](#) » [Miele](#) » Miele PWM 908 DP Professional Washing Machine Installation Guide 

## Contents

- [1 Miele PWM 908 DP Professional Washing Machine](#)
- [2 Machine dimensions -measurements in inches](#)
- [3 Installation -measurements in inches](#)
- [4 Washer-dryer stack -measurements in inches](#)
- [5 Installation -measurements in inches](#)
- [6 Machine dimensions -measurements in millimeters](#)
- [7 Washer-dryer stack -measurements in millimeters](#)
- [8 Technical data](#)
- [9 Installation and planning notes](#)
- [10 Documents / Resources](#)
  - [10.1 References](#)
- [11 Related Posts](#)




## Miele PWM 908 DP Professional Washing Machine



### Machine dimensions -measurements in inches


The distances between the machine and the wall are recommendations to help make it easier to carry out service work. If installation space is limited, the machine can also be pushed up against the wall.

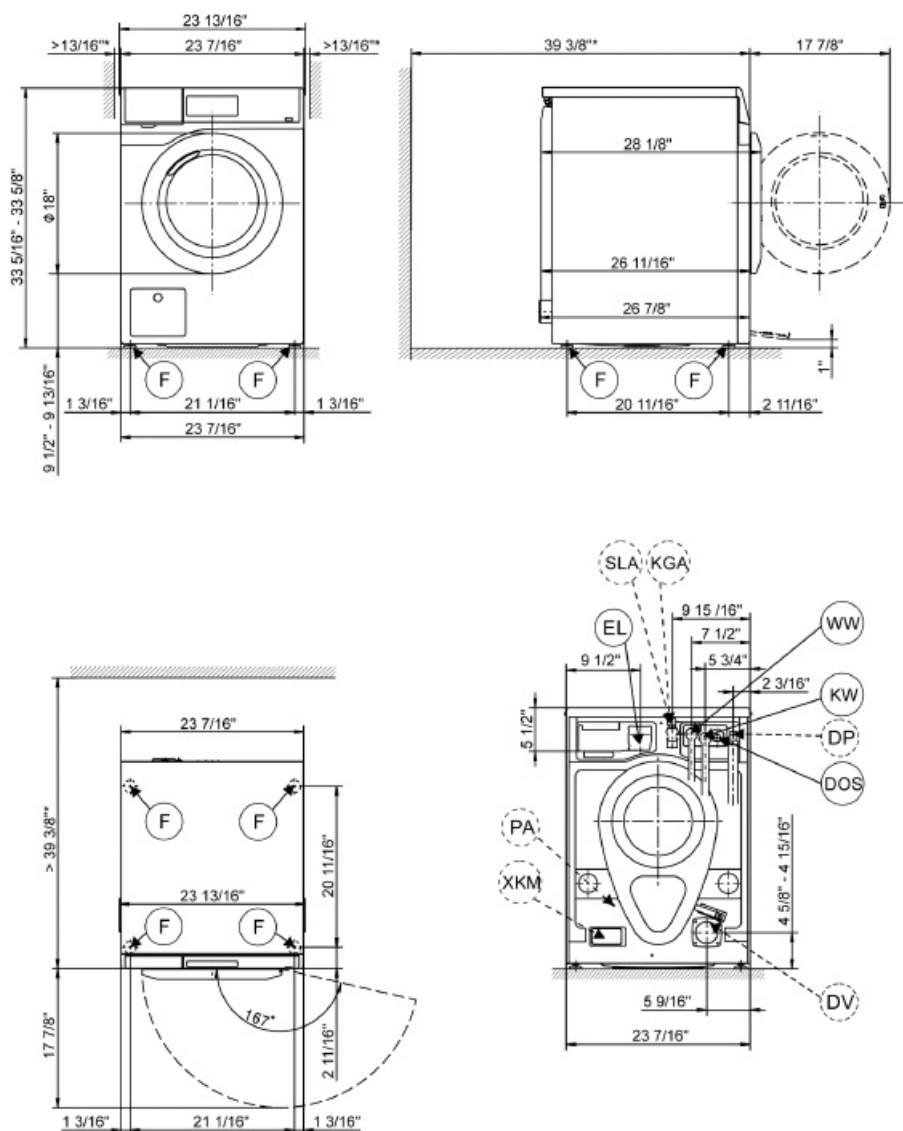

### Installation -measurements in inches


The distances between the machine and the wall are recommendations to help make it easier to carry out service

work. If installation space is limited, the machine can also be pushed up against the wall.

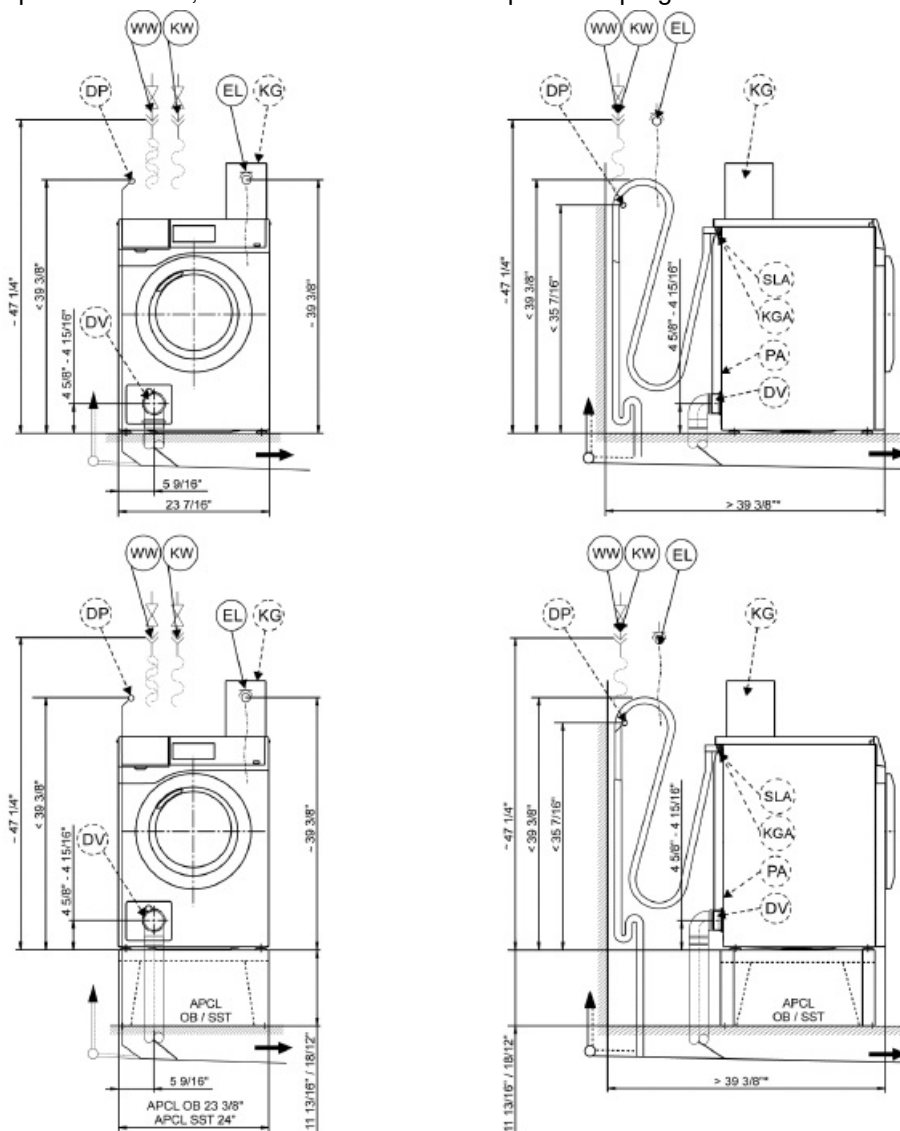


## Washer-dryer stack -measurements in inches

The distances between the machine and the wall are recommendations to help make it easier to carry out service work. If installation space is limited, the machine can also be pushed up against the wall.

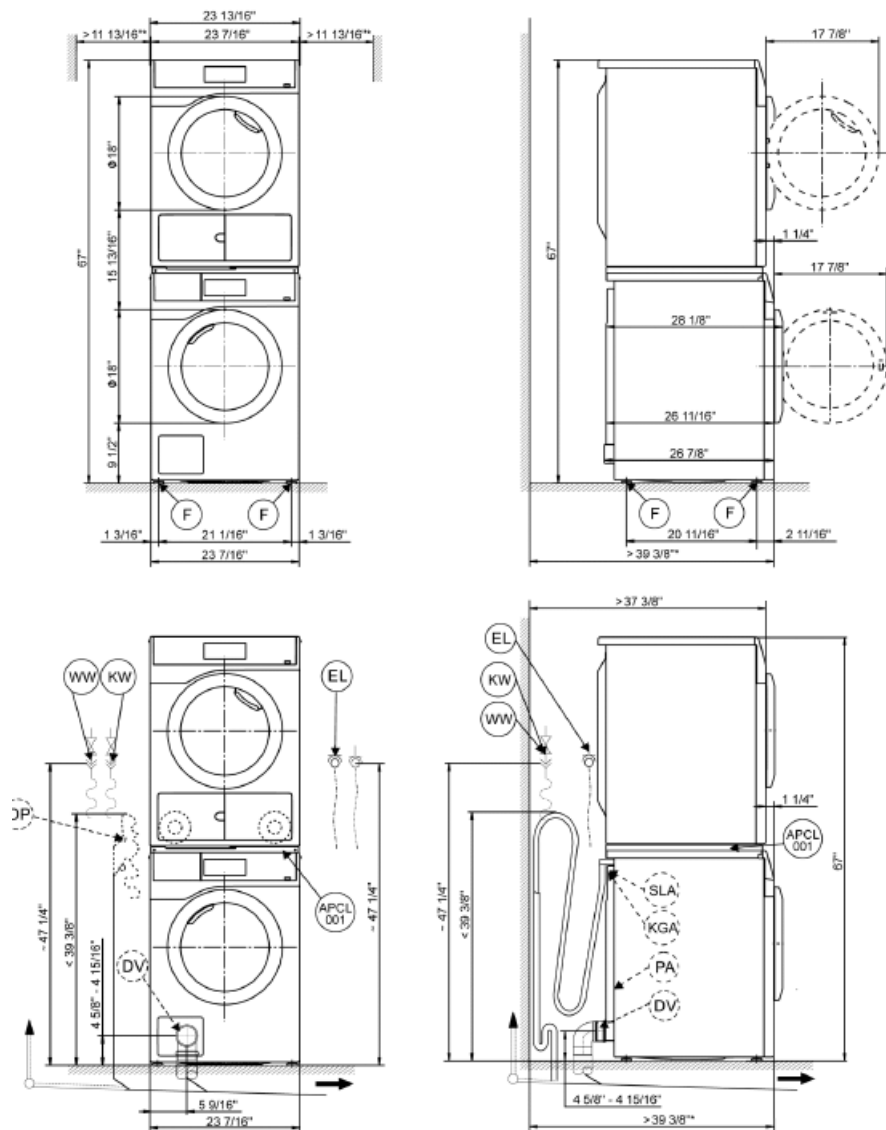


## Installation -measurements in inches

The distances between the machine and the wall are recommendations to help make it easier to carry out service. The distances between the machine and the wall are recommendations to help make it easier to carry out service.




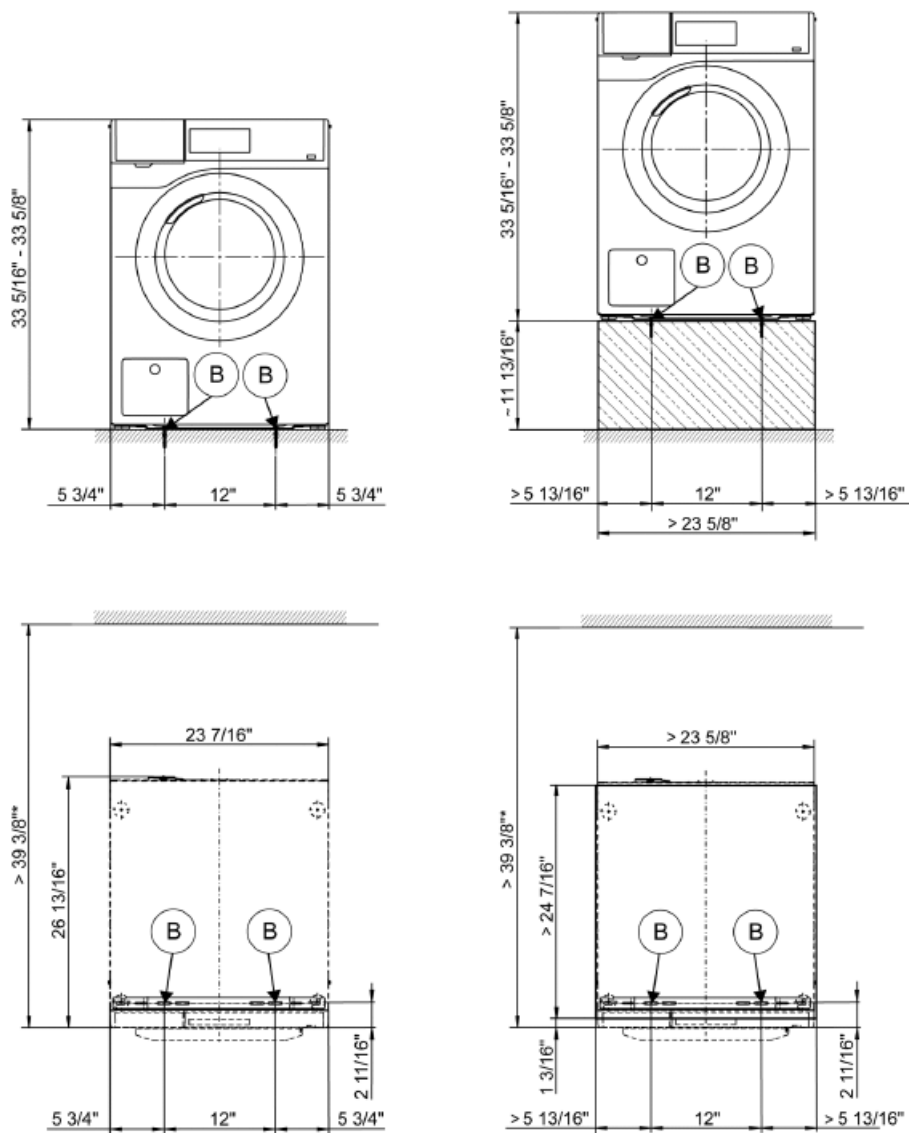


The distances between the machine and the wall are recommendations to help make it easier to carry out service work. If installation space is limited, the machine can also be pushed up against the wall.

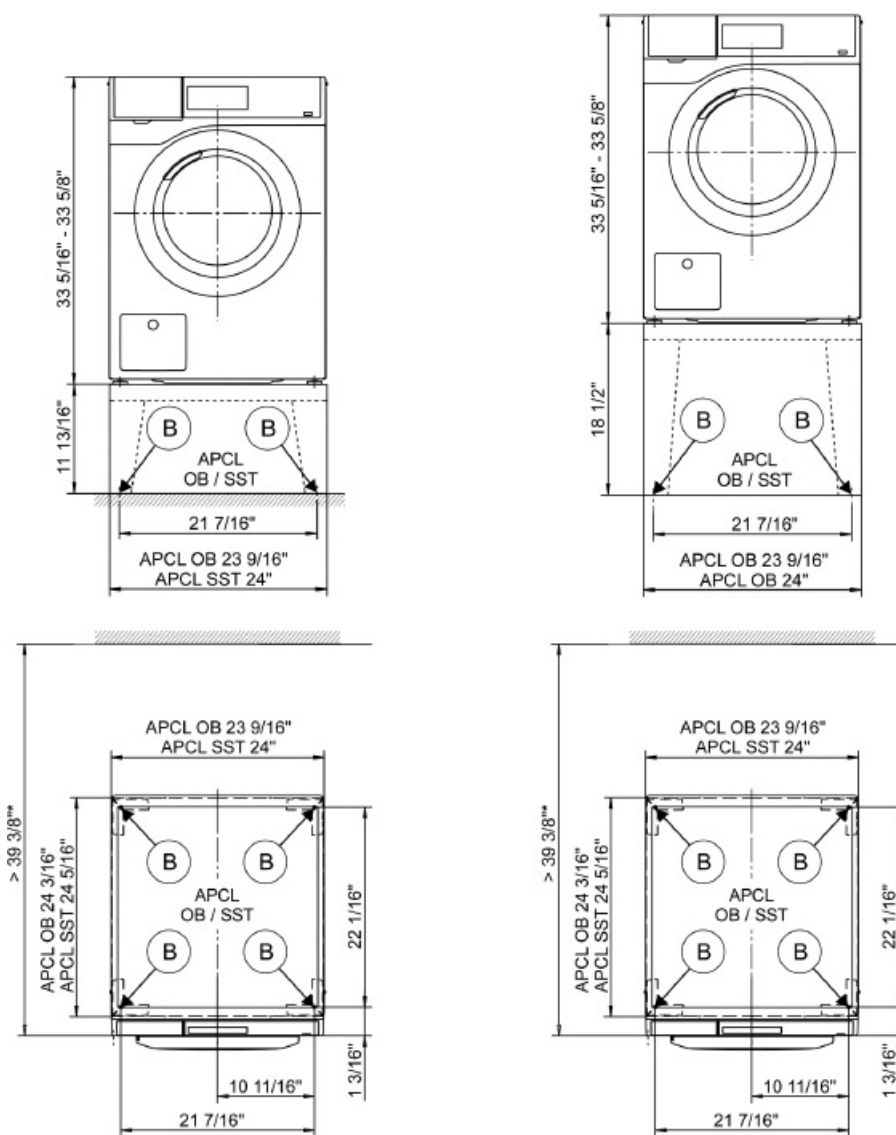


## Machine dimensions -measurements in millimeters

The distances between the machine and the wall are recommendations to help make it easier to carry out service work. If installation space is limited, the machine can also be pushed up against the wall.

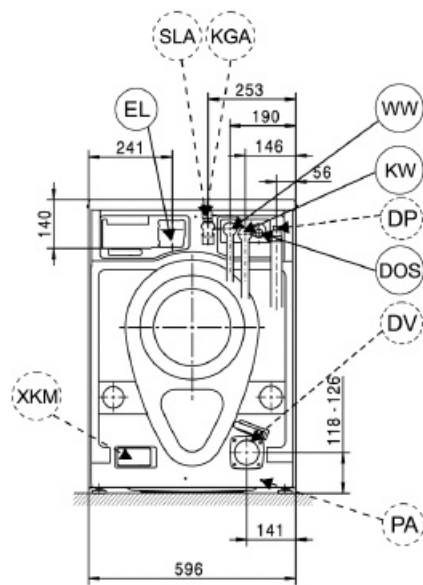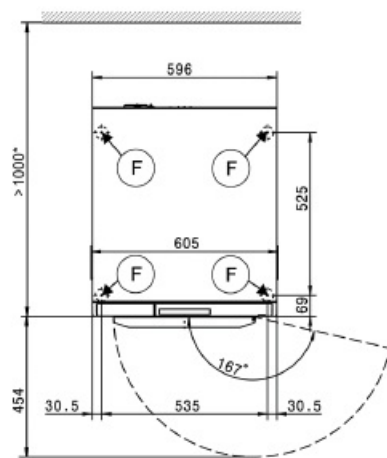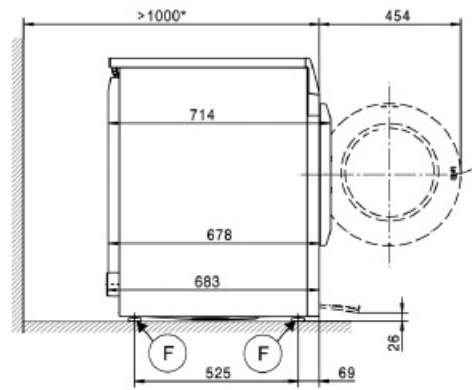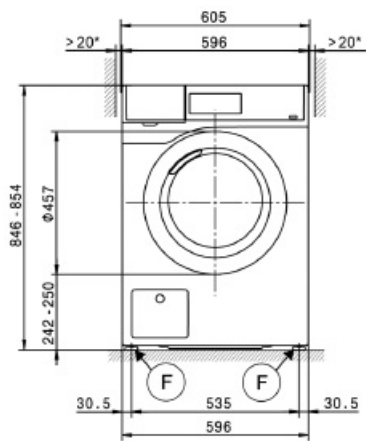


The distances between the machine and the wall are recommendations to help make it easier to carry out service work. If installation space is limited, the machine can also be pushed up against the wall.

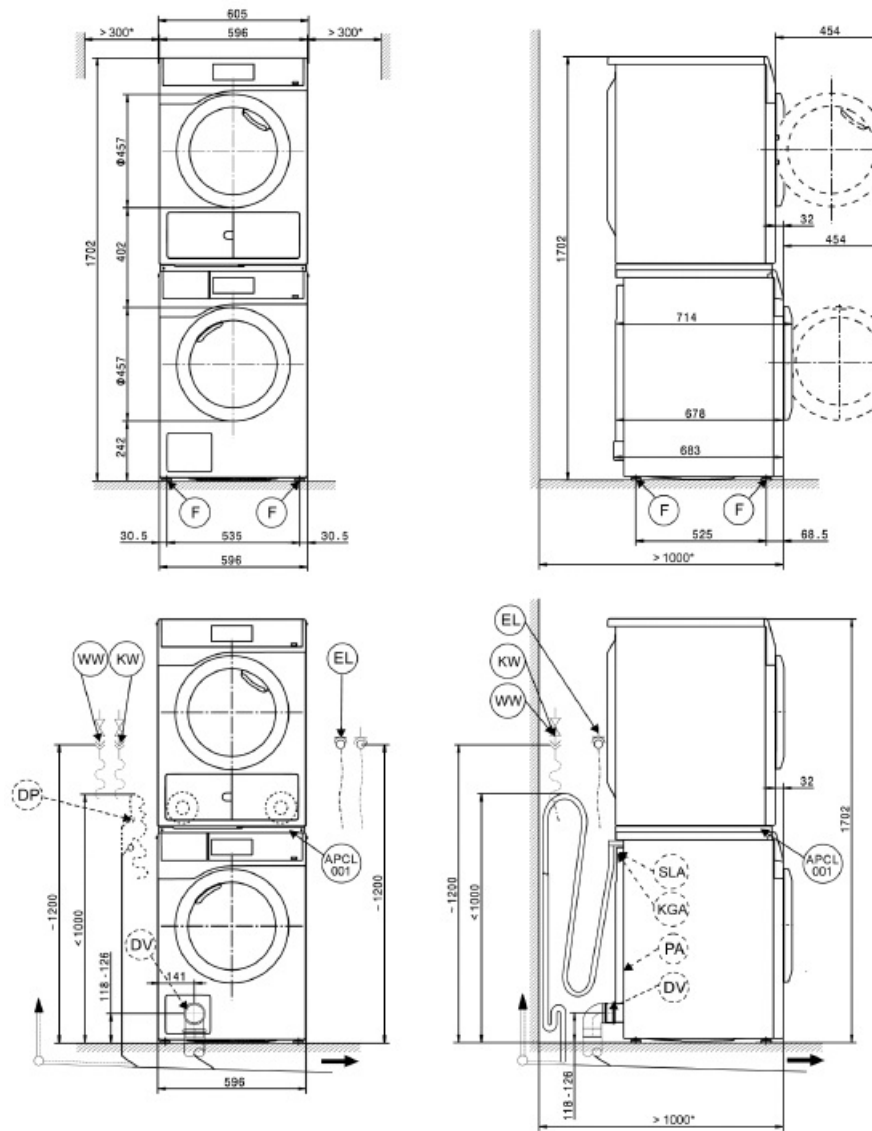


## Washer-dryer stack -measurements in millimeters

The distances between the machine and the wall are recommendations to help make it easier to carry out service work. If installation space is limited, the machine can also be pushed up against the wall.




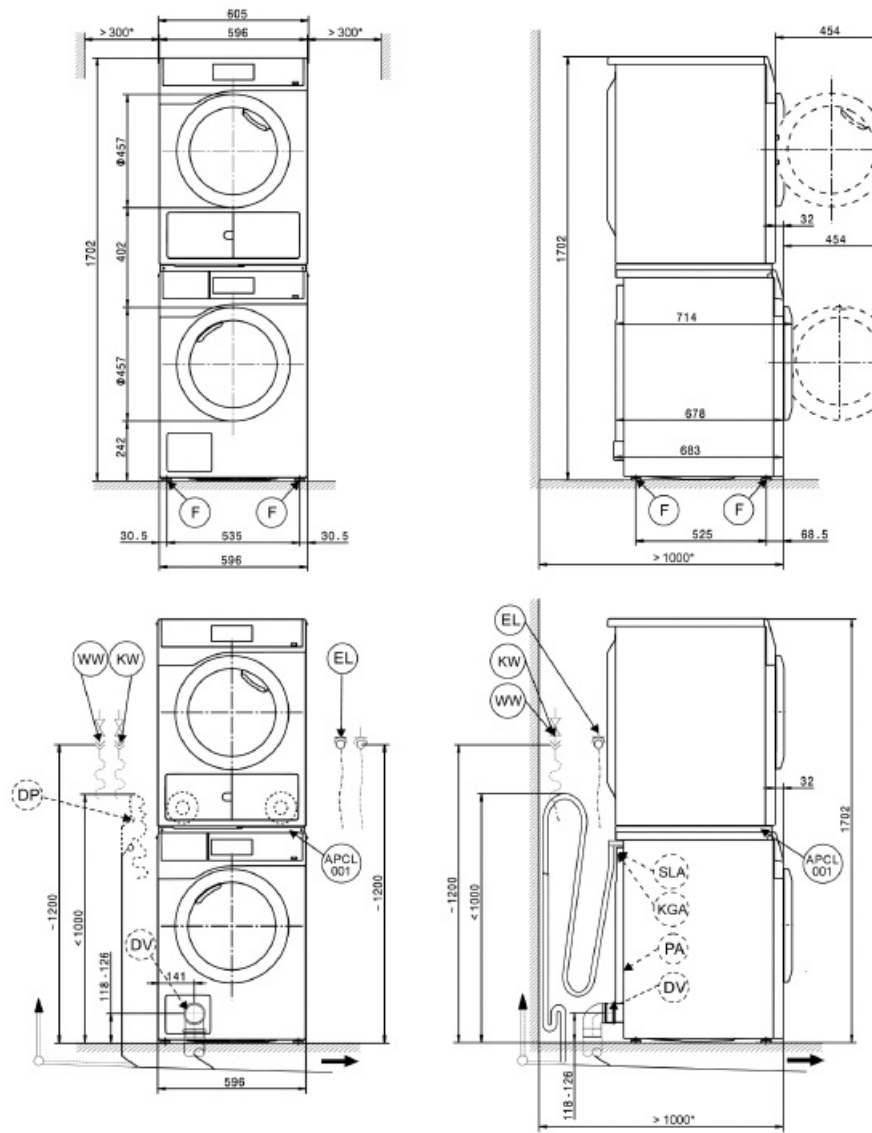

The distances between the machine and the wall are recommendations to help make it easier to carry out service work. If installation space is limited, the machine can also be pushed up against the wall.

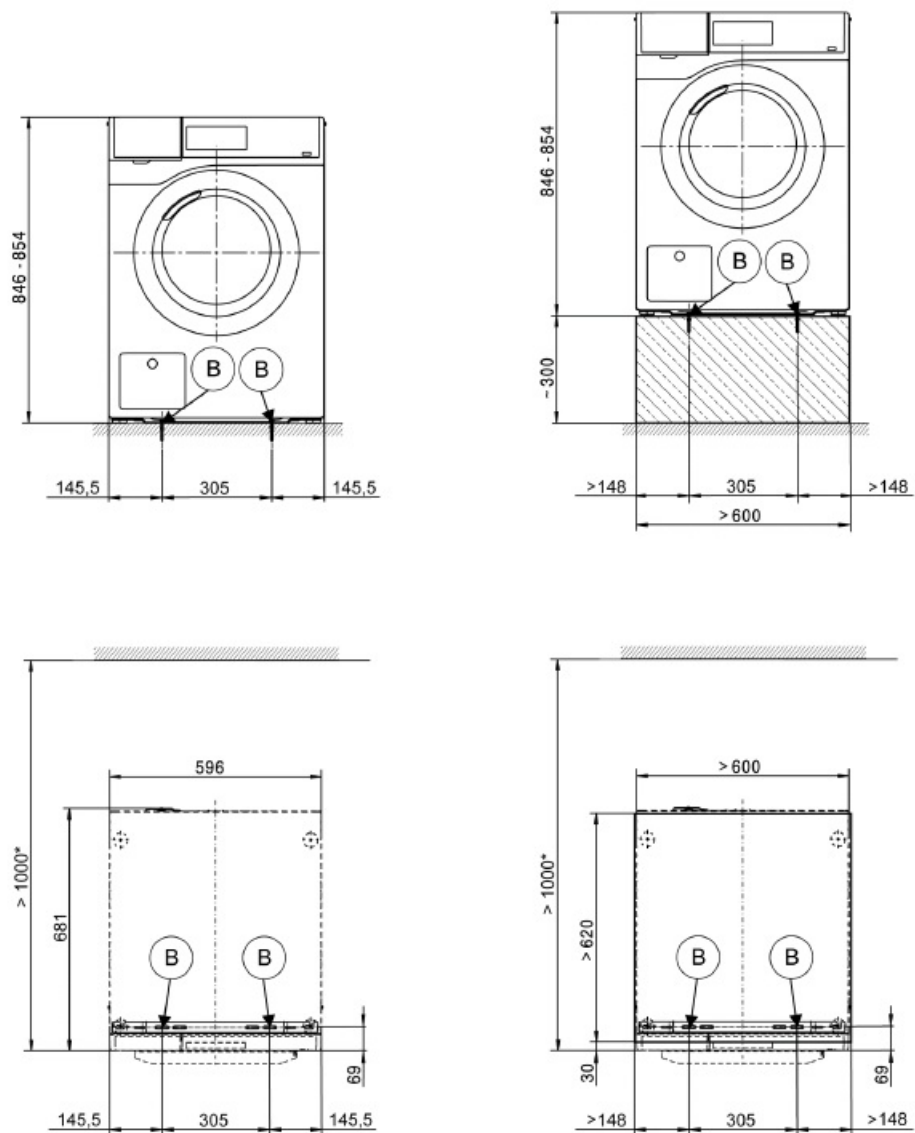

The distances between the machine and the wall are recommendations to help make it easier to carry out service work. If installation space is limited, the machine can also be pushed up against the wall.

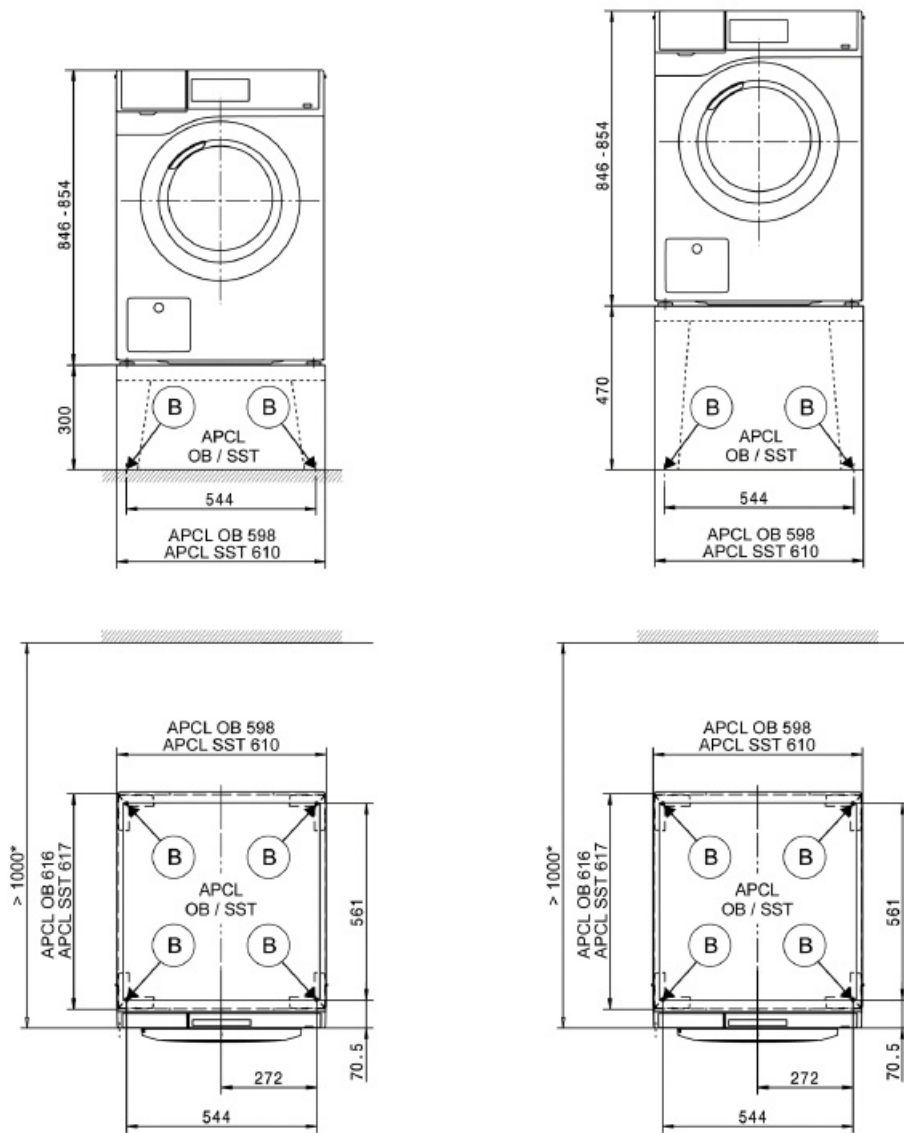

## Technical data

Technical data				
	<b>PWM 908 DP</b>		<b>PWM 908 DP</b>	
<b>Installation on machine feet ( F )</b>				
No. of machine feet	4	No.	4	No.
Machine foot, height-adjustable with thread	+5/16"		+8	mm
Machine foot diameter	1.57"		40	mm
<b>Anchoring ( B )</b>				

<b>Standard floor anchoring</b>				
Floor anchor kit (for 2 machine feet) with anchors	~		~	
Wood screws according to DIN 571	6 x 50	mm	6 x 50	mm
Rawl plugs (diameter x length)	8 x 40	mm	8 x 40	mm
<b>Anchoring of Miele Plinths</b>				
Accessory: Miele Plinth installation (fasteners included)	š		š	
Required anchor points	4	No.	4	No.
Wood screws according to DIN 571	8 x 65	mm	8 x 65	mm
Rawl plugs (diameter x length)	12 x 60	mm	12 x 60	mm
<b>Plinth floor anchoring (to be provided on site)</b>				
Machine installation on on-site plinth (concrete or masonry)	š		š	
Min. plinth installation footprint (W/D)	23 5/8" / 25 9/16"		600/650	mm
Wood screws according to DIN 571	6 x 50	mm	6 x 50	mm
Rawl plugs (diameter x length)	8 x 40	mm	8 x 40	mm
<b>Machine data</b>				
Overall machine dimensions (H/W/D)	33 15/32" / 23 13/16" / 28 7/64"		850/605/714	mm
Casing dimensions (H/W/D)	33 15/32" / 23 7/16" / 26 1 1/16"		850/596/678	mm
<b>Site-access dimensions (H/W)</b>				
Min. site-access opening (excl. packaging)	35 7/16" / 23 13/16"		900/605	mm
<b>Installation dimensions</b>				
Side gap	13/16"		20	mm
Recommended side gap – washer-dryer stack	11 13/16"		300	mm
Recommended distance to opposite wall from front of machine	39 3/8"		1,000	mm

<b>Weights and floor loads</b>				
Machine weight (net weight)	227	lb	103	kg
Max. floor load in operation	2,820	N	2,820	N
Max. floor load, static	1,380	N	1,380	N
Max. floor load, dynamic	1,365	N	1,365	N
<b>Emissions</b>				
Sound pressure level (in accordance with EN I SO 11204/11203)	<70	dB(A)	<70	dB(A)
Heat dissipation rate to installation site	250	W	250	W

## Installation and planning notes

### Installation requirements

The machine should only be connected to a power supply provided in accordance with all appropriate local and national legislation and regulations. In addition, all regulations issued by the appropriate utilities as well as standards relating to occupational safety and all applicable valid regulations and technical standards must be observed.

### Transportation and site access

The washing machine must not be moved without the shipping struts in place. Keep the struts in a safe place. They must be refitted if the machine is to be moved again (e.g., when moving house).

### General operating conditions

Ambient temperature in installation room: +36°F to +95°F (+2°C to +35°C).

Depending on the nature of the installation site, sound emissions and vibration may occur. Miele recommends having the installation site inspected and seeking the advice of a professional in instances where increased noise may cause a nuisance.

### Electrical connection

Depending on the model, the machine will be delivered with a wire with/without a plug. The machine may only be connected to an electrical system that conforms to national and local codes and regulations. This connection must be made by a qualified electrician. The data tag indicates the nominal power consumption and the appropriate fuse rating. Compare the specifications on the data tag with those of the electrical power supply. The machine can either be hard-wired or connected using a plug-and-socket connection in accordance with IEC 60309-1. Miele always recommends connecting the machine via a plug and socket so that electrical safety checks can be carried out easily (during repair or service work, for example). If the machine is hard-wired, a dual circuit breaker must be provided on site. When switched off, there must be an all-pole contact gap of at least 3 mm in the isolator switch (including circuit breakers, breakers, and relays according to IEC/EN 60947). The plug connector or isolator switch should be easily accessible at all times. If the machine is disconnected from the electricity supply, the isolator must be lockable or the point of disconnection must be monitored at all times. New connections, modifications to the system, or servicing of the ground conductor, including determining the correct fuse rating, must be carried out by a qualified electrician, as they are familiar with the pertinent regulations and the specific requirements of the electric utility company. References to cable cross-sections in the technical data refer only to the required power cord. Please consult relevant local and national regulations when calculating any other wire gauges.

### Coldwater connection

The washing machine should be connected to a domestic water supply in accordance with current local and

national safety regulations. Connection to the water supply should be carried out by a qualified plumber using a stopcock with a threaded union. If a stopcock is not available, the qualified plumber should connect the machine to the domestic water supply. A suitable connection hose with a threaded union is supplied with the machine. Longer hoses 8' 2 1/2" or 13' 1 1/2" (2.5 m or 4.0 m) in length are available from Miele Technical Service or from your Miele dealer as accessories.

### Hot water connection

THE same connection requirements as for cold water also apply to hot water (max. 158°F/70°C). A suitable connection hose with a threaded union is supplied with the machine. The hot water connection appliance also requires a cold water connection. In the event that hot water is not available on-site, the connection of the second hose must be made to a cold water supply. Alternatively, the hot water connection should be blocked using the enclosed blind stopper and the machine controls set to cold water intake. The required amount of hot water should be added to the cold water volume.

### Drain valve (depending on model)

The machine is drained using a motorized drain valve. It can be connected directly to the on-site drainage system (without a siphon) or via a floor drain (gully with odor trap). A vented drainage system is vital for unimpeded drainage. If on-site venting is insufficient, a vent kit (mat. no. 05 239 540) is available from your Miele dealer or Miele Technical Service. If several machines are connected to a single drain pipe, this should be sufficiently large to allow all machines to drain simultaneously.

### Drain pump (depending on model)


The suds are drained through a drain pump with a 1 m delivery head. For the water to drain freely, the hose must be installed free of kinks.

Drainage options:

1. Connected securely to a plastic drain pipe with a rubber nipple (there is no need to use a siphon).
2. Connected securely to a sink with a plastic nipple.
3. Connected securely to a floor drain.

### Connecting the drain hose to a sink drain outlet

The drain hose can be connected securely to a suitable sink drain outlet.

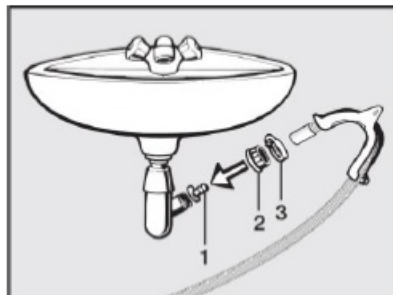

If required, the hose can be extended to a length of up to 16.4 ft (5 m). Accessories are available from your Miele dealer or Miele Technical Service. For a drain height of more than 3' 3 3/8" (1 m) up to a max. of 1.6 m), a replacement drain pump is available from Miele Technical Service or your Miele dealer.

### Equipotential bonding and grounding

If necessary, an equipotential bond with good contact connection must be provided in accordance with all appropriate national and local regulations. Material for equipotential bonding and grounding must be provided on site or using a kit available from Miele Technical Service.

### Peak load/Energy management

The machine can be connected to a peak-load or energy management system using an optional kit. When the peak-load function is activated, the heating is deactivated. A message appears in the display to inform you of this.

### **Liquid dispensing connection**

External liquid dispenser pumps with a “container empty” indicator can be used to dispense liquid detergents. The dispenser pumps can only be programmed with MDU. It is particularly important to follow the manufacturer’s instructions when using a combination of detergents, additives, and special-purpose products.

### **Payment system**

This washing machine can be equipped with a single-machine payment system as an optional accessory using an optional kit (XCI-Box / XCI-AD). The programming required for connecting a payment system can be carried out during the initial commissioning process. After initial commissioning, changes may only be carried out by your Miele dealer or Miele Technical Service.

### **Interface**


The machine can be retrofitted with an XKM 3200 WL PLT communication module. This module can be used as a WiFi or LAN interface. The LAN interface provided via the module complies with SELV (Safety Extra Low Voltage) in accordance with EN 60950. Connected appliances must also comply with SELV. The LAN connection uses a RJ45 connector in accordance with EIA/TIA 568-B.

### **Installation**

The machine must be installed on a perfectly smooth, level, and firm surface which is able to withstand the quoted loads. The floor load created by the machine is concentrated and transferred to the installation footprint via the machine’s feet. The machine should be leveled in both directions with the aid of adjustable feet.

### **Plinth installation**

The washing machine can be installed on a machine plinth (open or box plinth, available as an optional Miele accessory) or on a concrete plinth to be provided on site. The quality of the concrete and its strength must be assessed according to the machine load. Ensure that any raised concrete plinth is adequately bonded to the floor below. If the washing machine is installed on a concrete or masonry plinth, it must be secured using the anchors supplied with the machine. Otherwise, there is a risk of the washing machine moving about during spinning and falling off the plinth.

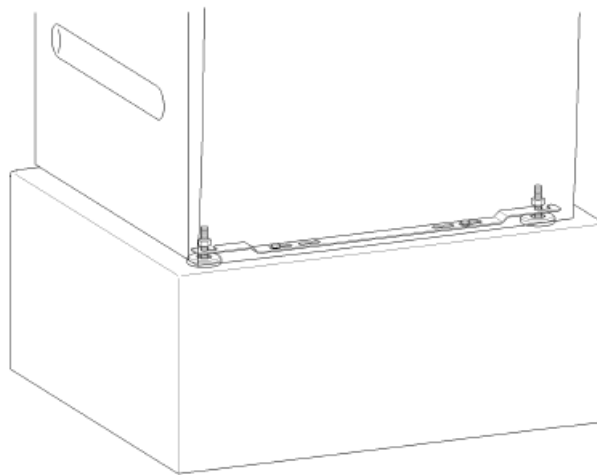


The anchors provided can be used to bolt the machine to the floor by both front feet. The fasteners provided are intended for use in bolting the machine to a concrete floor.

### **Washer-dryer stack**

The washing machine can be installed as a washer-dryer stack together with a Miele Tumble Dryer. A stacking kit (optional accessory) is required for this.

Installation of the stacking kit must be performed by Miele Technical Service or an authorized Miele service technician.

### **Documents / Resources**

 <p>Professional Plus Washing Machine</p> <p>PWM 908 DP</p> <p>Miele Professional Plus Washing Machine PWM 908 DP 1000 mm x 600 mm x 850 mm 1000 mm x 600 mm x 850 mm</p>	<p><a href="#">Miele PWM 908 DP Professional Washing Machine</a> [pdf] Installation Guide PWM 908 DP, Professional Washing Machine</p>
--	--

References

- [Miele Professional - Welcome to our website](#)