 




## mifa M680 Music Player User Manual

[Home](#) » [MiFa](#) » mifa M680 Music Player User Manual 

mifa M680 Music Player

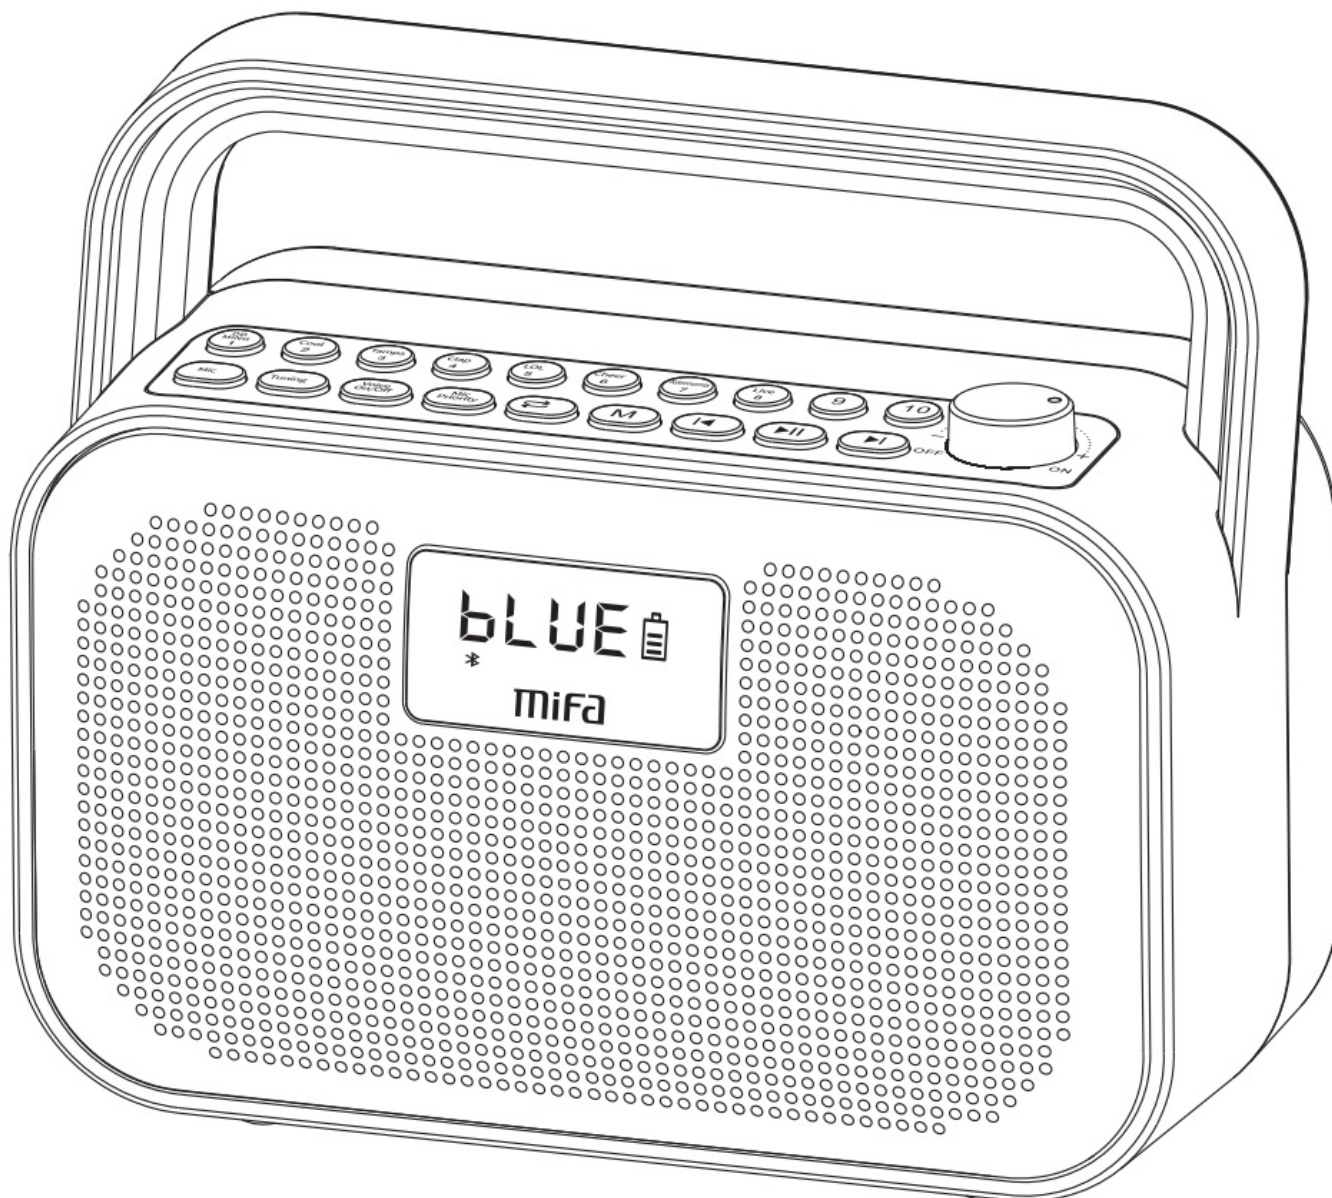

## Contents

- [1 Warnings](#)
- [2 Packing details](#)
- [3 Buttons' function](#)
- [4 Ports' function indicator](#)
- [5 Bluetooth connection](#)
- [6 Microphone function and connection](#)
- [7 Live connection](#)
  - [7.1 Remarks](#)
- [8 Technical Specification](#)
- [9 FAQ](#)
- [10 Documents / Resources](#)
  - [10.1 References](#)
- [11 Related Posts](#)

 
## Warnings




- Please carefully read this user manual first.
- For the first use, a full follow is recommended.
- Please use and store the product at room temperature/normal atmospheric temperature.
- Do not throw and drop the product to avoid damages.
- Do not use this product near a heat source, such as radiators, heat regulators, stoves or other heat generating devices (including amplifiers) .
- Do not plug the opening of the Music Player, do not plug the object into the Music Player vent or slot
- Do not throw it to avoid the damage caused by falling.
- Please use charger with the rated voltage of the Music Player charger.
- If the connector does not match your device, please contact the vendor.
- Please turn the Music Player to the proper volume to avoid damage to your hearing.
- Regardless of any cause of the equipment damage, it must be repaired promptly by professional maintenance personnel, unauthorized dismantling will invalidate the warranty.
- If the battery is improperly replaced, there is a risk of explosion. Only the same or equivalent type of battery can be replaced.
- Warning that batteries (battery packs or battery packs) should not be exposed to conditions such as sunlight, fire, or similar overheating.

## Packing details

- **M680 Music Player 1pc**

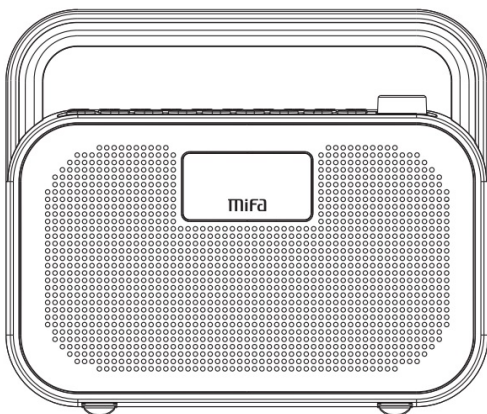


- **Wireless Microphone 1pc**

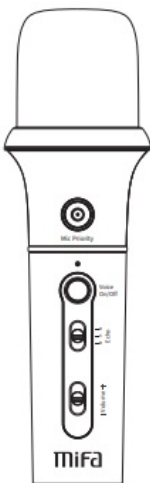 


- **User manual 1pc**



 
- **Micro USB cable (Charging) 1pc**

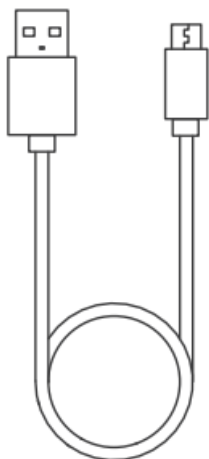

- **USB Type-C Charging cable 1pc**

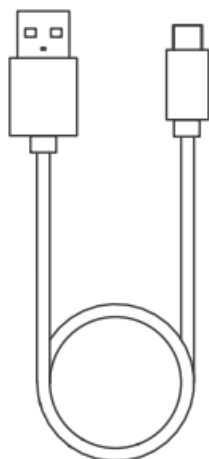 

- **Live/Audio cable 1pc**

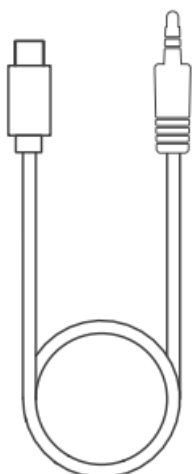 

**Buttons' function**

### 1-10 Numbers

Under non microphone status : Press to choose the track you want to play.  
Under the status of connected with microphone: Choose sound effects for webcast from 1-7. and choose sound effects for microphone from 8--10

**Live:** Got different sound effects from microphone

Press: got different styles between (original, Karaoke, shouting, violence) the default is original sound

### Mic :

Short press to turn on /off the microphone, default is on. It will automatically turn off if there is no operation in 10 minutes.

Press and hold: Wireless microphone pairing

### Tuning

 
Press to choose which kind vol. you want to adjust (main vol., bass, treble, mic vol., echo vol., guitar vol., webcast vol. )  
Then, rotate the knob to adjust, after 6s, got the needed sound levels

### Voice On/off

Voice and accompanying music constitute a complete song.  
Press: eliminate or resume the voice

### Mic Priority

Press: get a mode of weakening the music vol. and stand out the microphone speaking, press again to resume

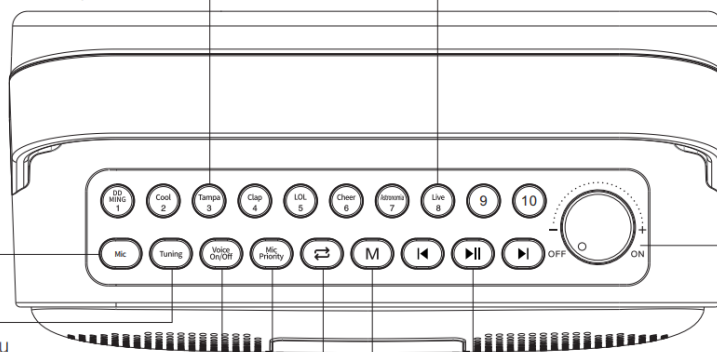

### Power on/off

#### Vol.up/down

Rotate clockwise: power on/vol.up  
Rotate anticlockwise: power off/vol.down

### Playback

Press: play and pause  
Press and hold: Bluetooth disconnected / reconnected

### Mode Key

Press: shift playing modes(Bluetooth, USB disk, TF card, Aux IN)  
Press and hold: disconnect the UHF microphone  
Three press: enter UHF pairing mode

### Looping play

Press: shift single loop and all loop playing

## Ports' function indicator

### USB disk port

Insert an USB disk, the Music Player will shift to play music from the USB disk

### TF card port

Insert a TF card, the Music Player will shift to play music from the TF card

### Earphone output

- 1.) insert a 3.5mm earphone can get output function
- 2.) under webcast, insert a 3.5mm earphone can get monitoring function

### Wired Mic Port


Support 6.35mm wired microphone

### Guitar port

Support 6.35mm electric guitar

### Three in one port

 - 1.) Charging port
- 2.) Webcast port connect to a smart phone
- 3.) Aux input

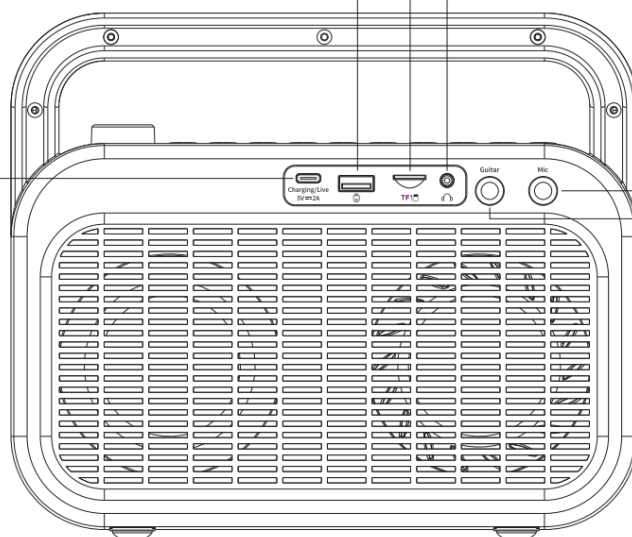

## Bluetooth connection

### 1. Power on

Rotate knob clockwise will enter Bluetooth pairing mode, The word "BLUE" is flickering on the display.

 
### 2. Bluetooth connecting

Go to smart phone's Bluetooth setting page, Search and tap to connect under the pairing name of Mifa\_M680

The word "BLUE" stays on the display.

### 3. Press and hold can disconnect or reconnect the current smart phone.



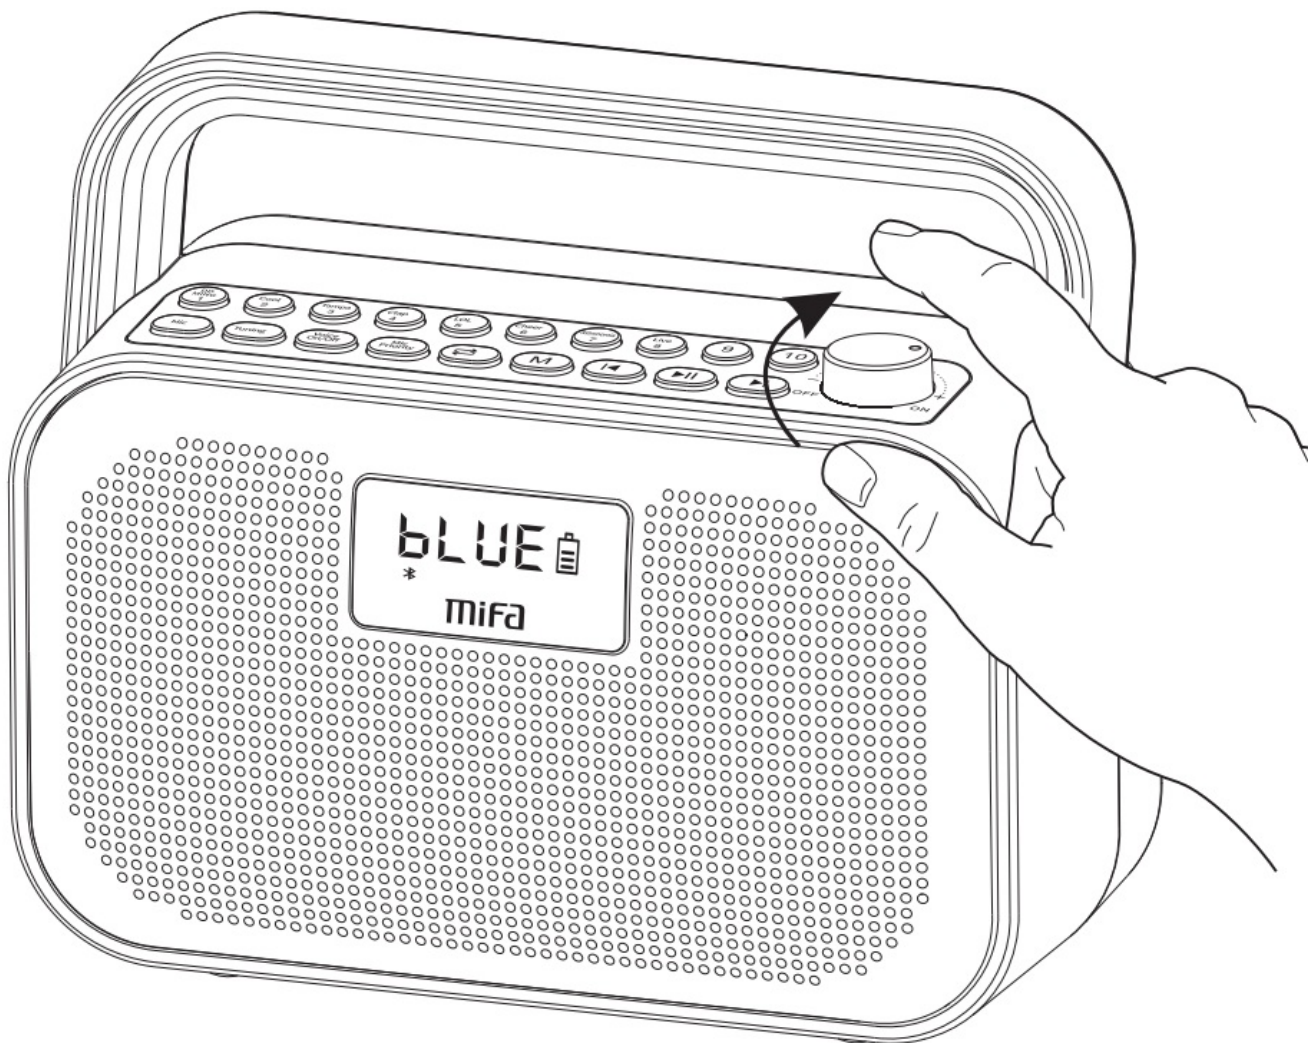


## Microphone function and connection

Press and hold  
Turn on /off microphone  
Press  
Mic priority  
Charging  
Red light is on  
Full Charged  
Red light is off

Press: eliminate or resume voice

Echo adjustment

 
Microphone vol. adjustment

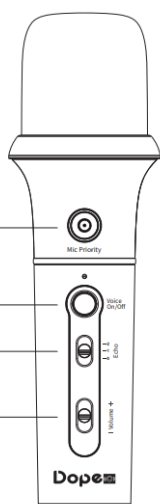

### Wireless microphone pairing

- 1, Power on the music player, press and hold the “Mic” button, it will prompt “UHF pairing”.
- 2, Power on the mic, press and hold the two buttons of “Mic priority” & “Voice on/off” at the same time till the blue light flashes. Then M680 will connect the mic via UHF.
- 3, It will indicate “UHF connected” after connected successfully.
 
## Live connection

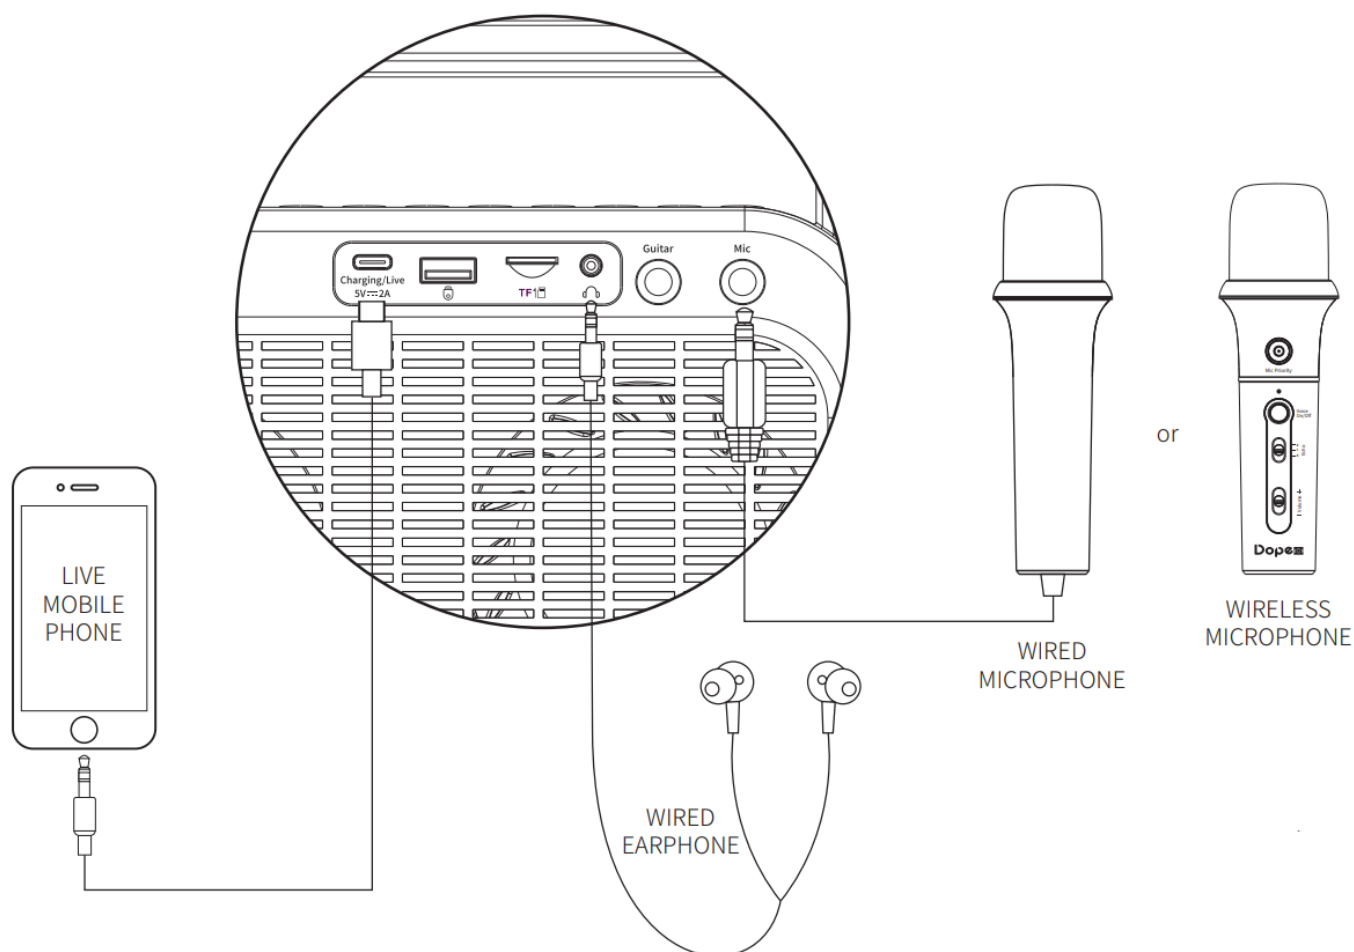

## Remarks

1. Have to connect microphone before having live streaming
2. Have to connect microphone before having sound effects of pressing the buttons from 1–7
3. Accompanying music can be from the playback of Bluetooth, USB disk, TF card

## Technical Specification

 
|                     |   |
|---------------------|---|
| <b>Basic</b>        |   |
| Type                | Music Player                                    |
| Storage             | Up to 32GB TF card and USB disk                 |
| Power supply        | Built-in 7.4V/3600mAh lithium battery           |
|                     | Recommend DC 5V-2A adapter to charge            |
| <b>Technical</b>    |   |
| Trumpet             | 3 inch Full Range Trumpet x 2 90mm radiator x 2 |
| Frequency response  | 70Hz~18KHz                                      |
| Bluetooth version   | 5.0   |
| Vol. adjustment     | Knob  |
| Bass/treble dustmen | Press tuning button and rotate knob to adjust   |
| USB Version         | 2.0   |
| Audio formats       | Supports: MP3, WMA, WAV,APE, FLAC               |

**Product Size** 235×198×112mm


**Product weight** 1745g±10g Including built-in Lithium battery



235mm

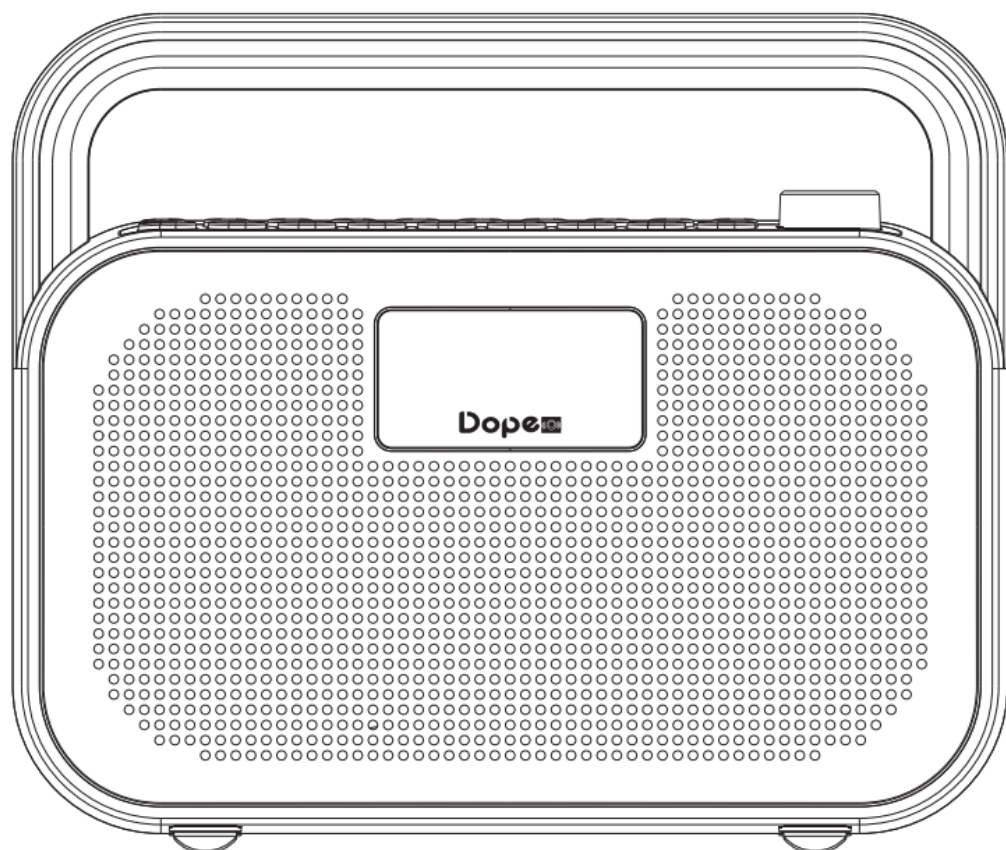

198mm

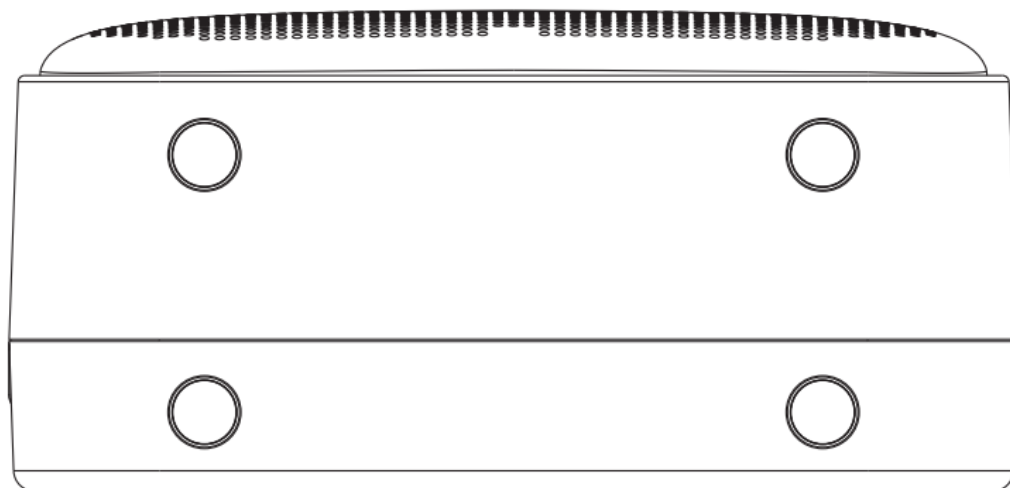 


112mm

FAQ

| FAQ                                    | Recommended Solutions   |
|--|---|
| Can not pair                           | 1.) Restart M680  |
|  | 2.) Input"0000" if need pin code  |
| Discontinuity                          | 1.) Check whether it is under effective distance(10m)<br>2.) Or any barrier stop the signal |
| Fail to play with USB disk and TF card | 1.)Ensure the storage of USB disk & TF card are FAT32 format                                |
|  | 2.)Ensure the aduio formats are MP3, WMA, WAV,APE and FL                                    |
| No Sound                               | Check whether it is at pause status or minimum vol.   |
| Microphone no sound                    | 1.)need connected wireless mic or wired mic well  |
|  | 2.)Check whether it is at minimum vol.  |
| Two different sound during we bcast    | Try to take off the monitoring earphone   |

# MiFa

 **Documents / Resources**
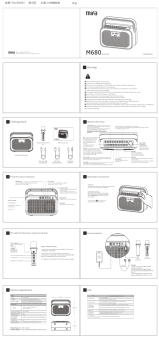
|  |   |
|--|---|
|  | <p><a href="#">mifa M680 Music Player</a> [pdf] User Manual<br/>M680, Music Player, M680 Music Player, Player</p> |
|--|---|

References

- [🌐 Home - Mifa-Player](#)