 




MiFa F50 Portable Speaker User Manual

[Home](#) » [MiFa](#) » MiFa F50 Portable Speaker User Manual 

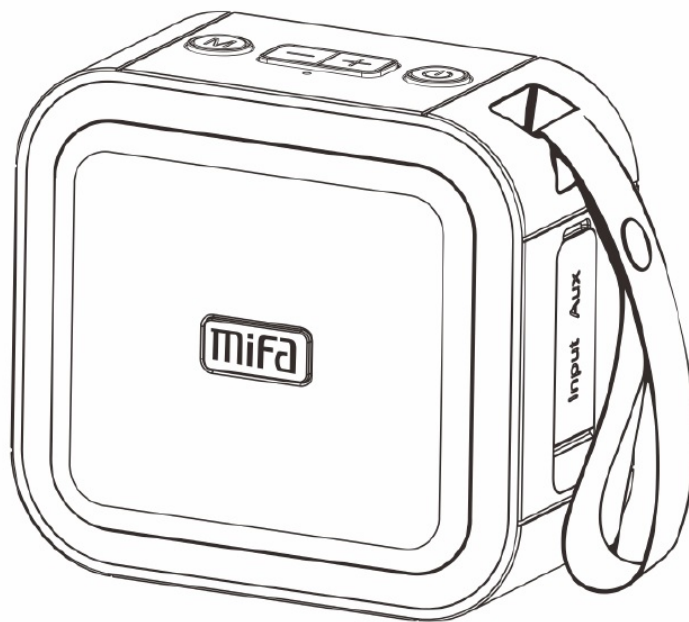

Contents

- [1 F50 SPEAKER USER MANUAL](#)
- [2 1. Warning!](#)
- [3 2. Packing list](#)
- [4 3. Key Functions](#)
- [5 4. Ports Functions](#)
- [6 5. Bluetooth Connection](#)
- [7 6. Specifications](#)
- [8 7. Trouble Shooting](#)
- [9 Related Posts](#)

 
1. Warning!

- To ensure proper use and trouble-free operation, please carefully read this user manual first.
- For the first use, a full charge is recommended.
- Please use and store the product at room temperature.
- Do not throw and drop the product to avoid damages.
- Do not expose the product to fire, high temperature, direct sunlight, etc.
- Do not use organic solvents or other chemicals to clean the product.
- Do not allow small particles to get into the product.
- Please keep volumes of the speaker moderate to avoid temporary or permanent hearing impairment.
- Do not disassemble the product, or make any modifications to the structure or any parts of it.
- Keep the product out of children's reach.
- If the battery is not properly replaced, there will be an explosion accident, which can only be replaced with the same type of battery.
- Batteries (battery packs) can not be exposed to such conditions as sunshine, fire or similar overheating conditions.


2. Packing list



1 × Bluetooth Speaker

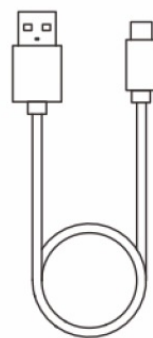

1 × USB Type-C Charging Cable

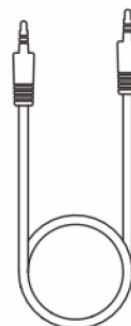 


3. Key Functions

Adjust Button of Light: Double-click the button to adjust the light in turns: Turn on the LED light and it is in the flashing mode by default → Gradient mode → Turn off the light

Short Press: Decrease volume
Long Press: Play previous song

 Short Press: Increase volume
Long Press: Play next song

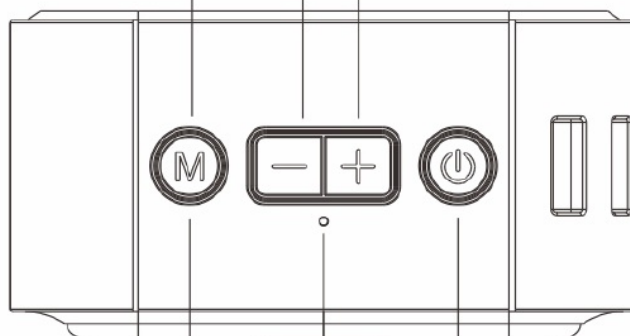

Mode Button: Short press to switch the mode in the powered-on status. If it is inserted with a Micro SD card and an audio cable, modes switch in turns: Bluetooth mode → Micro SD card mode → Aux-in mode

Bluetooth Disconnection: Press and hold the button for 2 seconds to disconnect the paired device and the speaker enters pairing mode.

Power Button: Press and hold the button for 2 seconds to turn on or turn off; short press to play or pause.

Call Answer Button: Short press to answer or hang up; long press to reject the call.



 
LED Indicator

LED light flashes quickly when power on and pairing, flashes slowly after successfully paired.

LED light stays on while playing; flashes slowly when playing is paused.

LED light flashes rapidly at the max / min volume.

4. Ports Functions

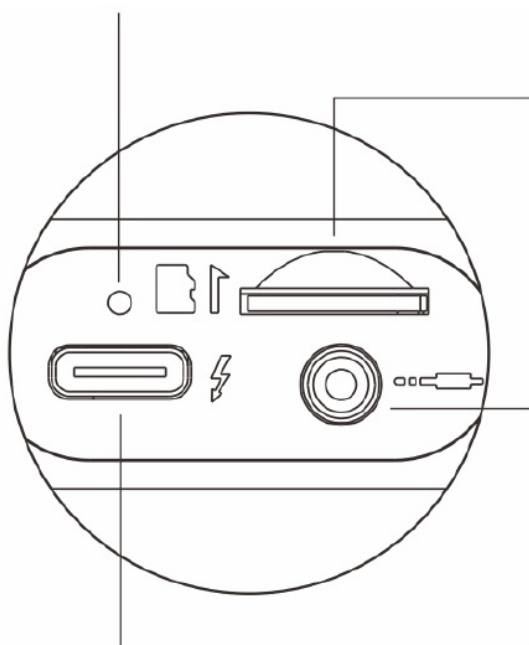

Micro SD Card Slot

In the powered-on state, insert a Micro-SD card, it will play the music stored in the card automatically after beeps.

Aux-in Jack

Inserted an audio cable in the powered-on state, it will enter the Aux-in mode automatically.

USB Type-C Charging Port

Use a DC 5V / 1A adaptor to charge the Speaker.

5. Bluetooth Connection

1. Turn on the speaker

Press and hold the power button for 2 seconds to turn on the speaker with a prompt sound. And the white LED light flashes indicating it is in the pairing mode.

2. Connect it to your device


Turn on the Bluetooth of your device and select Mifa_F50. Once the connection is completed, it will beep and the white LED light will stay on.

The speaker will connect to the last-connected device automatically once the device's Bluetooth is turned on.



6. Specifications

Technical Parameters	
Speaker Type	Portable Bluetooth Speaker
Loudspeaker	50mm full range speaker
Audio Input	Bluetooth, Micro SD Card, Audio-in
Supported Storage	Up to 32 GB storage device
Bluetooth Version	Bluetooth 5.0
Bluetooth Range	10 Meters
Functions	
Support voice chat or phone call with the built-in mic	
Supported Media Type	FLAC, WAV, WMA, Mp3

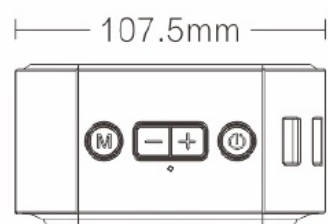 

Size: 107.5 * 98.3 * 56.7 mm

Weight: 497g (including the built-in Lithium battery)

7. Trouble Shooting

FAQ	Solutions
Not able to connect to your device	1. Restart the speaker and try again
	2. If your device requires a Pin Code, please enter 0000
Keeps cutting out when playing	Please ensure the speaker is within the operating range and there are no obstacles between the speaker and the device
Not able to play the music in Micro SD card	1. Please ensure the format of the Micro SD card is FAT32. It only supports FAT32 Micro SD card 2. Please ensure the formats of the music files are FLAC, WAV, WMA or MP3
No sound when playing	1. Please adjust the volume of the speaker 2. Please adjust the volume of your device 3. Please check if the speaker is paused
No sound in AUX-in mode	Please ensure the audio cable is connected well
Not able to turn on	Please try to charge the speaker for about 3 hours
No respond to any operation	Please try to reset the speaker by pressing the reset button in the charging indicator jack

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet or a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

FCC ID: 2AXOX-F50

MiFa F50 Portable Speaker User Manual – [Original PDF](#)

MiFa F50 Portable Speaker User Manual – [Optimized PDF](#)