

MIFARE QR Code proximity reader User Manual

Home » MIFARE » MIFARE QR Code proximity reader User Manual

MIFARE QR Code proximity reader User Manual



Contents [hide

- 1 Introduction
- 2 Documents /

Resources

3 Related Posts

Introduction

ON-PQ510M0W34 is a proximity reader which reads ISO 14443A contactless card/key tag and QR code then send out some standard data format for connecting to Wiegand input of the access control systems. The users may select the suitable models for connecting to dedicated controller PC for various applications.


Specification


RFID frequency	13.56KHz								
Applicable cards	Mifare 14443A S50/S70								
	Card	Max. 6cm							
Reading range	Tag	Max. 2.5cm							
	QR code	0~16cm							
Output format	Wiegand 34 bits	Wiegand 34 bits							
Power input	12 VDC	VDC							
Standby / Operating current	128mA±10% @ 12 VDC 140mA±10% @ 12 VDC								
Flash	Yellow (Power On)								
LED	Red (Scanning)								
Buzzer	Scanned								
Material	ABS								
Dimensions(L) ×(W) ×(H)	125 x 83 x 27mm / 4.9 x 3.3 x 1.1inch								
Operating temperature	-10°C~75°C								
Storage temperature	-20°C~85°C								

• Installation Guide

- Drill a 8 mm hole on the wall for passing the cable.
- Drill two 5 mm holes to fix the reader on the wall with provided screws.
- Please make sure to connect wires correctly with the access controller.
- Please use linear (not-switching) type power supply that is isolated from other devices.
- Once you use a separate power supply for the reader, a common ground should be connected between the reader and the controller system.
- For signal transmission, a shielding cable connecting to the controller will reduce the interference from the external environment.

• Dimension: Unit:mm[inch]

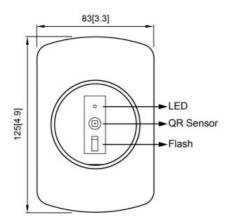


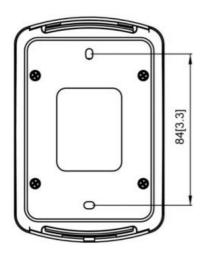


• Wire configuration

Function											
J1											
Wire No	Color	Function									
1	Brown	+12V									
2	Red	GND									
3	Orange	DATA0									
4	Yellow	DATA1									
5	Green	_									
6	Blue	_									
7	Purple	_									
8	Gray	_									

Data formats

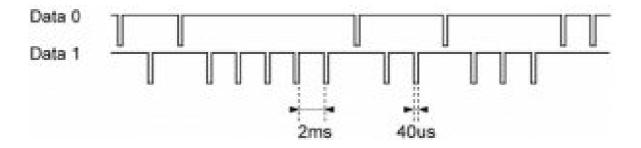

Wiegand 26 bits output format

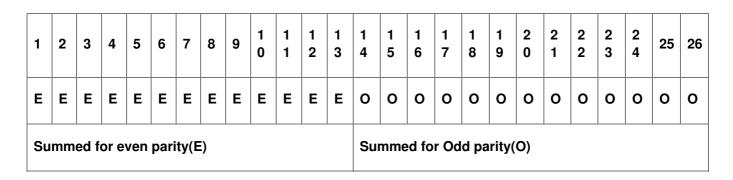

Even parity "E" is generated by summing from bit1 to bit13; Odd parity "O" is generated by summing from bit14 to bit26.

Wiegand 34 bits output format

1	2	3	4	5	6	7	8	9	1 0	1	1 2	1 3	1 4	1 5	1 6	1 7	1 8	1 9	2 0	2 1	2 2	2	2	2 5	2 6	2 7	2 8	2 9	3
С	С	С	С	С	С	С	С	С	С	С	С	С	С	С	С	С	С	С	С	С	С	С	С	С	С	С	С	С	С
E	E	Е	Е	Е	E	Е	Е	E	Е	E	Е	Е	Е	Е	Е	Е	0	0	0	0	0	0	0	0	0	0	0	0	0
Su	Summed for even parity(E)									Summed for Odd parity(O)																			

C= Card number

Even parity "E" is generated by summing from bit1 to bit17; Odd parity "O" is generated by summing from bit18 to bit34.



MIFARE QR Code proximity reader [pdf] User Manual QR Code proximity reader, PQ510M0W34

Manuals+, home

privacy