

Migipaws Touch Activated Flapping Chirping Lizard Kitten Toy with Catnip User Manual

Home » Migipaws » Migipaws Touch Activated Flapping Chirping Lizard Kitten Toy with Catnip User Manual



Migipaws Touch Activated Flapping Chirping Lizard Kitten Toy with Catnip User Manual



Contents

- 1 COMPONENTS
- 2 CHARGE
- 3

OPERATINGINSTRUCTIONS

- **4 MAINTENANCE**
- **5 CAUTION**
- **6 IMPORTANT**
- **7 SPECIFICATION**
- **8 SIZING INFORMATION**
- 9 Documents / Resources
 - 9.1 References
- **10 Related Posts**

COMPONENTS

A Plush cover (quantity 1)



B Movement machine (quantity 1)




Data cable (quantity 1)



CHARGE

1. Tear open the velcro of LIZARD belly and take out the Movement machine, then find the TYPE-C charging port of the movement machine..

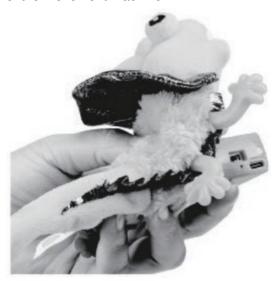

2. Use the TYPE-C cable to charge the movement machine, and when the red indicator light is on, it means the movement machine is being charged..



OPERATINGINSTRUCTIONS

Step 1

Pluck the velcro of LIZARD belly and take out the movement machine.



Turn the button part of the movement machine to ON, the LIZARD tail will swing up and down, then the toy starts towork.



Turn the button part of movement machine to OFF, it means LIZARD stops working.



Step 2


Open the mouth of LIZARD and there. is a red rope hook inside to hang the toy.



Step 3

This toy have touching sensor in it, it will start working after the power switch is on. The toy will automatically pause after 15 seconds, any hitting or shaking from you or your pet will trigger the toy again. Turn off the power switch to deactivate the toching sensor.

MAINTENANCE

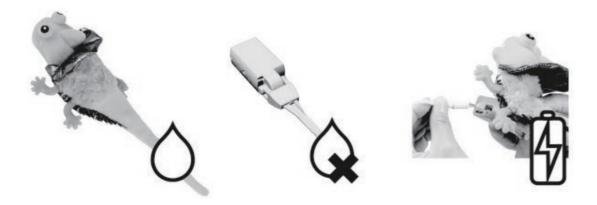

- 1. The plush cover can be washed in water, take out the movement machine before washing the plush cover.
- 2. The movement machine is not water proof, please don't put it into water.
- 3. If this toy will be stored for a long time without using, please fully charge the toy first.

CAUTION

- 1. This appliance has a built-in rechargeable battery. Do not throw into fire or apply heat.
- 2. Do not modify or repair.
- 3. Never disassemble except when disposing of the appliance.
- 4. Do not let the positive and negative terminals of the battery get in contact with each other through metallic objects.
- 5. Do not carry or store the battery together with metallic jewellery such as necklaces and hairpins.
- 6. Never peel off the shell of the battery.

- 7. The battery contains alkaline fluid. If it comes in contact with the eyes, do not rub the eyes. Thoroughly rinse with clean water, such as tap water.
- 8. The battery contains alkaline fluid. If it comes in contact with the skin or clothes, rinse off with clean water, such as tap water.
- 9. After removing the rechargeable battery, do not keep it within reach of children, infants and pets.

IMPORTANT

This toy was designed for cats, please don't give it to dogs or other large pets.

For your pets safety, this toy will not activate during charging, to avoid your pet playing with electric charging cable.

SPECIFICATION

Vibration Switch	SW-18010
Motor	HFF-N20S-09175-24 3.7V
Bat	Lithium battery 200
Material	ABS
Operating	DC 3.7V
Charging hours	2h30min
Single working time	15s
Total working time	45min

SIZING INFORMATION


Plush cover

• 9.6" H (245mm)

• 3.9" W/Aprox. 100mm

• 2.3" D/Aprox. 60mm

• Max. 0.98oz/28g

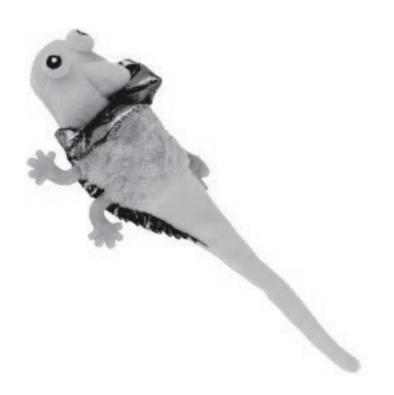

Movement

- 5.5" H (140mm)
- 1.2" W/Aprox. 30mm
- 0.8" D/Aprox. 20mm
- Max. 1.2oz/34g





Documents / Resources



Migipaws Touch Activated Flapping Chirping Lizard Kitten Toy with Catnip [pdf] User Manual

Touch Activated Flapping Chirping Lizard Kitten Toy with Catnip, Touch, Activated Flapping Chirping Lizard Kitten Toy with Catnip, Chirping Lizard Kitten Toy with Catnip, Lizard Kitten Toy with Catnip, Kitten Toy with Catnip, Toy with Catnip

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.